




Acura 3.2TL V6-3.2L SOHC 2001

Water Pump: Service and Repair

Water Pump Replacement

Water Pump Replacement

1. Remove the timing belt.
2. Remove the timing belt tensioner.

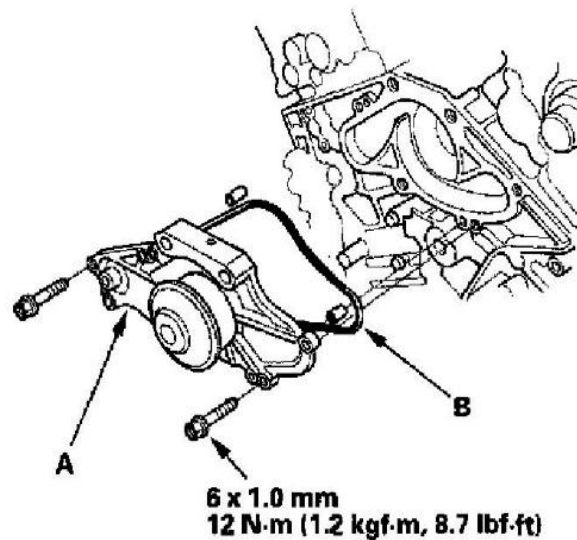


3. Remove the water pump (A) by removing five bolts.
4. Inspect and clean the O-ring groove and mating surface with the cylinder block.
5. Install the water pump with a new O-ring (B) in the reverse order of removal.
6. Clean up any spilled engine coolant.

Water Pump: Service and Repair

Water Pump Inspection

Water Pump Inspection

1. Remove the timing belt.
2. Turn the water pump pulley counterclockwise. Check that it turns freely.

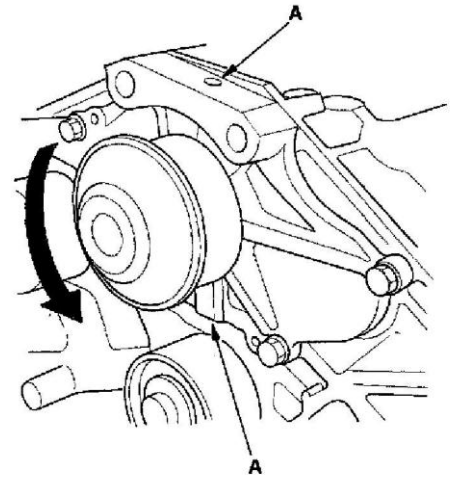

3. Check for signs of seal leakage. A small amount of "weeping" from the bleed hole (A) is normal.