



[PREVIOUS](#)   
[MENU](#)

## INDEX RE4FO2A

### GO TO PAGE

ELECTRICAL COMPONENT LOCATION .....	4
RETRIEVING TROUBLE CODES .....	5
TROUBLE CODE CHECKS .....	10
DIAGNOSTIC PROCEDURES .....	21
WIRING DIAGRAMS .....	38
ELECTRICAL COMPONENT INSPECTION .....	40
LINE PRESSURE TEST .....	48
HYDRAULIC CIRCUIT .....	50
TRANSMISSION DISASSEMBLY .....	54
SUB ASSEMBLY OVERHAUL .....	59
VALVE BODY OVERHAUL .....	63
TRANSMISSION ASSEMBLY .....	85
SPECIFICATIONS AND ADJUSTMENTS .....	95

Automatic Transmission Service Group  
9200 South Dadeland Blvd.  
Suite 720  
Miami, FL 33156  
(305) 661-4161



# INTRODUCTION NISSAN RE4F02A

*Updated  
November, 2003*

The Nissan RE4F02A is a fully automatic, electronically controlled transaxle that features a combination of electronic and mechanical systems to control the upshift and downshift of all forward gears and the apply and release of the torque converter clutch.

This manual provides the procedures necessary to diagnose, service, repair and overhaul this unit.

*We wish to thank Nissan Motor Company  
for the information and illustrations  
that have made this booklet possible.*

No part of any ATSG publication may be reproduced, stored in any retrieval system or transmitted in any form or by any means, including but not limited to electronic, mechanical, photocopying, recording or otherwise, without *written* permission of Automatic Transmission Service Group. This includes all text illustrations, tables and charts.

*The information and part numbers contained in this booklet have  
been carefully compiled from industry sources known for their  
reliability, but ATSG does not guarantee its accuracy.*

*Copyright © ATSG 1993*

**DALE ENGLAND**  
FIELD SERVICE CONSULTANT

**WAYNE COLONNA**  
TECHNICAL SUPERVISOR

**PETER LUBAN**  
TECHNICAL CONSULTANT

**JON GLATSTEIN**  
TECHNICAL CONSULTANT

**JERRY GOTT**  
TECHNICAL CONSULTANT

**GERALD CAMPBELL**  
TECHNICAL CONSULTANT

**JIM DIAL**  
TECHNICAL CONSULTANT

**ED KRUSE**  
TECHNICAL CONSULTANT

**GREGORY LIPNICK**  
TECHNICAL CONSULTANT

**DAVID CHALKER**  
TECHNICAL CONSULTANT

**STANTON ANDERSON**  
TECHNICAL CONSULTANT


**ROLAND ALVAREZ**  
TECHNICAL CONSULTANT

**MIKE SOUZA**  
TECHNICAL CONSULTANT

***AUTOMATIC TRANSMISSION SERVICE GROUP***  
**9200 S. DADELAND BLVD. SUITE 720**  
**MIAMI, FLORIDA 33156**  
**(305) 670-4161**



# Technical Service Information

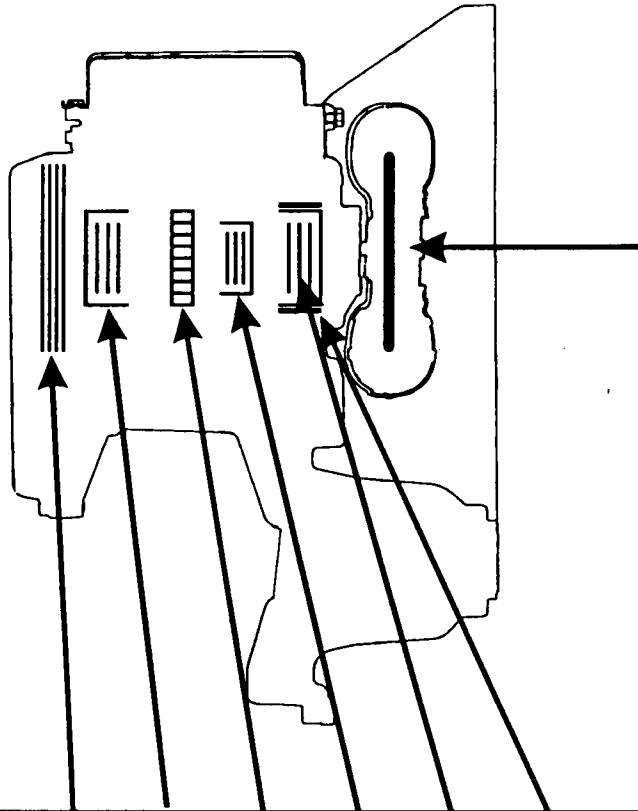


- 1. LOCK-UP OPERATES IN 3rd WHEN O.D. CONTROL SWITCH IS OFF
- 2. LOCK-UP OPERATES IN 4th WHEN O.D. CONTROL SWITCH IS ON

GEAR		LOW/REV CLUTCH	LOW CLUTCH	LOW ROLLER CLUTCH	HIGH CLUTCH	REVERSE CLUTCH	2 - 4 BAND	GEAR RATIO
REVERSE	R	ON				ON		2.272
D	1		ON	ON				2.785
	2		ON				ON	1.545
	3		ON		ON			1.000
	4				ON		ON	0.694
2	1		ON	ON				2.785
	2		ON				ON	1.545
1	1	ON	ON	ON				2.785
	2		ON				ON	1.545

Pin	Description	Wire Color
7	Shift Solenoid B.	Yellow
6	Shift Solenoid A.	Green
8	Overrun Solenoid.	Gray
1	Line Pressure Solenoid.	Red
5	Lock-up Solenoid.	Blue
33	Fluid Temp. Sensor.	White
35	Fluid Temp. Sensor.	Black

PIN SIDE OF 8 TERMINAL CONNECTOR GOING TO THE TRANSMISSION.

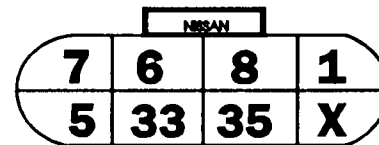

GEAR	SOLENOID A	SOLENOID B	LOCK-UP SOLENOID	OVERRUN SOLENOID	PRESSURE SOLENOID
1st	ON	ON	OFF	ACTIVATES UPON VARIOUS THROTTLE OPENINGS	PULSE MODULATION CONTROLLED BY COMPUTER
2nd	OFF	ON	OFF		
3rd	OFF	OFF	OFF		
4th	ON	OFF	ON		
OHMS	20 - 30	20 - 30	10 - 16	20 - 30	2.5 - 5









## AUTOMATIC TRANSMISSION SERVICE GROUP



# Technical Service Information






## A/T Electrical Parts Location

Located on  
center of  
dash lower panel

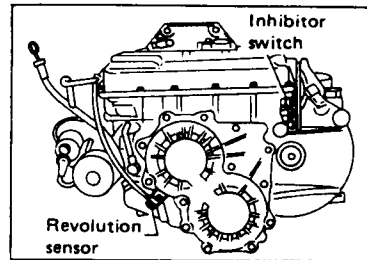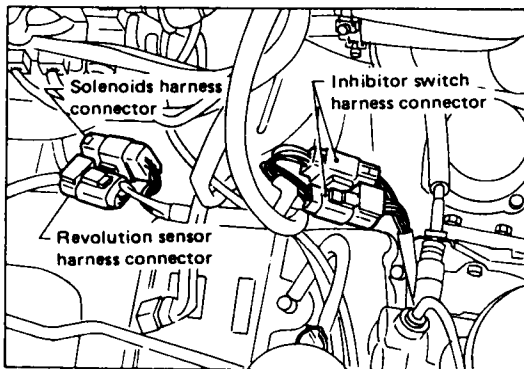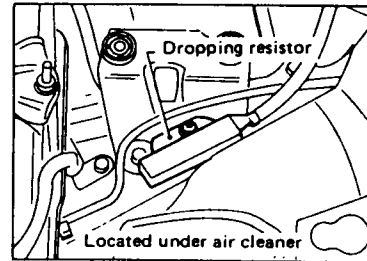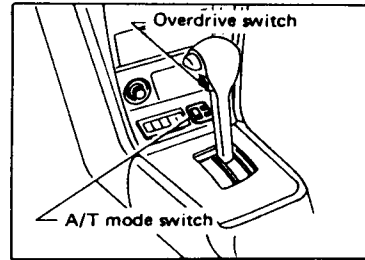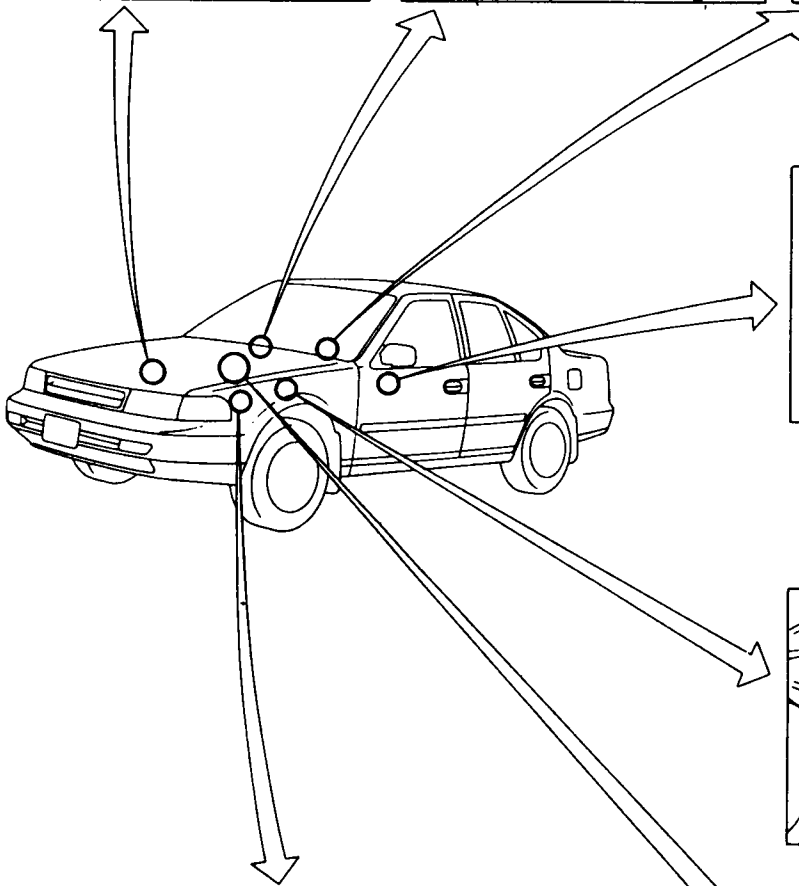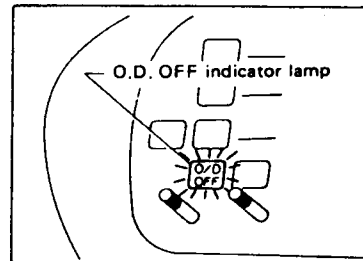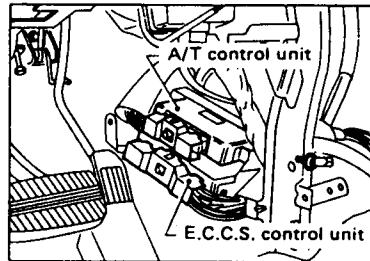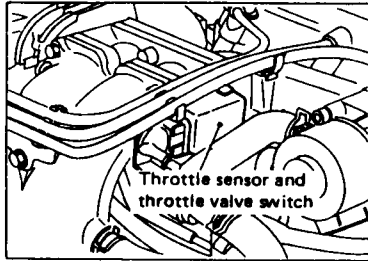


AUTOMATIC TRANSMISSION SERVICE GROUP

## TROUBLE DIAGNOSES

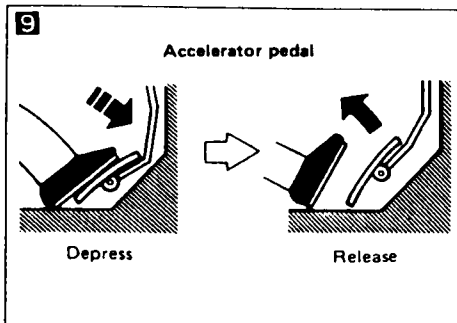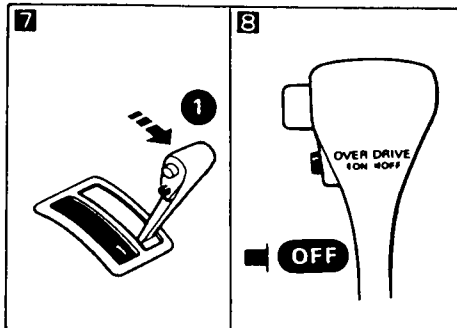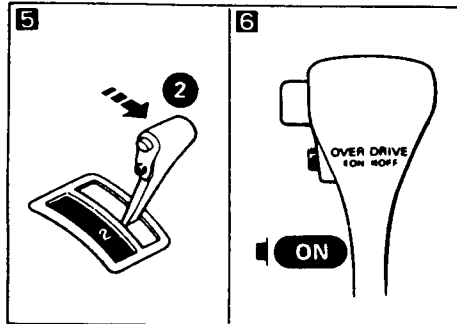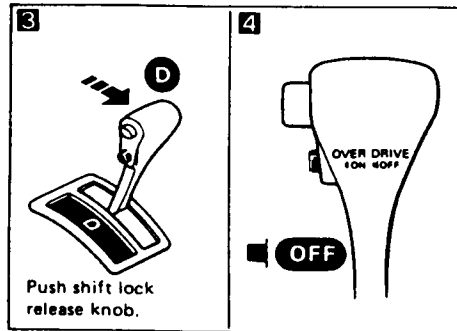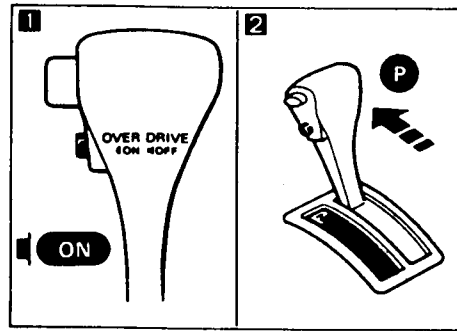

### Self-diagnosis

#### SELF-DIAGNOSTIC PROCEDURE

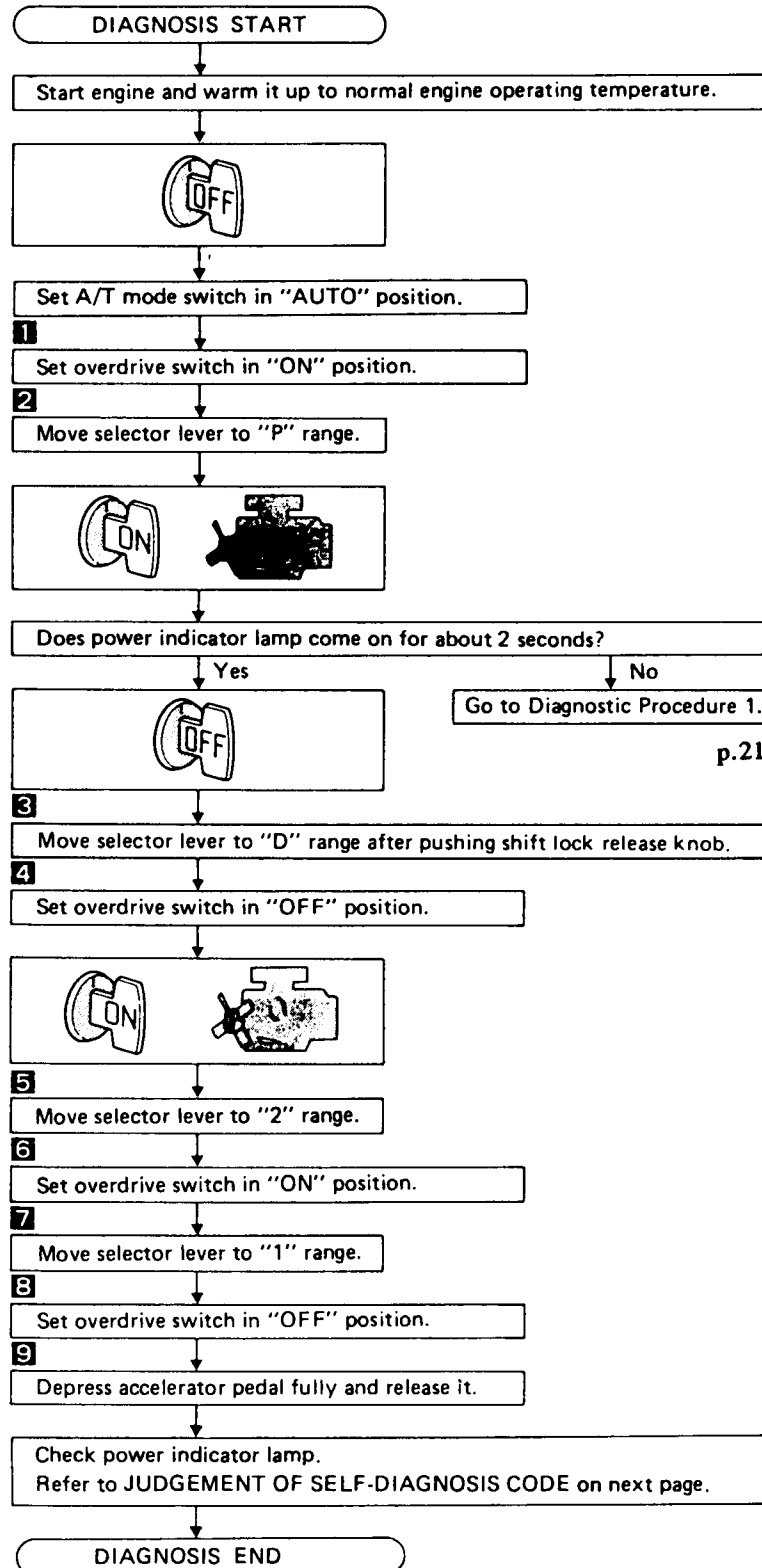

p.21

### Self-diagnosis (Cont'd)









#### JUDGEMENT OF SELF-DIAGNOSIS CODE

Power indicator lamp:	Damaged circuit
<p style="text-align: center;">All judgement flickers are same.</p> <div style="text-align: center;"> </div>	<p>All circuits that can be confirmed by self-diagnosis are O.K.</p>
<p style="text-align: center;">1st judgement flicker is longer than others.</p> <div style="text-align: center;"> </div>	<p>Revolution sensor circuit is short-circuited or disconnected.</p> <div style="text-align: center;"> </div> <p style="text-align: right;">➡ Go to revolution sensor circuit check. <span style="float: right;">p.11</span></p>
<p style="text-align: center;">2nd judgement flicker is longer than others.</p> <div style="text-align: center;"> </div>	<p>Speed sensor circuit is short-circuited or disconnected.</p> <div style="text-align: center;"> </div> <p style="text-align: right;">➡ Go to speed sensor circuit check. <span style="float: right;">p.11</span></p>
<p style="text-align: center;">3rd judgement flicker is longer than others.</p> <div style="text-align: center;"> </div>	<p>Throttle sensor circuit is short-circuited or disconnected.</p> <div style="text-align: center;"> </div> <p style="text-align: right;">➡ Go to throttle sensor circuit check. <span style="float: right;">p.12</span></p>

$t_1 = 2.5$  seconds     $t_2 = 2.0$  seconds     $t_3 = 1.0$  second








## TROUBLE DIAGNOSES

### Self-diagnosis (Cont'd)

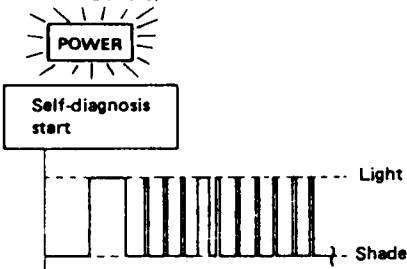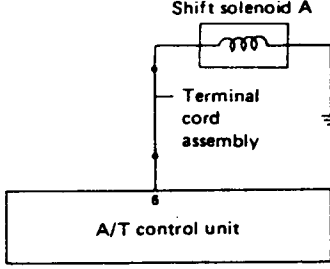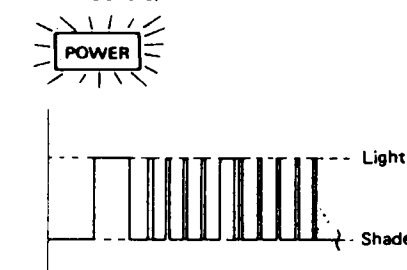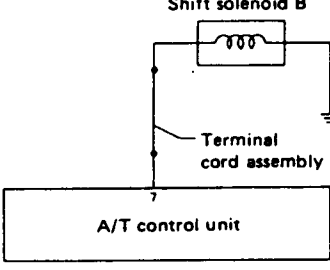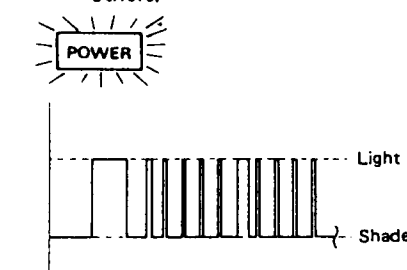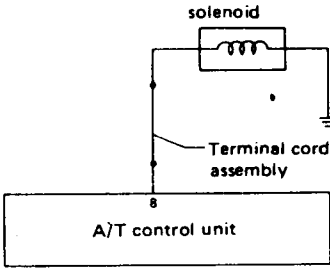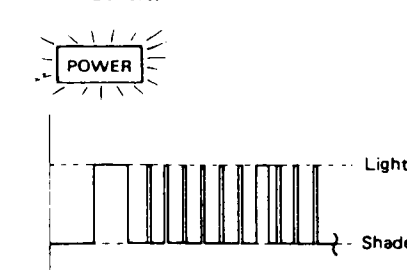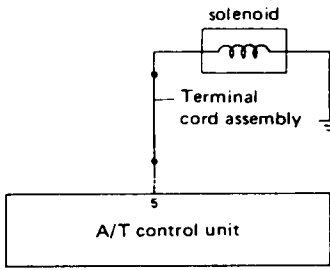Power indicator lamp:	Damaged circuit
<p>4th judgement flicker is longer than others.</p> 	<p>Shift solenoid A circuit is short-circuited or disconnected.</p>  <p>➡ Go to shift solenoid A circuit check. <span style="float: right;">p.13</span></p>
<p>5th judgement flicker is longer than others.</p> 	<p>Shift solenoid B circuit is short-circuited or disconnected.</p>  <p>➡ Go to shift solenoid B circuit check. <span style="float: right;">p.14</span></p>
<p>6th judgement flicker is longer than others.</p> 	<p>Timing solenoid circuit is short-circuited or disconnected.</p>  <p>➡ Go to timing solenoid circuit check. <span style="float: right;">p.15</span></p>
<p>7th judgement flicker is longer than others.</p> 	<p>Lock-up solenoid circuit is short-circuited or disconnected.</p>  <p>➡ Go to lock-up solenoid circuit check. <span style="float: right;">p.16</span></p>

## TROUBLE DIAGNOSES

### Self-diagnosis (Cont'd)

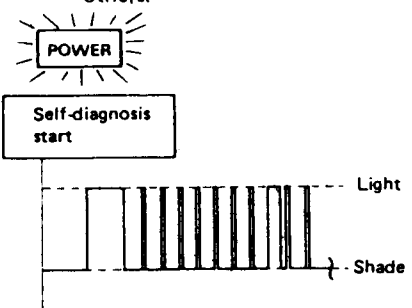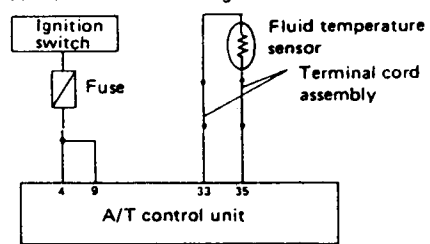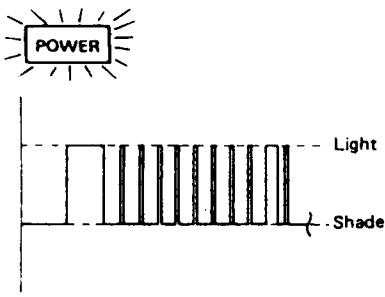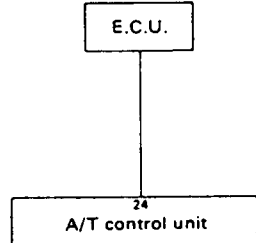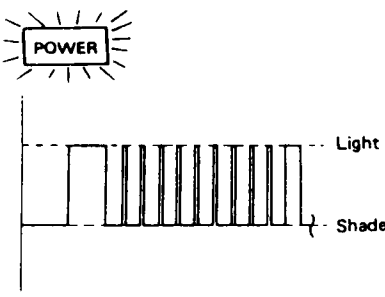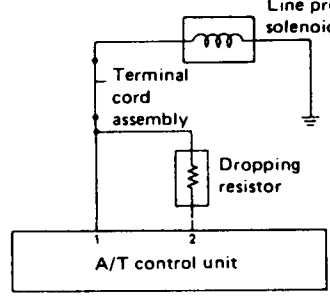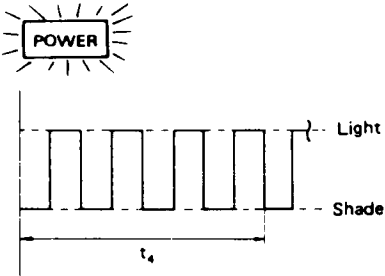
Power indicator lamp:	Damaged circuit
<p>8th judgement flicker is longer than others.</p> 	<p>Fluid temperature sensor is disconnected or A/T control unit power source circuit is damaged.</p>  <p>➡ Go to fluid temperature sensor and A/T control unit power source circuit check. p.17</p>
<p>9th judgement flicker is longer than others.</p> 	<p>Engine revolution signal circuit is short-circuited or disconnected.</p>  <p>➡ Go to engine revolution signal circuit check. p.18</p>
<p>10th judgement flicker is longer than others.</p> 	<p>Line pressure solenoid circuit is short-circuited or disconnected.</p>  <p>➡ Go to line pressure solenoid circuit check. p.18</p>
<p>Flickers as shown below.</p> 	<p>Battery power is low.          Battery has been disconnected for a long time.          Battery is connected conversely.          (When reconnecting A/T control unit connectors. – This is not a problem.)</p>

$t_4 = 1.0$  second



## TROUBLE DIAGNOSES


### Self-diagnosis (Cont'd)

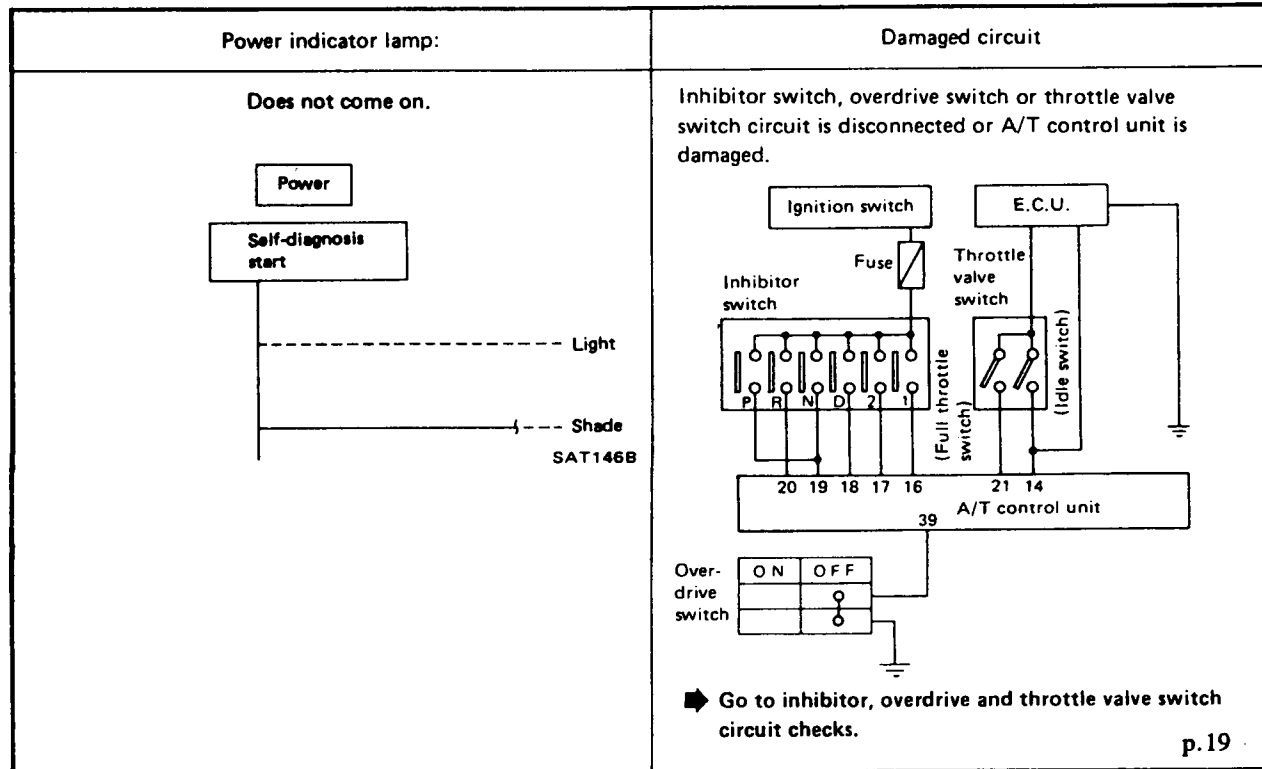

### HOW TO FOLLOW THIS FLOW CHART

#### 1 Work and diagnostic procedure

Start to diagnose a problem using procedures indicated in enclosed blocks, as shown in the following example.

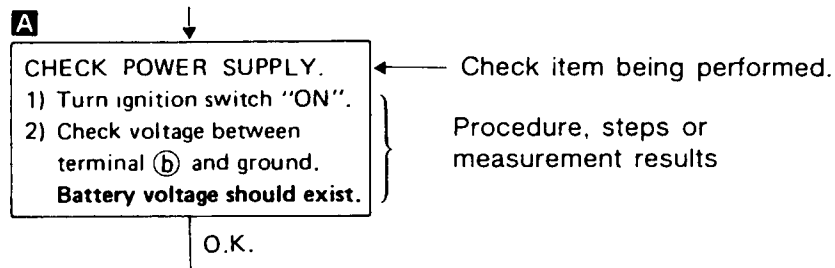

#### 2 Measurement results

Required results are indicated in bold type in the corresponding block, as shown below:

These have the following meanings:

**Battery voltage** → 11 - 14V or approximately 12V

**Voltage: Approximately 0V** → Less than 1V

#### 3 Cross reference of work symbols in the text and illustrations

Illustrations are provided as visual aids for work procedures. For example, symbol **A** indicated in the left upper portion of each illustration corresponds with the symbol in the flow chart for easy identification. More precisely, the procedure under the "CHECK POWER SUPPLY" outlined previously is indicated by an illustration **A**.

## 4 Symbols used in illustrations

Symbols included in illustrations refer to measurements or procedures. Before diagnosing a problem, familiarize yourself with each symbol.

### Direction mark

A direction mark is shown to clarify the side of connector (terminal side or harness side).

Direction marks are mainly used in the illustrations indicating terminal inspection.



: View from terminal side ... T.S.

- All connector symbols shown from the terminal side are enclosed by a single line.




: View from harness side ... H.S.

- All connector symbols shown from the harness side are enclosed by a double line.


### Example

#### View from terminal side

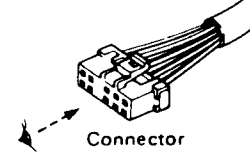

Connector

 Connector symbol




Single line

Direction mark



#### View from harness side

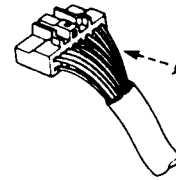


Connector

Connector symbol



Double lines

Direction mark

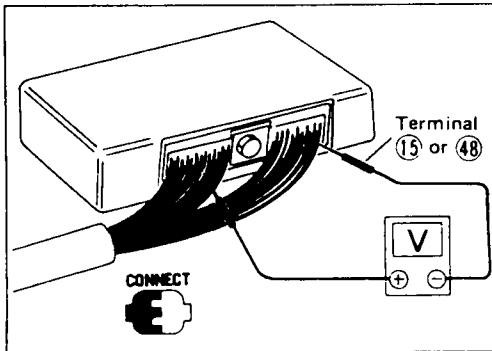

### INSPECTION OF A/T CONTROL UNIT

- Measure voltage between each terminal and terminal ⑮ or ④⑧.





Both terminals are ground.

- Pin connector terminal layout.

1	2	3	4	9	10	11	12	13	14	15		23	24	25	26	27	28	29	30	31	32	33	34	35
5	6	7	8	16	17	18	19	20	21	22		36	37	38	39	40	41	42	43	44	45	46	47	48



## Self-diagnosis (Cont'd) REVOLUTION SENSOR CIRCUIT CHECK

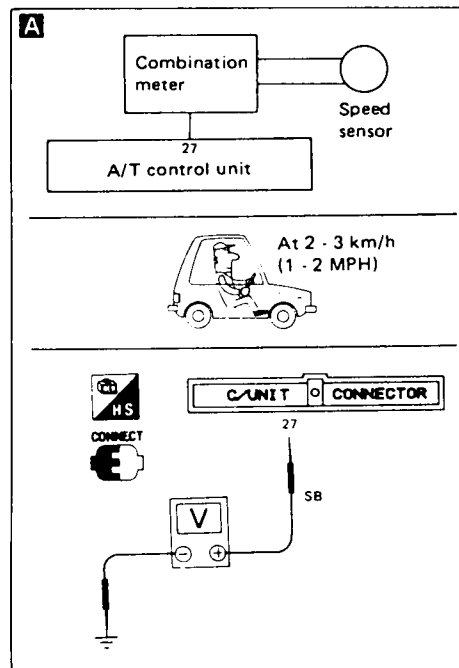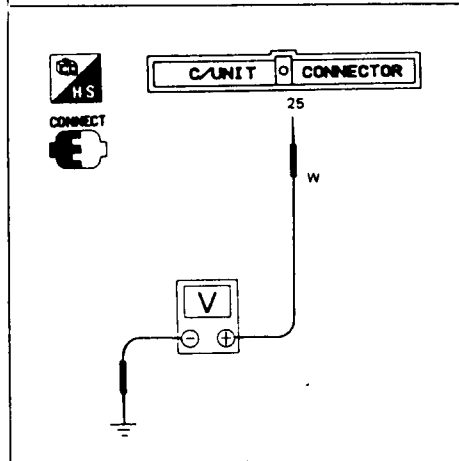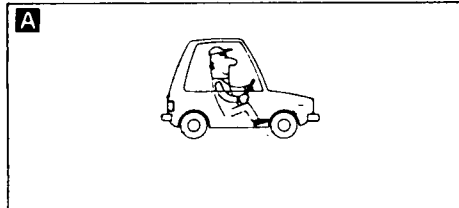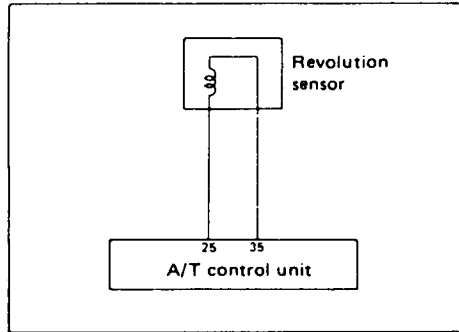

**CHECK REVOLUTION SENSOR.** – Refer to "Electrical Components Inspection", p.44

N.G. → Repair or replace revolution sensor.

**A**  
**CHECK INPUT SIGNAL.**

1. Check voltage between A/T control unit terminal 25 and ground while driving. (Measure with A.C. range.)  
**Voltage:**  
At 0 km/h (0 MPH): 0V  
At 30 km/h (19 MPH): 1V or more  
(Voltage rises gradually in response to vehicle speed.)

N.G. → Check harness continuity between A/T control unit and revolution sensor.

O.K. → Perform self-diagnosis again after driving for a while.

N.G. → 1. Perform A/T control unit input/output signal inspection.  
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.

O.K. → **INSPECTION END**

## SPEED SENSOR CIRCUIT CHECK

**A**  
**CHECK INPUT SIGNAL.**

1. Check voltage between A/T control unit terminal 27 and ground while driving at 2 to 3 km/h (1 to 2 MPH) for 1 m (3 ft) or more.  
**Voltage:** Varies from 0V to 5V

N.G. → Check the following items.

- Speed sensor and ground circuit for speed sensor
- Harness continuity between A/T control unit and speed sensor





O.K. → Perform self-diagnosis again after driving for a while.

N.G. → 1. Perform A/T control unit input/output signal inspection.  
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.

O.K. → **INSPECTION END**




## Self-diagnosis (Cont'd)

### THROTTLE SENSOR CIRCUIT CHECK

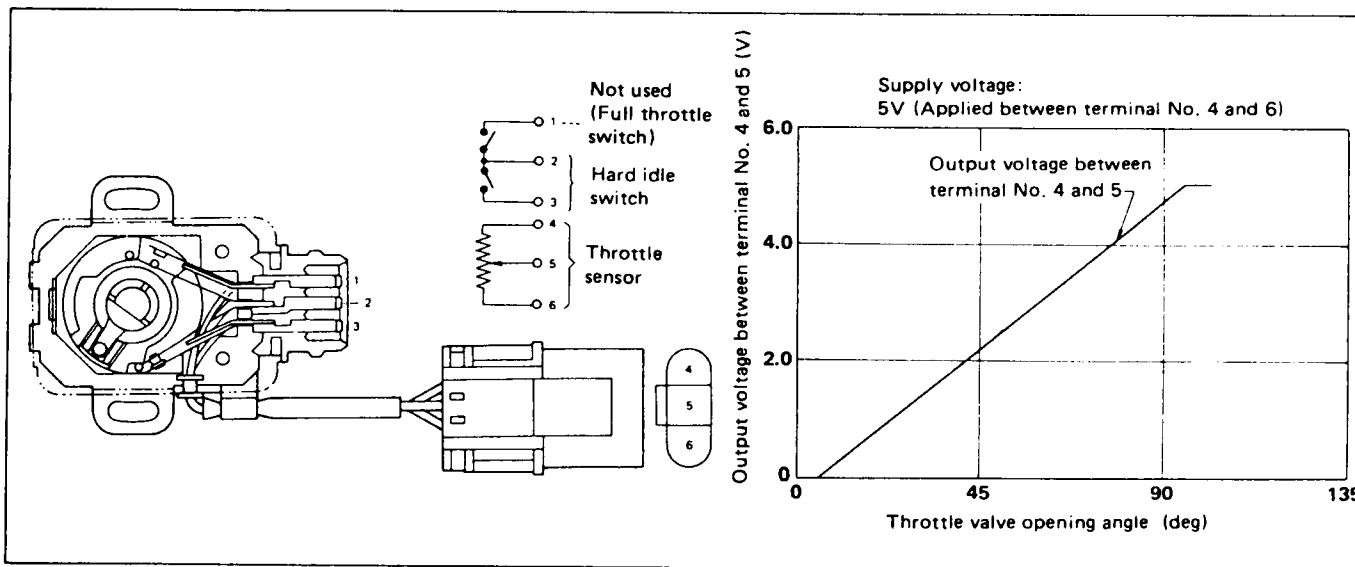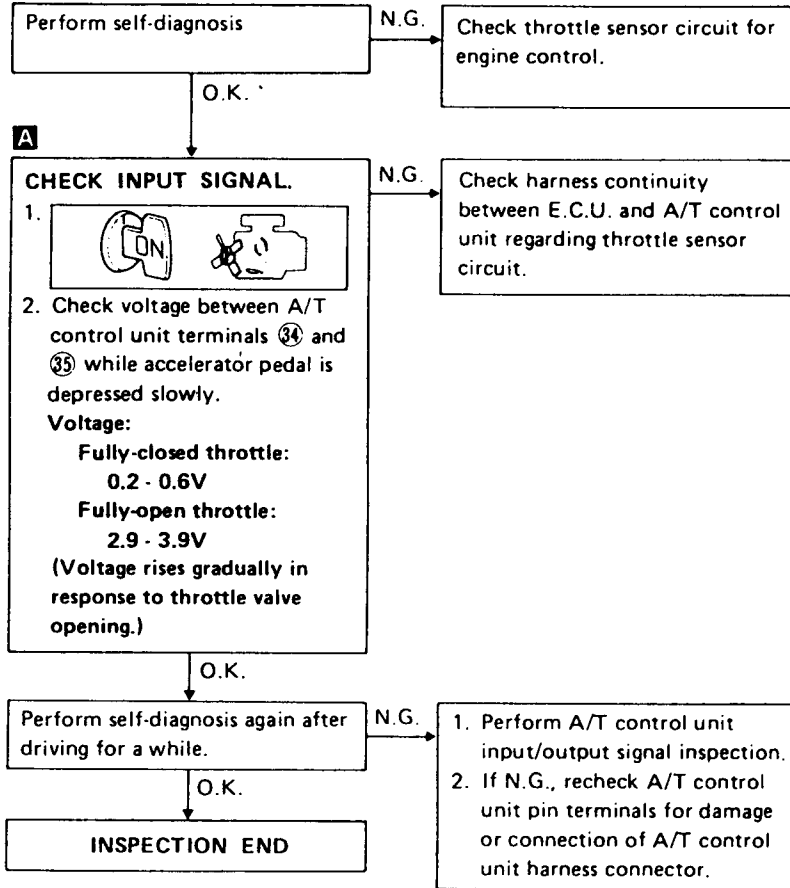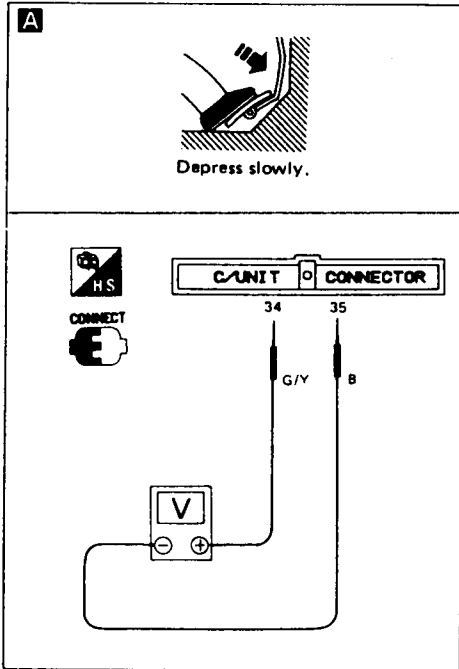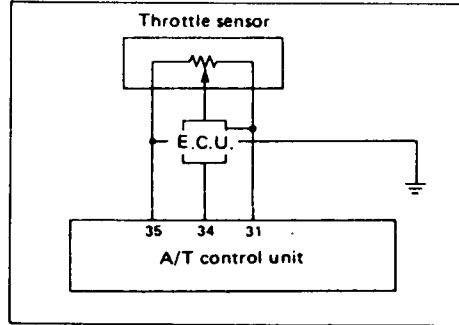

## Self-diagnosis (Cont'd)

### SHIFT SOLENOID A CIRCUIT CHECK

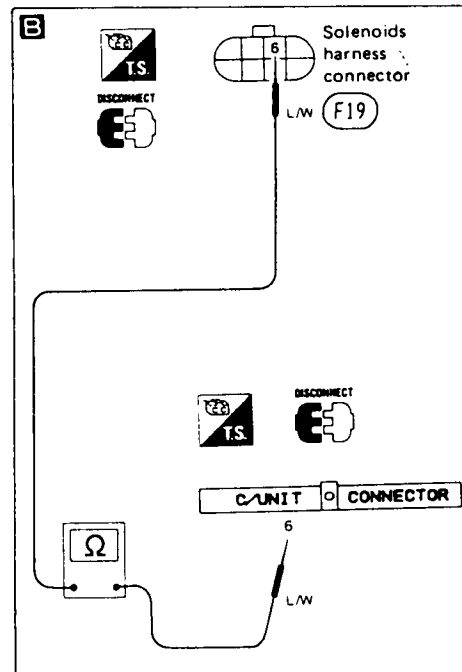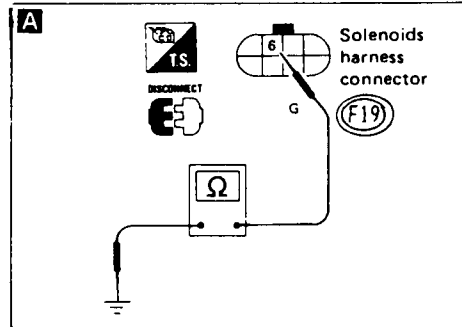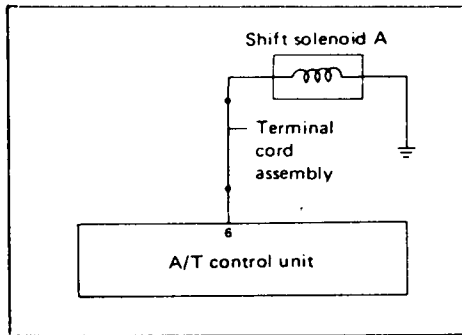

**A**

#### CHECK GROUND CIRCUIT.

- 1.
2. Disconnect terminal cord assembly connector in engine compartment.
3. Check resistance between terminal ⑥ and ground.  
**Resistance: 20 - 40Ω**

N.G.

1. Remove control valve assembly.
2. Check the following items.
  - Shift solenoid A – Refer to "Electrical Components Inspection". p.44
  - Harness continuity of terminal cord assembly

O.K.

**B**

#### CHECK POWER SOURCE CIRCUIT.

- 1.
2. Disconnect A/T control unit connector.
3. Check resistance between terminal ⑥ and A/T control unit terminal ⑥.  
**Resistance: Approximately 0Ω**
4. Reinstall any part removed.

N.G.

- Repair or replace harness between A/T control unit and terminal cord assembly.

O.K.

Perform self-diagnosis after driving for a while.




N.G.

1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.

O.K.

**INSPECTION END**

## Self-diagnosis (Cont'd) SHIFT SOLENOID B CIRCUIT CHECK

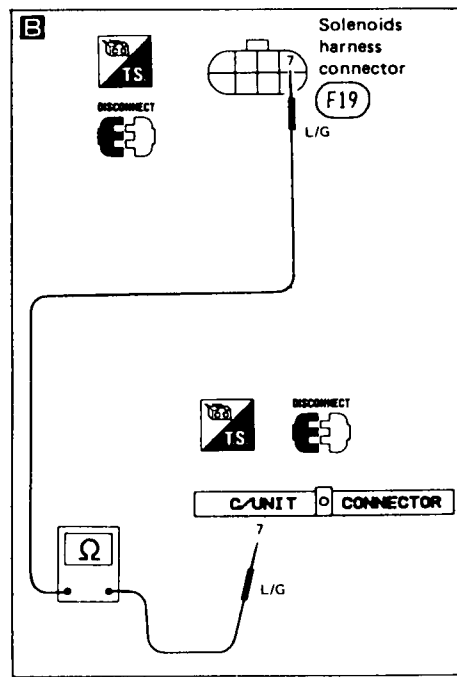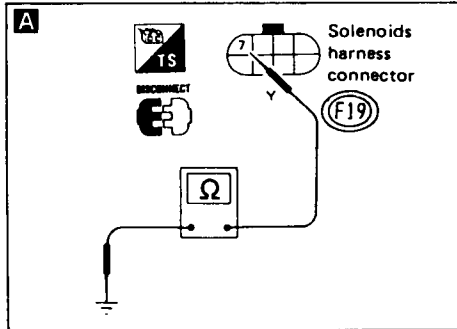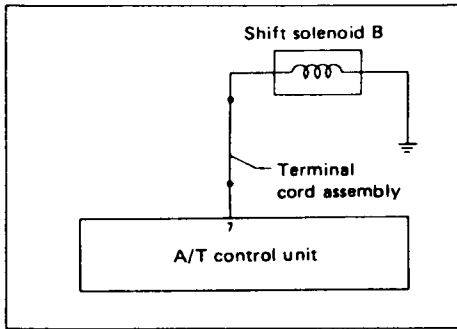

**A**

**CHECK GROUND CIRCUIT.**

- 1.
2. Disconnect terminal cord assembly connector in engine compartment.
3. Check resistance between terminal ⑦ and ground.  
**Resistance: 20 - 40Ω**

N.G.

1. Remove control valve assembly.
2. Check the following items.
  - Shift solenoid B – Refer to "Electrical Components Inspection". p.44
  - Harness continuity of terminal cord assembly

O.K.

**B**

**CHECK POWER SOURCE CIRCUIT.**

- 1.
2. Disconnect A/T control unit connector.
3. Check resistance between terminal ⑦ and A/T control unit terminal ⑦.  
**Resistance: Approximately 0Ω**
4. Reinstall any part removed.

N.G.

Repair or replace harness between A/T control unit and terminal cord assembly.

O.K.

Perform self-diagnosis after driving for a while.

O.K.




**INSPECTION END**

N.G.

1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.

## Self-diagnosis (Cont'd)

### TIMING SOLENOID CIRCUIT CHECK

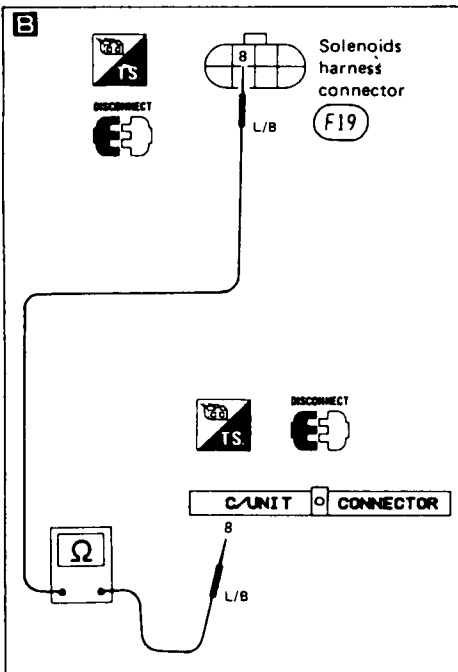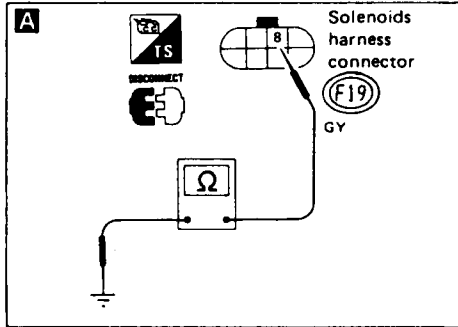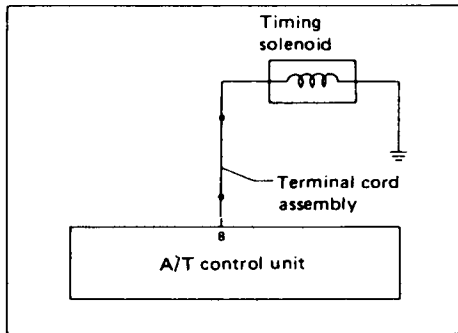

**A**

#### CHECK GROUND CIRCUIT.

1. Disconnect terminal cord assembly connector in engine compartment.
2. Check resistance between terminal ⑧ and ground.  
**Resistance: 20 - 40Ω**

N.G.

1. Remove control valve assembly.
2. Check the following items.
  - Timing solenoid. — Refer to "Electrical Components Inspection". p.44
  - Harness continuity of terminal cord assembly

O.K.

**B**

#### CHECK POWER SOURCE CIRCUIT.

1. Disconnect A/T control unit connector.
2. Check resistance between terminal ⑧ and A/T control unit terminal ⑧.  
**Resistance: Approximately 0Ω**
3. Reinstall any part removed.

N.G.

- Repair or replace harness between A/T control unit and terminal cord assembly.

O.K.

Perform self-diagnosis after driving for a while.

N.G.

1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.

O.K.




**INSPECTION END**



# Technical Service Information

## Self-diagnosis (Cont'd)

### LOCK-UP SOLENOID CIRCUIT CHECK

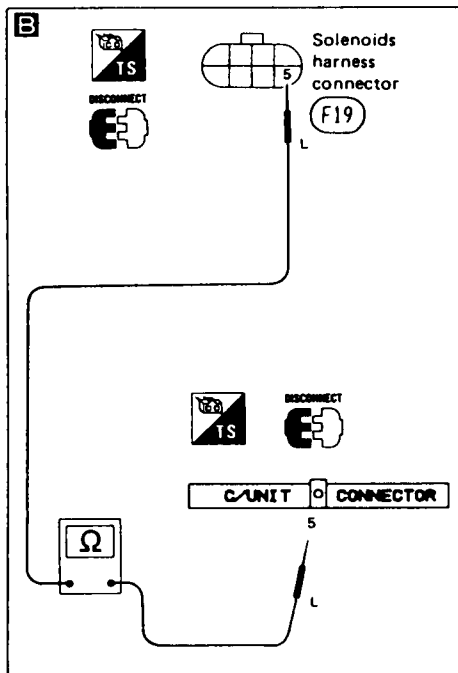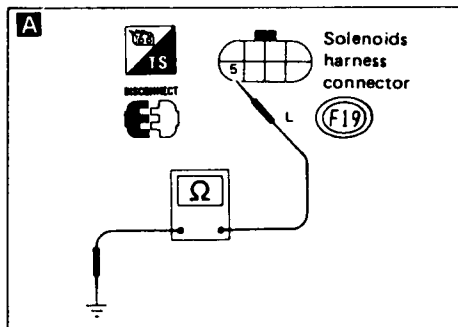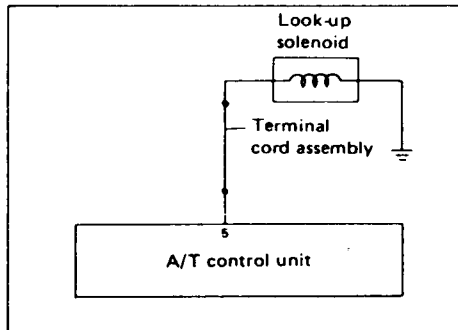

**A**

#### CHECK GROUND CIRCUIT.

- 1.
2. Disconnect terminal cord assembly connector in engine compartment.
3. Check resistance between terminal ⑤ and ground.  
**Resistance: 10 - 20Ω**

N.G.

1. Remove control valve assembly.
2. Check the following items.
  - Lock-up solenoid – Refer to "Electrical Components Inspection", p.44
  - Harness continuity of terminal cord assembly.

O.K.

**B**

#### CHECK POWER SOURCE CIRCUIT.

- 1.
2. Disconnect A/T control unit connector.
3. Check resistance between terminal ⑤ and A/T control unit terminal ⑤.  
**Resistance: Approximately 0Ω**
4. Reinstall any part removed.

N.G.

1. Repair or replace harness between A/T control unit and terminal cord assembly.

O.K.

Perform self-diagnosis after driving for a while.

N.G.

1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.






O.K.

**INSPECTION END**



## Self-diagnosis (Cont'd)

### FLUID TEMPERATURE SENSOR CIRCUIT AND A/T CONTROL UNIT POWER SOURCE CIRCUIT CHECKS

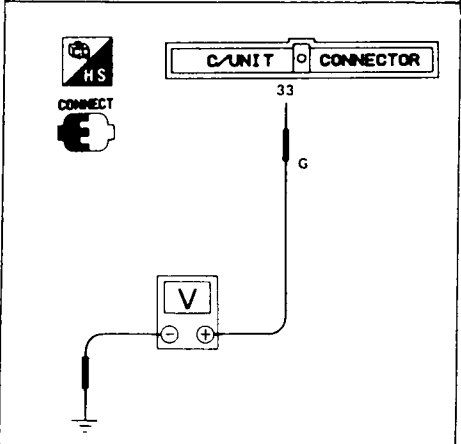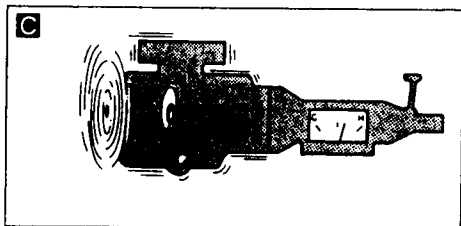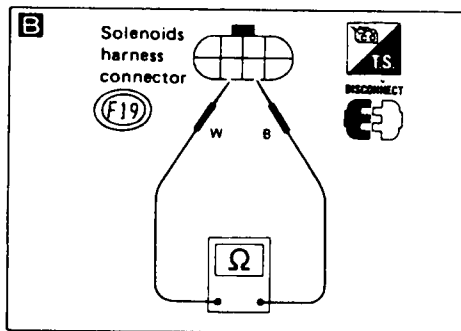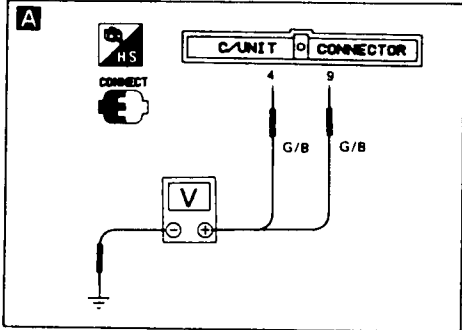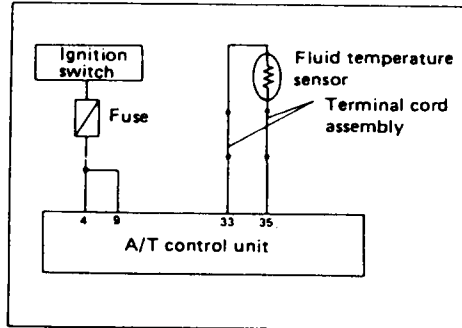

**A**

**CHECK A/T CONTROL UNIT POWER SOURCE.**

- 
- Check voltage between A/T control unit terminals ④, ⑨ and ground.  
Battery voltage should exist.

N.G. → Check the following items.

- Harness continuity between ignition switch and A/T control unit
- Ignition switch and fuse

**B**

**CHECK FLUID TEMPERATURE SENSOR WITH TERMINAL CORD ASSEMBLY**

- 
- Disconnect terminal cord assembly connector in engine compartment.
- Check resistance between terminals ③③ and ③⑤ when A/T is cold.  
Resistance:  
Cold [20°C (68°F)]  
Approximately 2.5 kΩ
- Reinstall any part removed.

N.G. →

1. Remove control valve cover.
2. Check the following items.
  - Fluid temperature sensor – Refer to "Electrical Components Inspection", p.44
  - Harness continuity of terminal cord assembly

**C**

**CHECK INPUT SIGNAL OF FLUID TEMPERATURE SENSOR.**

- 
- Check voltage between A/T control unit terminal ③③ and ground while warming up A/T.  
Voltage:  
Cold [20°C (68°F)] →  
Hot [80°C (176°F)] :  
1.56V → 0.45V

N.G. → Check harness continuity between A/T control unit and terminal cord assembly.

Perform self-diagnosis after driving for a while.



O.K. → **INSPECTION END**

N.G. →

1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.

## Self-diagnosis (Cont'd)

### ENGINE REVOLUTION SIGNAL CIRCUIT CHECK

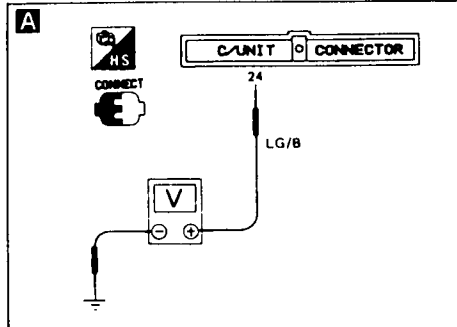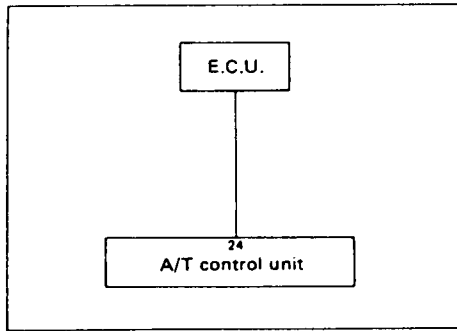

Perform self-diagnosis  
Check ignition signal circuit condition.

N.G. → Check ignition signal circuit for engine control.

O.K. →

**A**

**CHECK INPUT SIGNAL.**

1. Check voltage between A/T control unit terminal ② and ground.  
**Voltage: 0.9 - 4.5V**

N.G. → Check harness continuity between A/T control unit and E.C.U.

O.K. →



Perform self-diagnosis again after driving for a while.

N.G. →

1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.

O.K. →

**INSPECTION END**

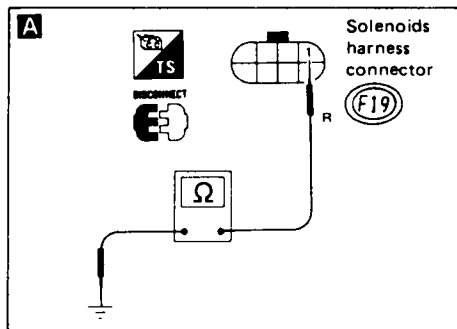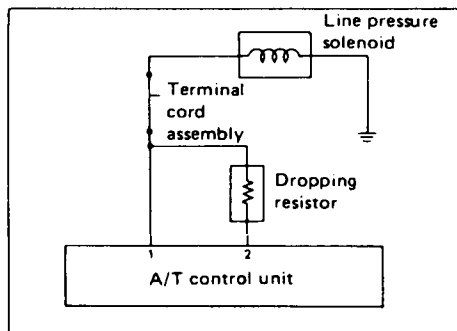

### LINE PRESSURE SOLENOID CIRCUIT CHECK

**A**

**CHECK GROUND CIRCUIT.**

1. Disconnect terminal cord assembly connector in engine compartment.
2. Check resistance between terminal ① and ground.  
**Resistance: 2.5 - 5Ω**

N.G. →

1. Remove control valve assembly.
2. Check the following items.
  - Line pressure solenoid – Refer to "Electrical Components Inspection". p.44
  - Harness continuity of terminal cord assembly

O.K. →

**B**

**CHECK POWER SOURCE CIRCUIT.**

1. Disconnect A/T control unit connector.
2. Check resistance between terminal ① and A/T control unit terminal ②.  
**Resistance: 11.2 - 12.8Ω**




N.G. →

Check the following items.



- Dropping resistor – Refer to "Electrical Components Inspection". p.44
- Harness continuity between A/T control unit ② and terminal cord assembly



O.K. →

**A**

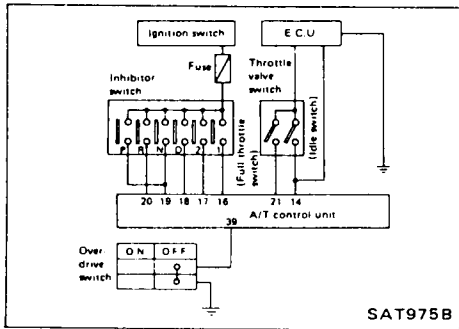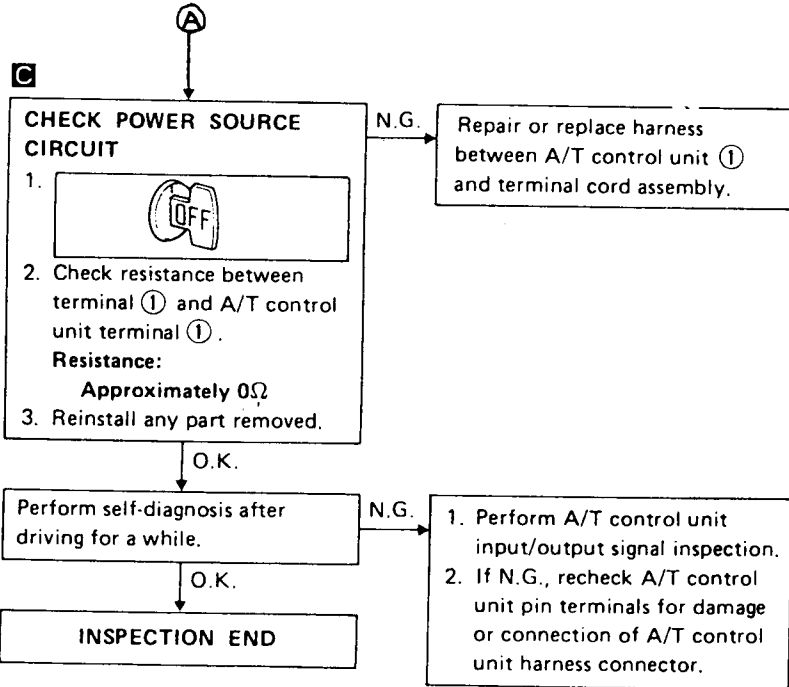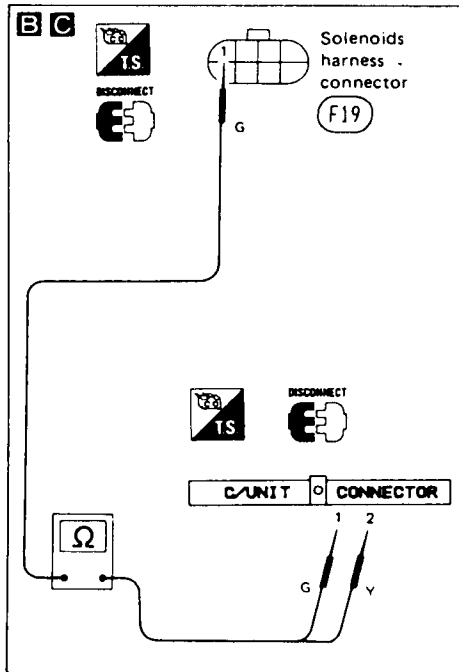

### INHIBITOR, OVERDRIVE AND THROTTLE VALVE SWITCH CIRCUIT CHECKS

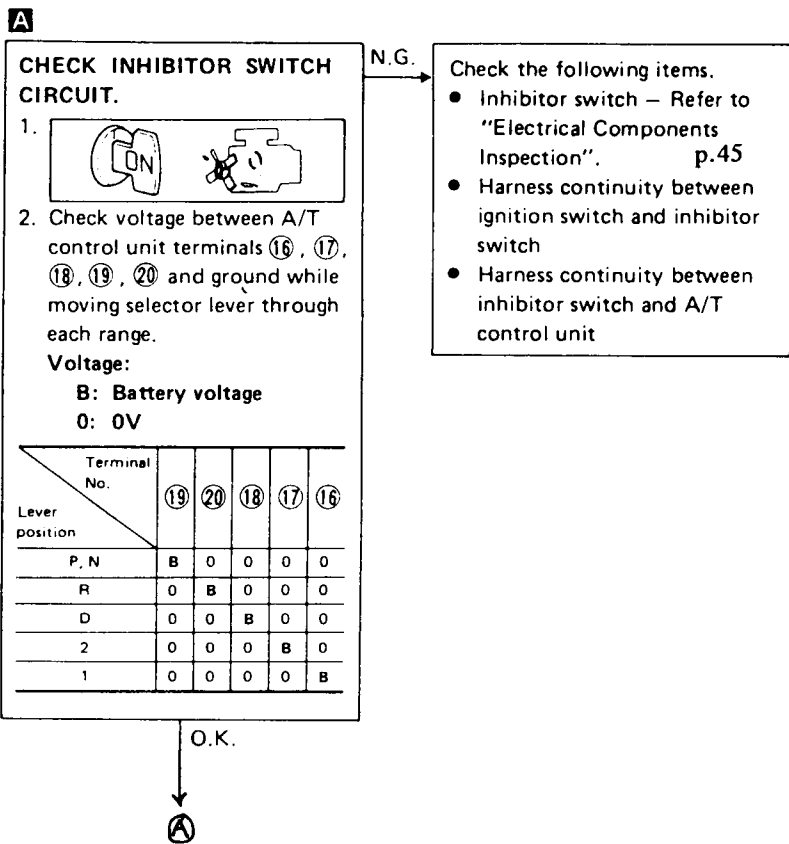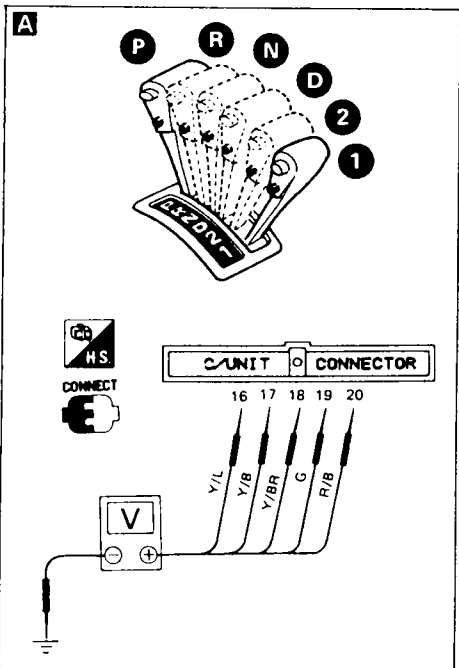

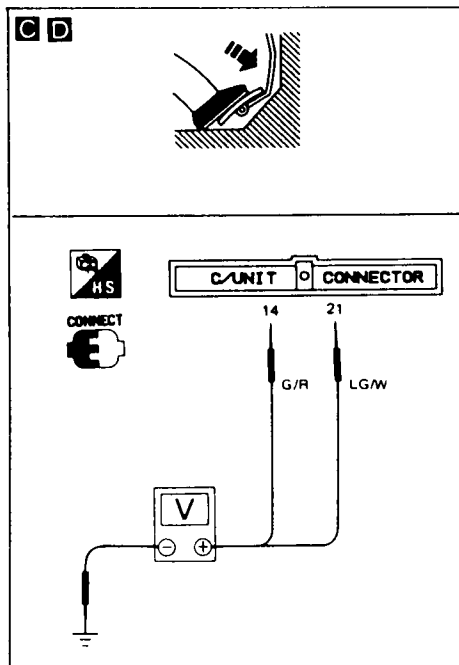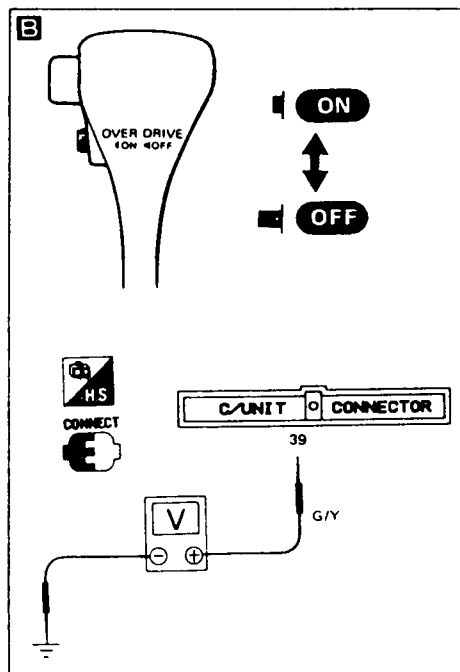

**E**

**CHECK OVERDRIVE SWITCH CIRCUIT.**

- 
- Check voltage between A/T control unit terminal ③ and ground when overdrive switch is in "ON" position and in "OFF" position.

Switch position	Voltage
ON	Battery voltage
OFF	1V or less

- N.G.
- Check the following items.
- Overdrive switch – Refer to "Electrical Components Inspection". p.46
  - Harness continuity between A/T control unit and overdrive switch
  - Harness continuity of ground circuit for overdrive switch

**C**

**CHECK IDLE SWITCH CIRCUIT.**

- 
- Check voltage between A/T control unit terminal ④ and ground while depressing accelerator pedal slowly.  
Voltage:  
When releasing accelerator pedal: 8 - 15V  
When depressing accelerator pedal fully: 1V or less

- N.G.
- Perform self-diagnosis
- Check idle switch circuit.
- O.K.
- N.G.
- Check harness continuity between A/T control unit and idle switch.
- Check idle switch circuit for engine control.

**D**

**CHECK FULL THROTTLE SWITCH CIRCUIT.**

- Check voltage between A/T control unit terminal ② and ground in the same way as idle switch circuit.  
Voltage:  
When releasing accelerator pedal: 1V or less  
When depressing accelerator pedal fully: 8 - 15V





- N.G.
- Check harness continuity between A/T control unit and full throttle switch.

Perform self-diagnosis again after driving for a while.

O.K.

**INSPECTION END**


- N.G.
1. Perform A/T control unit input/output signal inspection.
  2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.

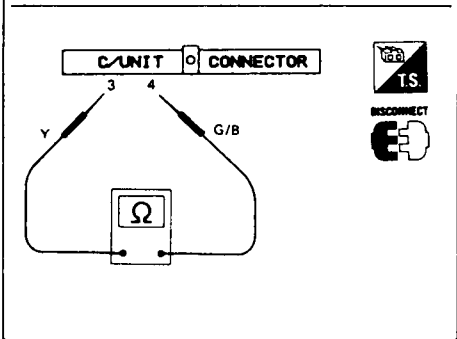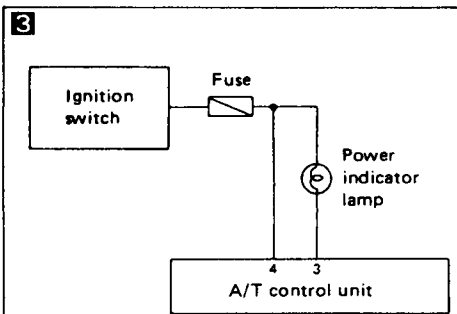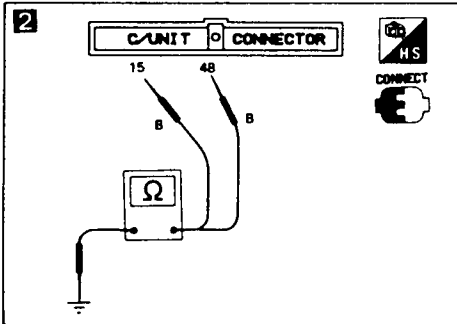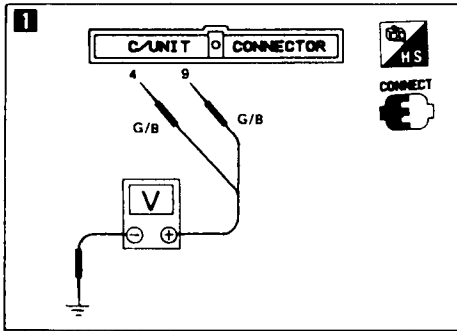


## Diagnostic Procedure 1

### SYMPTOM:

Power indicator lamp does not come on for about 2 seconds when turning ignition switch to "ON".


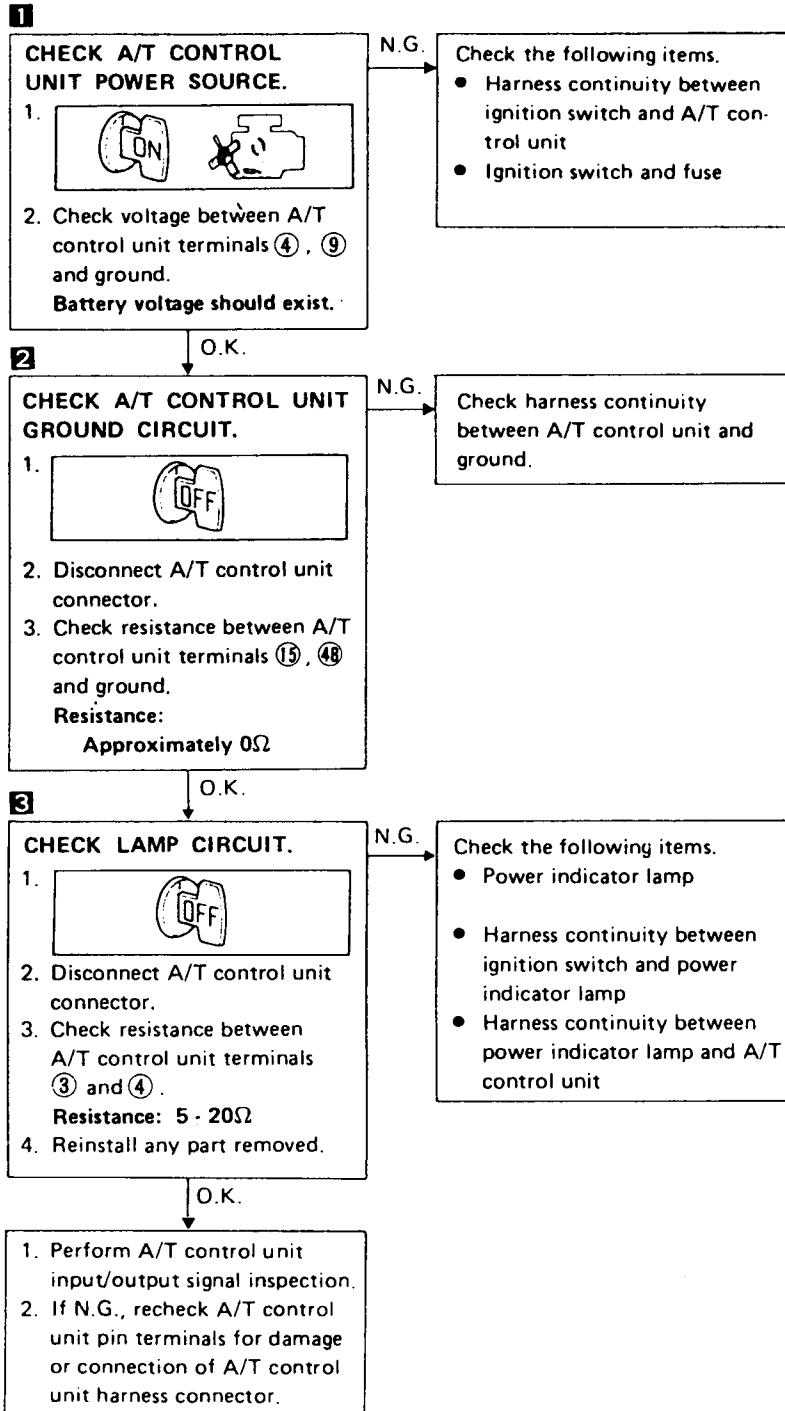


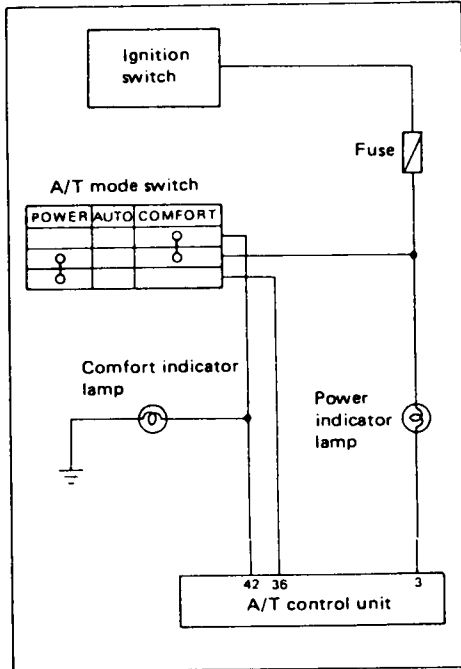

## Diagnostic Procedure 2

### SYMPTOM:



Power indicator lamp or comfort indicator lamp does not come on when turning A/T mode switch to the appropriate position.

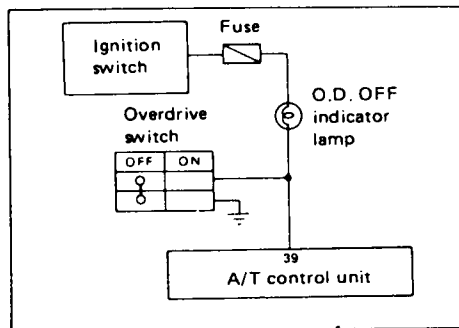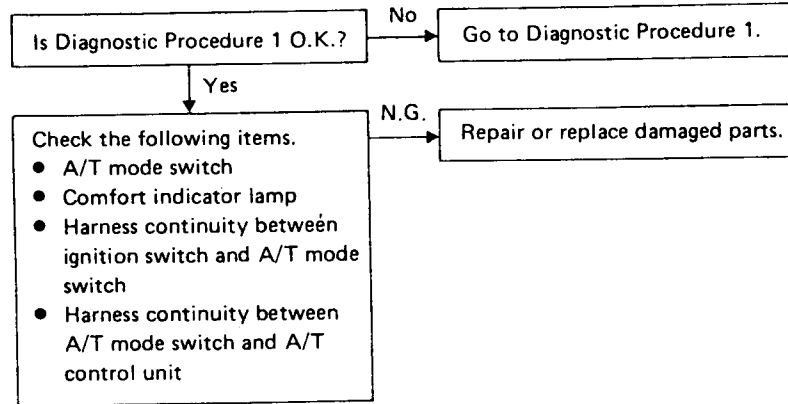

## Diagnostic Procedure 3

### SYMPTOM:



O.D. OFF indicator lamp does not come on when setting overdrive switch to "OFF" position.




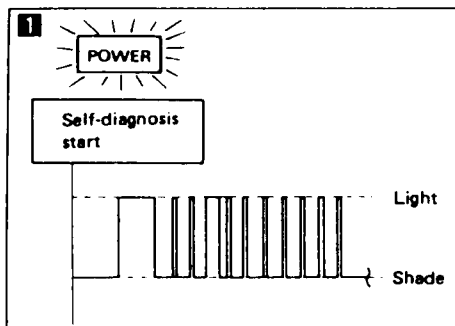
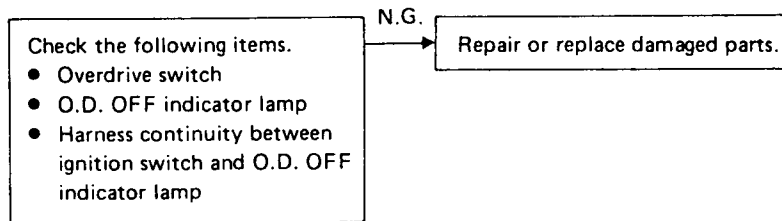


## Diagnostic Procedure 4

### SYMPTOM:

Power indicator lamp does not come on for about 3 seconds when depressing and releasing accelerator pedal fully.

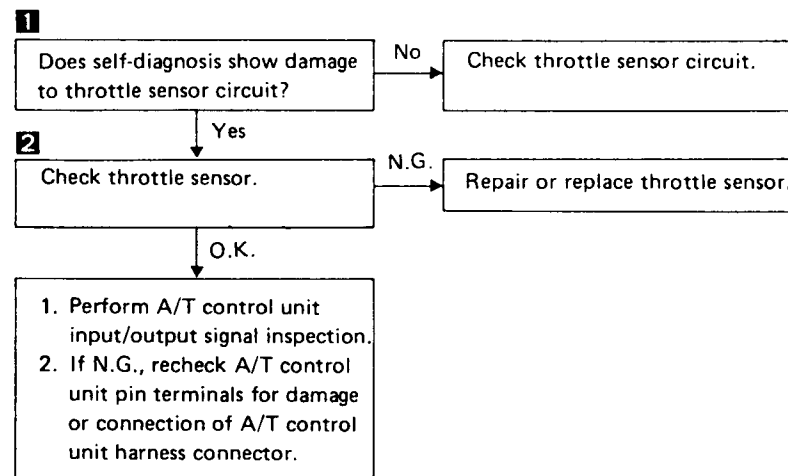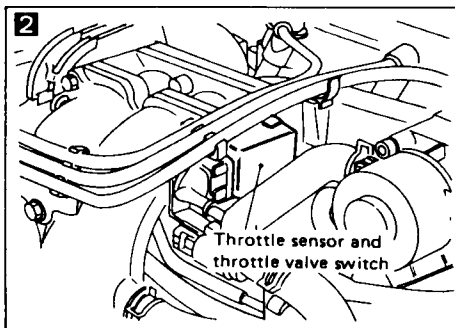


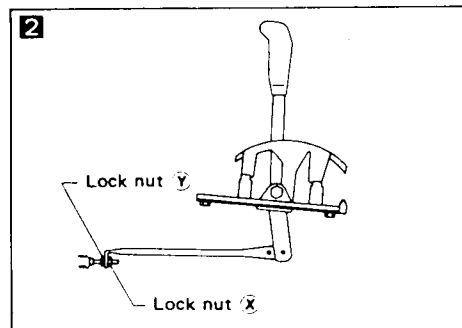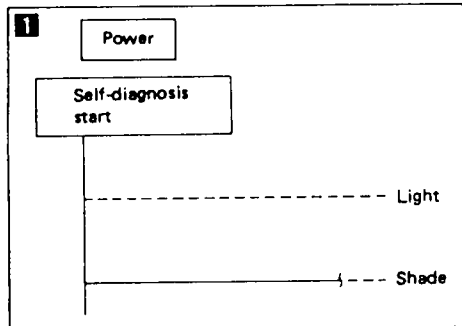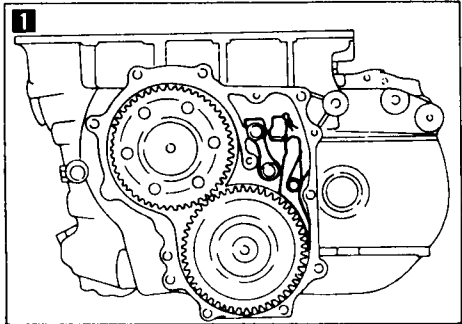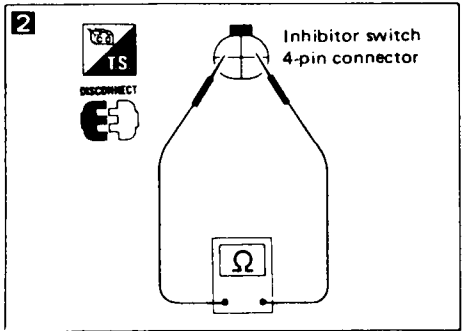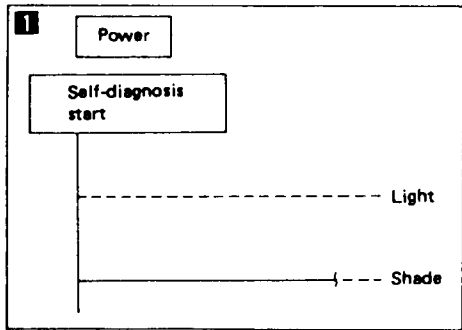

## Diagnostic Procedure 5

### SYMPTOM:


Engine cannot be started with selector lever in "P" or "N" range or engine can be started with selector lever in "D", "2", "1" or "R" range.

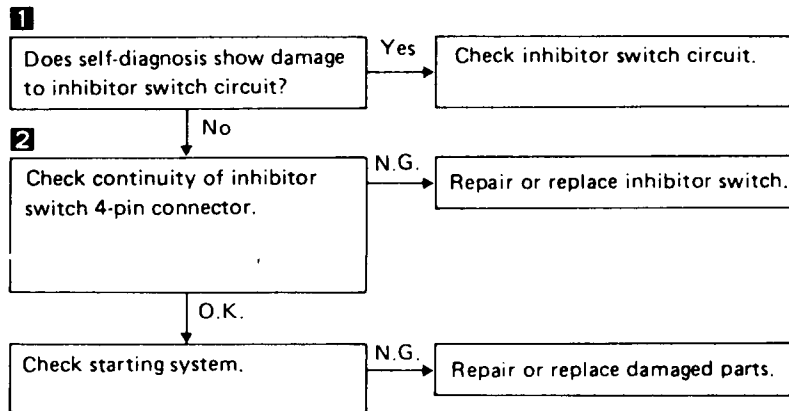

## Diagnostic Procedure 6

### SYMPTOM:

 
Vehicle moves when it is pushed forward or backward with selector lever in "P" range.







## Diagnostic Procedure 7

### SYMPTOM:

Vehicle moves forward or backward when selecting "N" range.

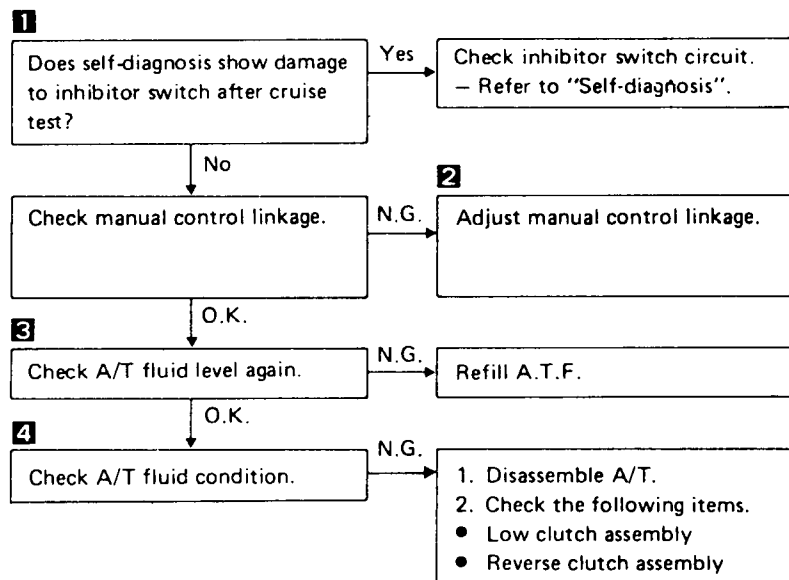


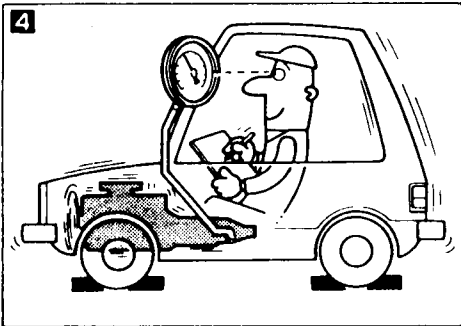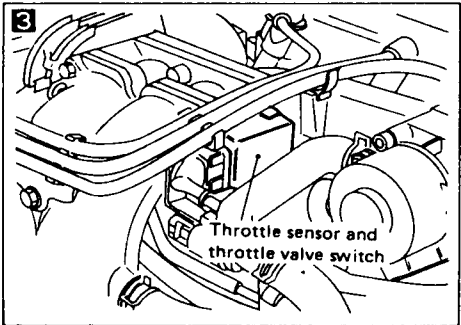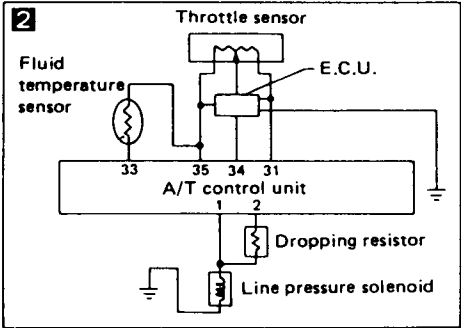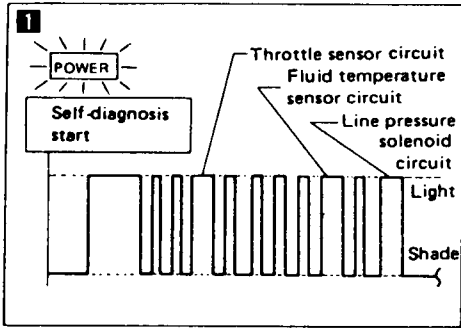



## Diagnostic Procedure 8

### SYMPTOM:

There is large shock when changing from "N" to "R" range.

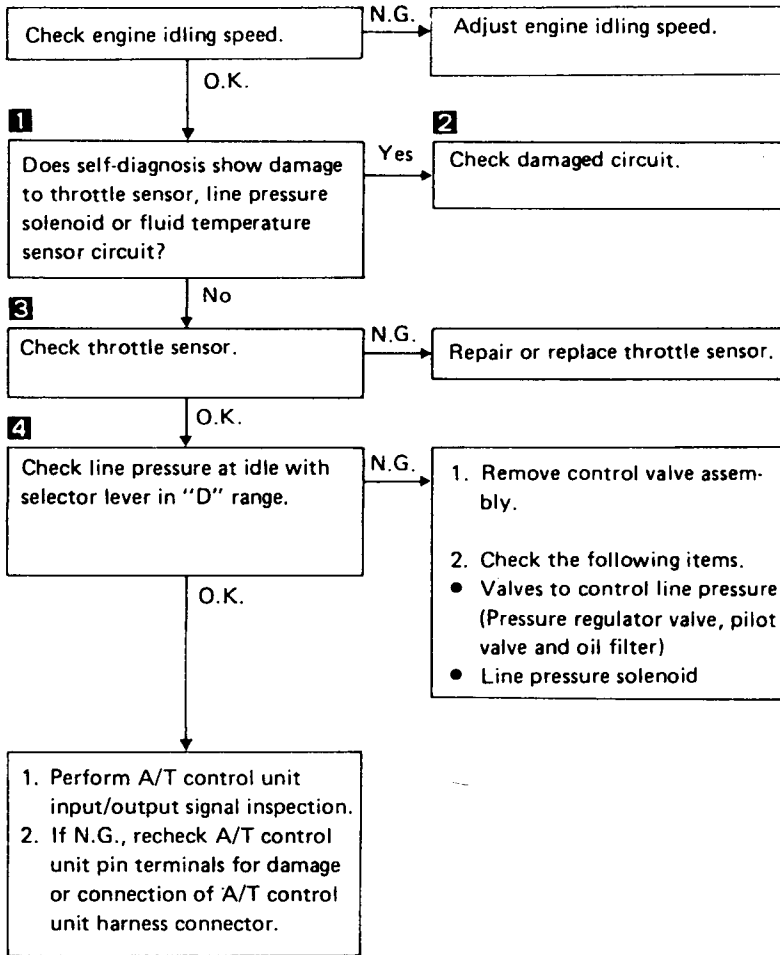




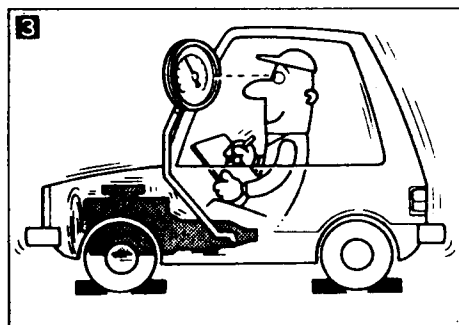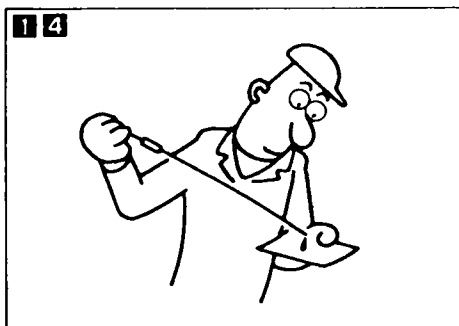

## Diagnostic Procedure 9

### SYMPTOM:





Vehicle does not creep backward when selecting "R" range.

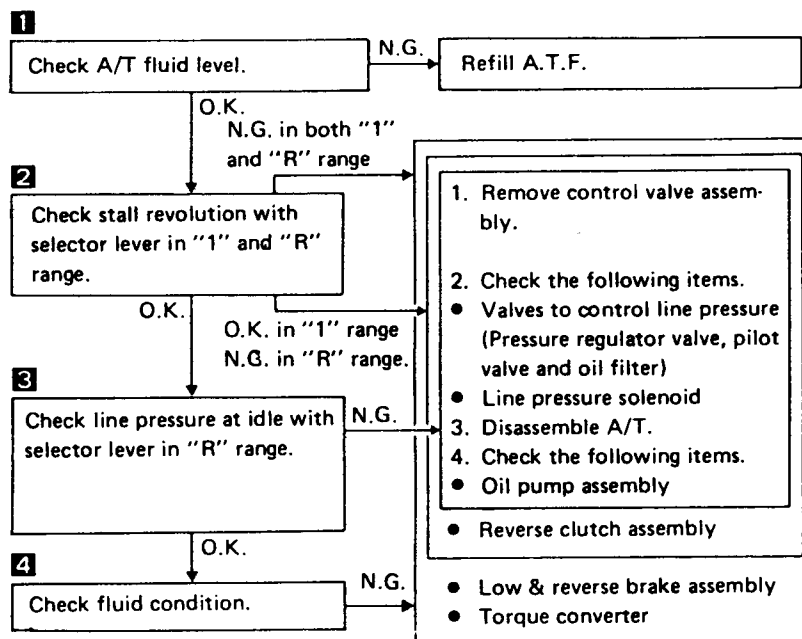

## Diagnostic Procedure 10

### SYMPTOM:






Vehicle does not creep forward when selecting "D", "2" or "1" range.

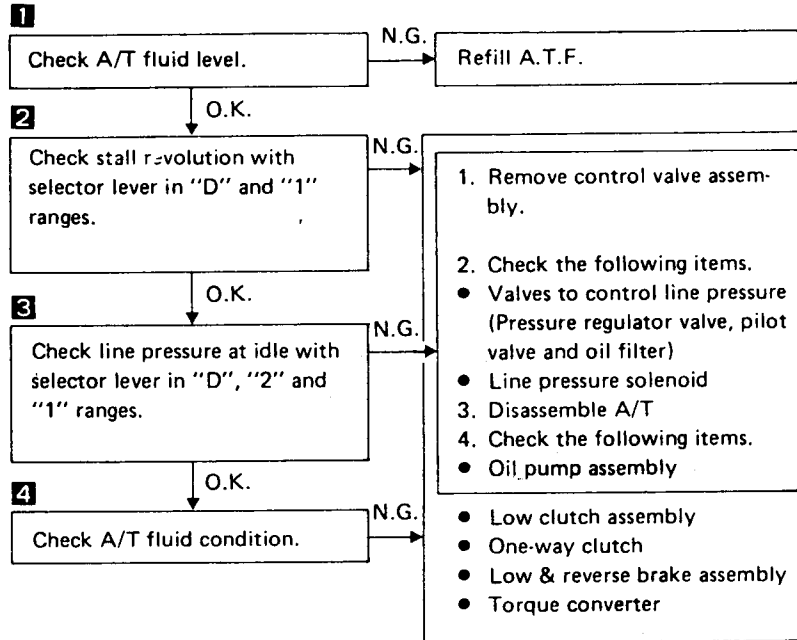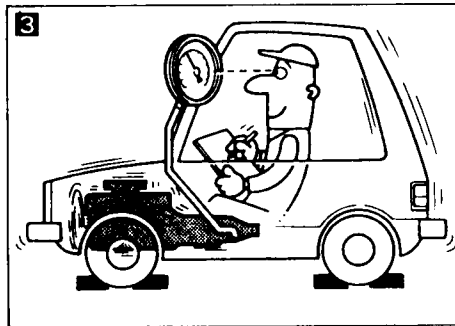
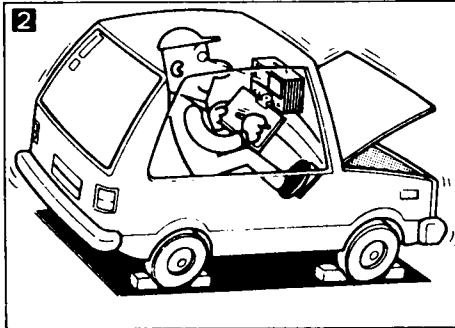
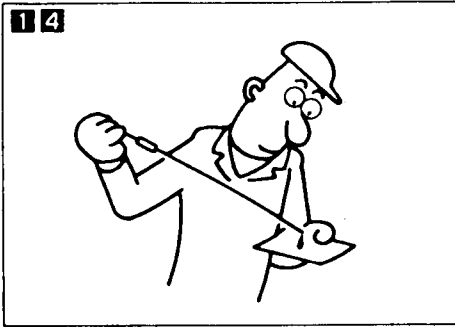


## Diagnostic Procedure 11

### SYMPTOM:

Vehicle cannot be started from D<sub>1</sub>.

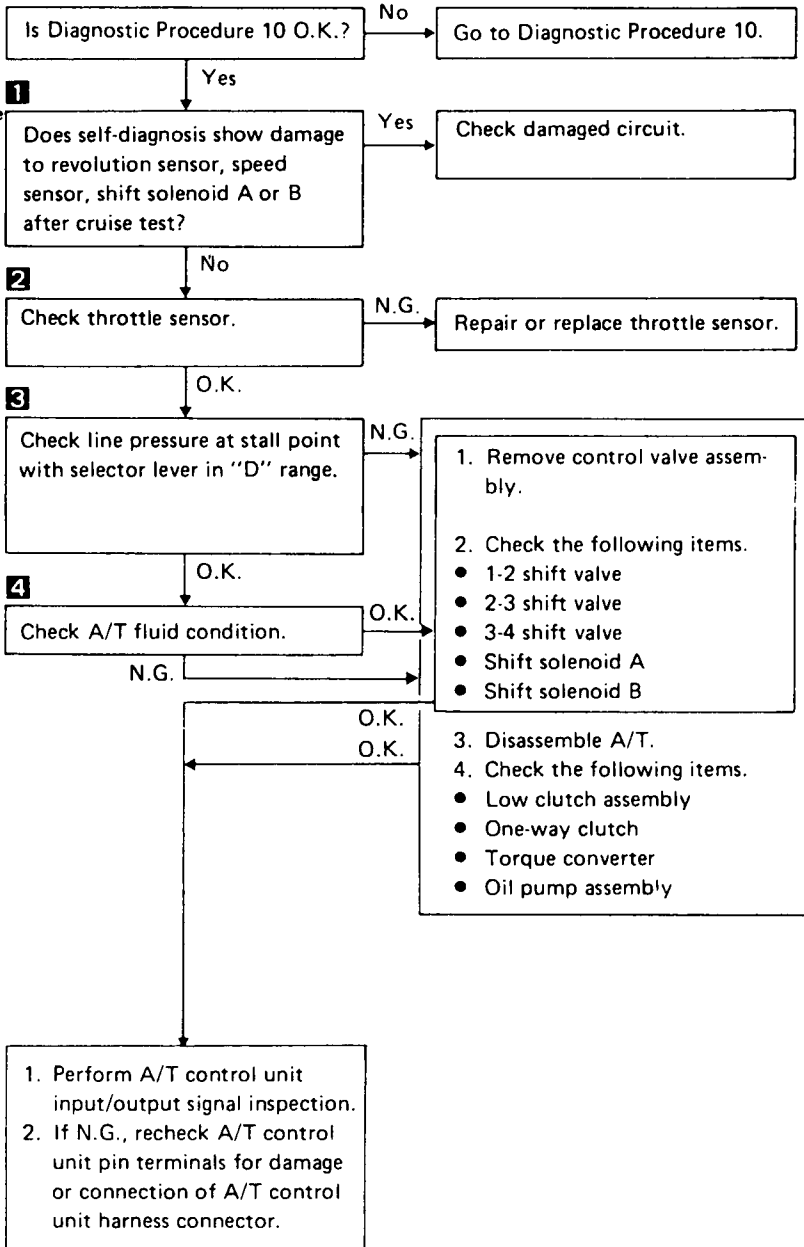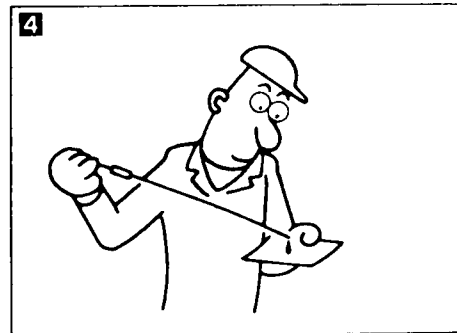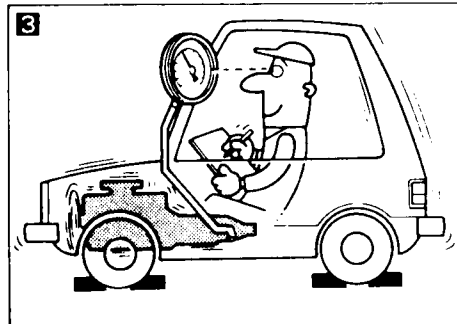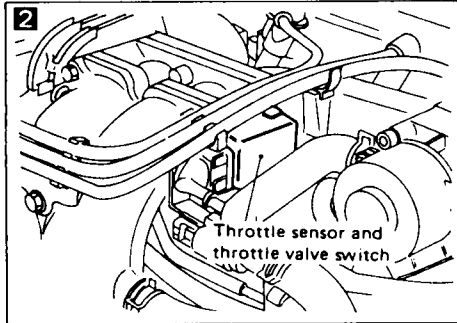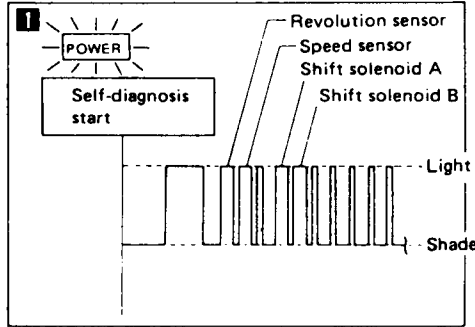


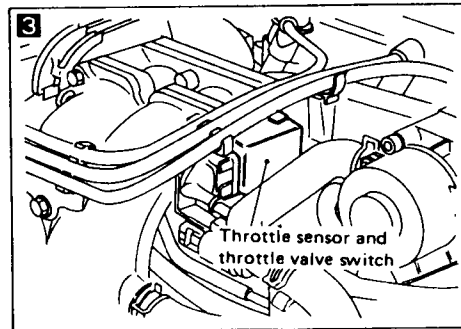
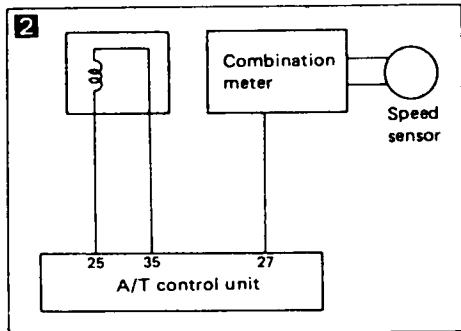
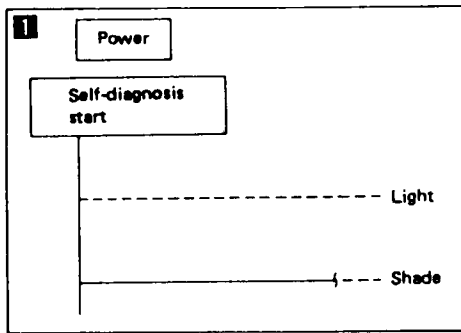


## Diagnostic Procedure 12

### SYMPTOM:

A/T does not shift from D<sub>1</sub> to D<sub>2</sub> at the specified speed.  
 A/T does not shift from D<sub>1</sub> to D<sub>2</sub> when depressing accelerator pedal fully at the specified speed.

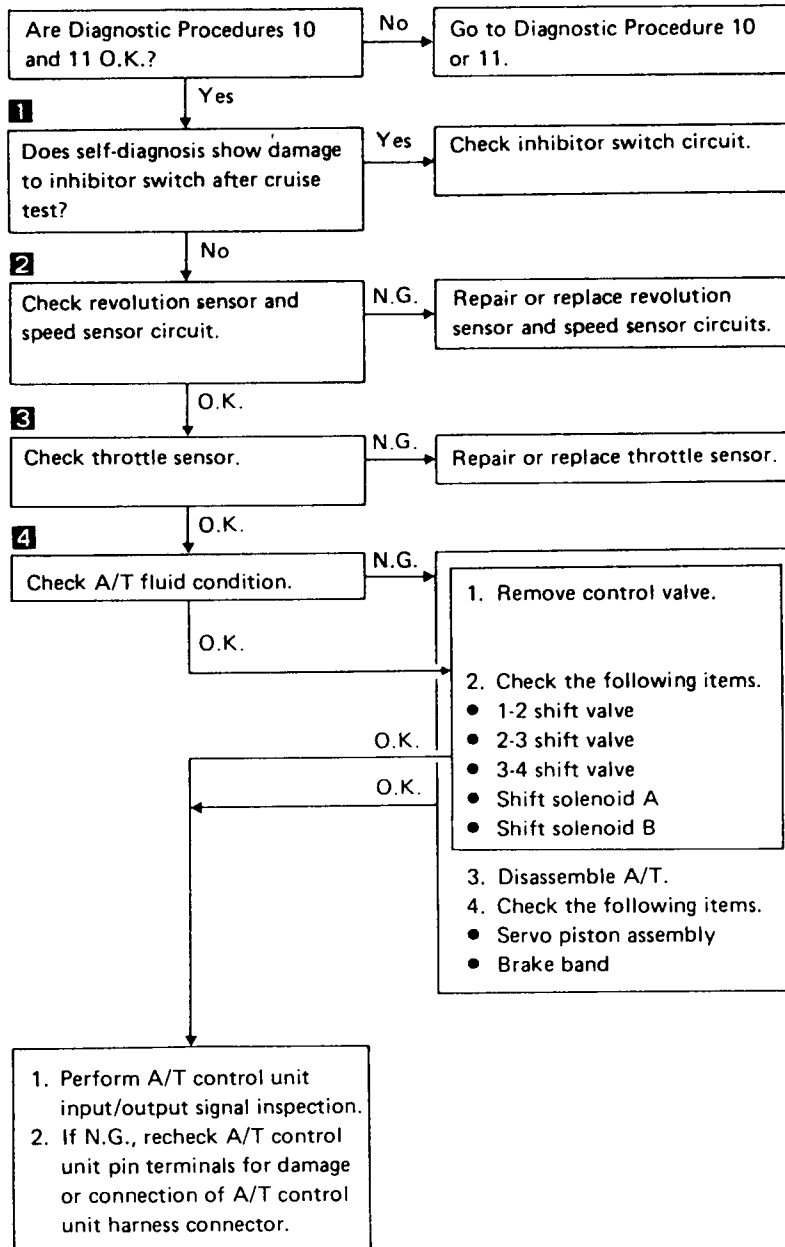


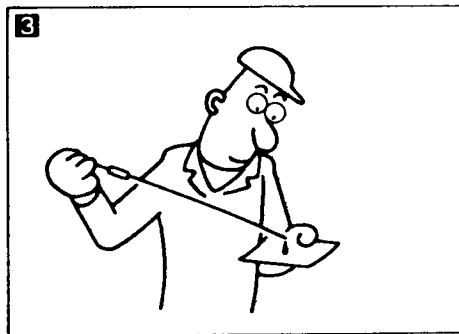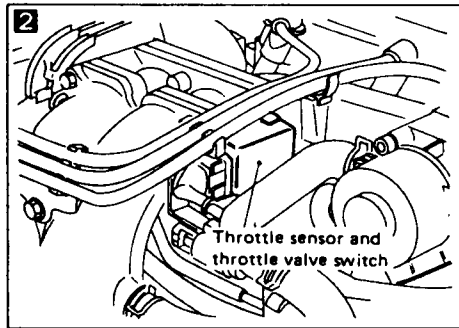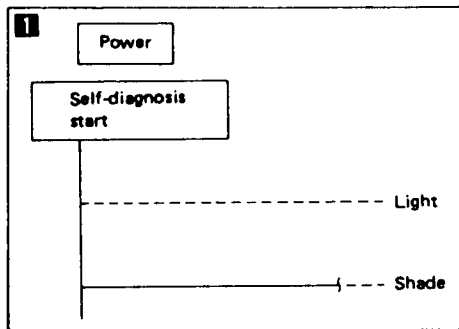

## Diagnostic Procedure 13

### SYMPTOM:





A/T does not shift from D<sub>2</sub> to D<sub>3</sub> at the specified speed.


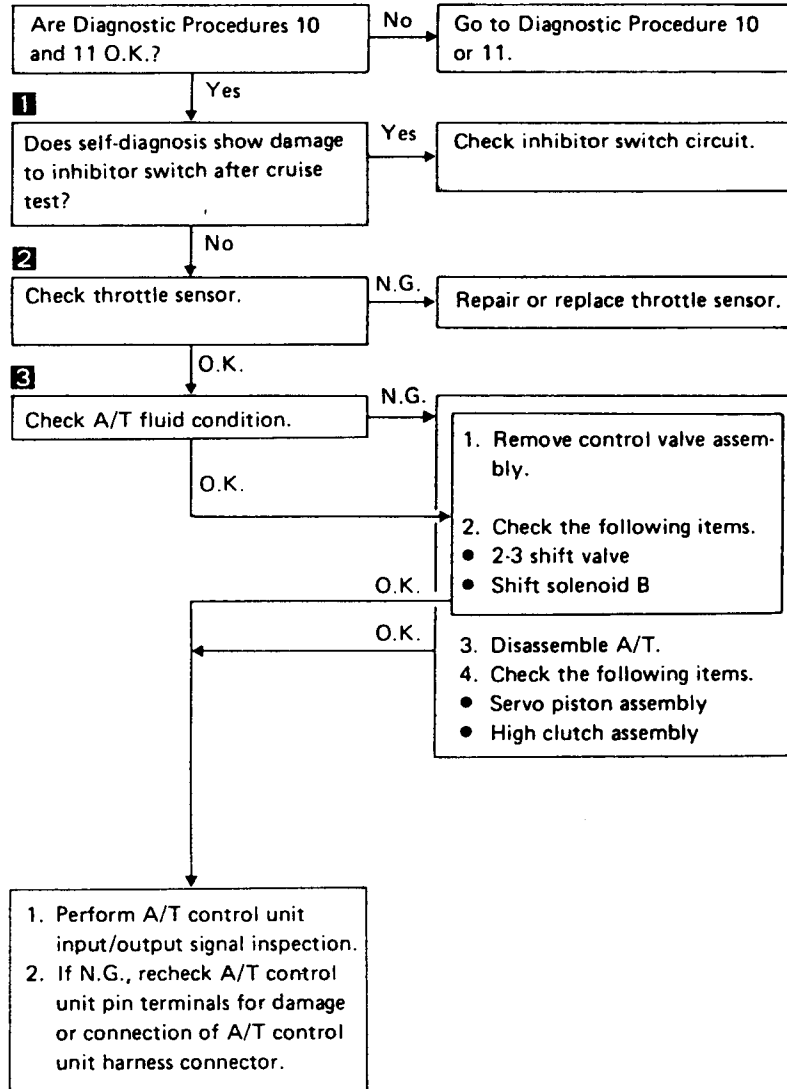


## Diagnostic Procedure 14

### SYMPTOM:

A/T does not shift from D<sub>3</sub> to D<sub>4</sub> at the specified speed.

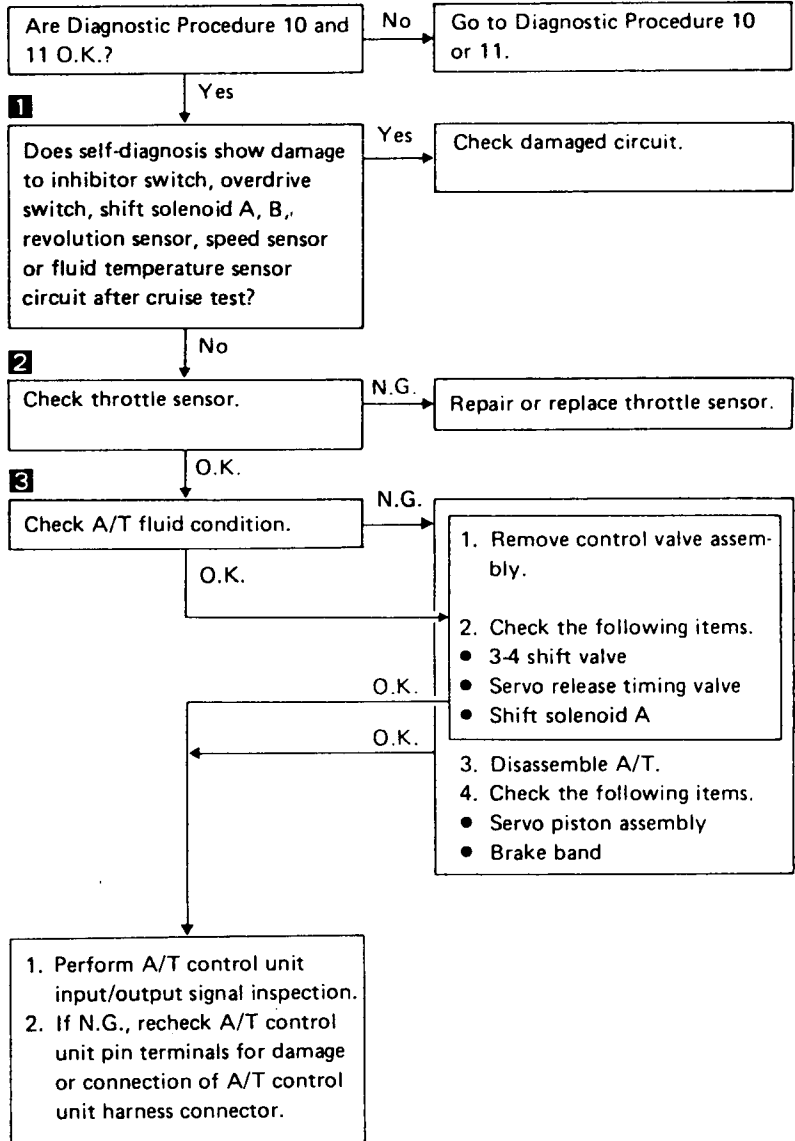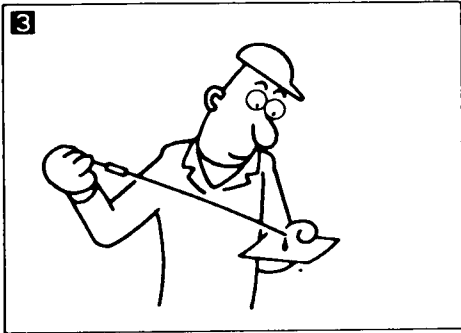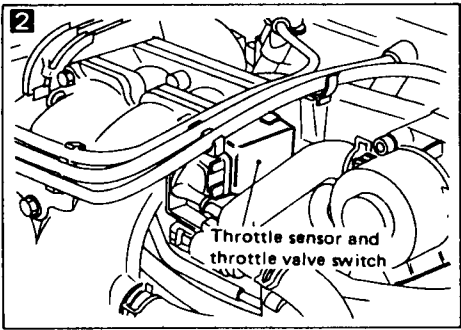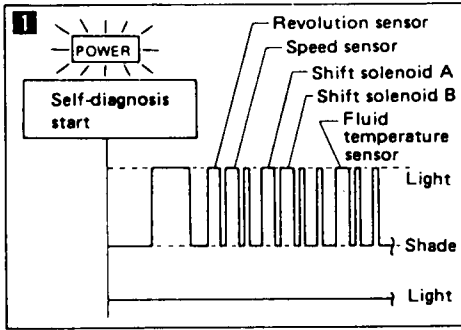


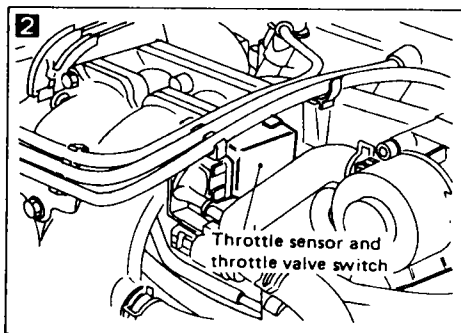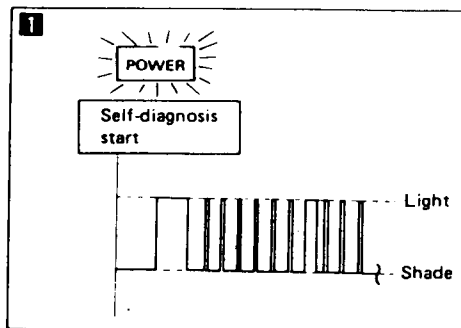


## Diagnostic Procedure 15

### SYMPTOM:

A/T does not perform lock-up at the specified speed.


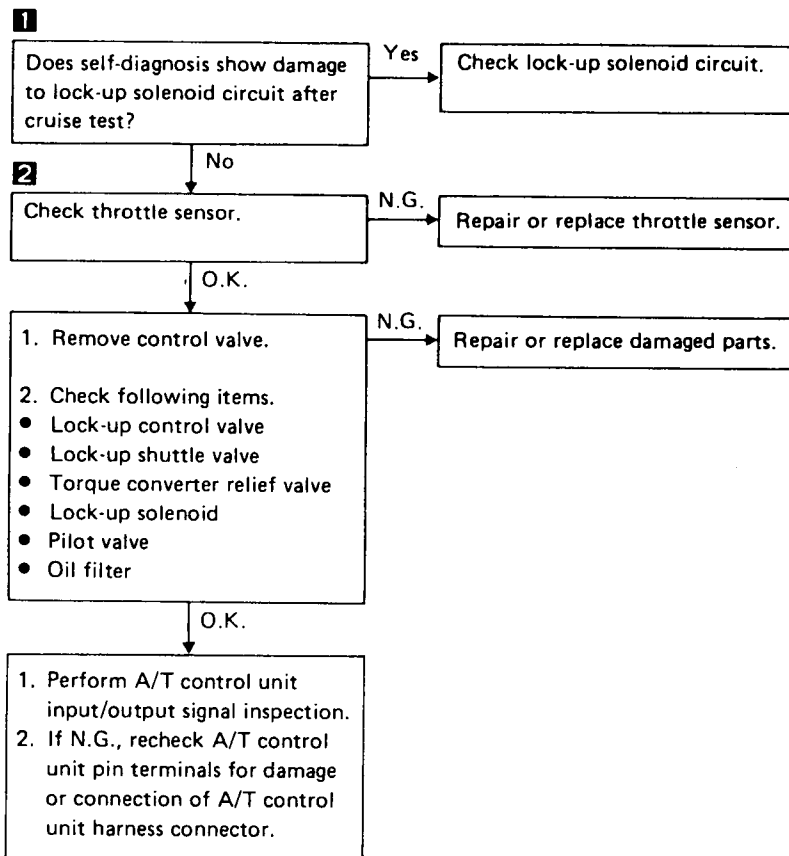


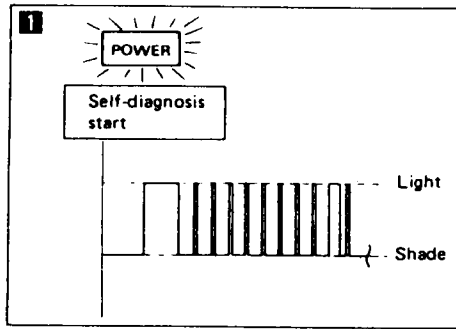

## Diagnostic Procedure 16

### SYMPTOM:


A/T does not hold lock-up condition for more than 30 seconds.

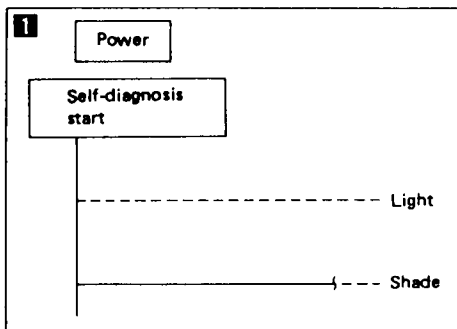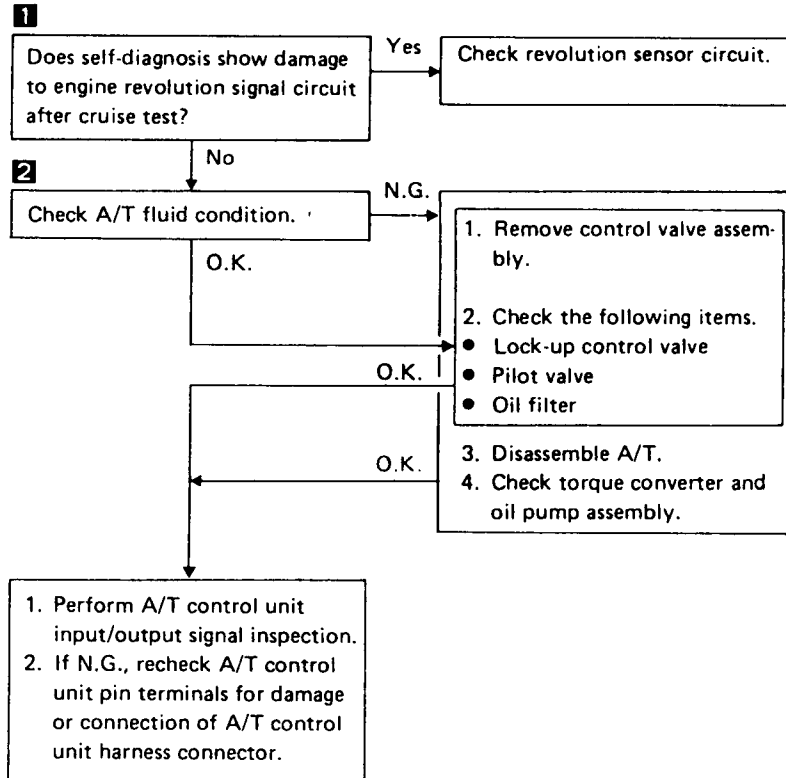


## Diagnostic Procedure 17

### SYMPTOM:

Lock-up is not released when accelerator pedal is released.

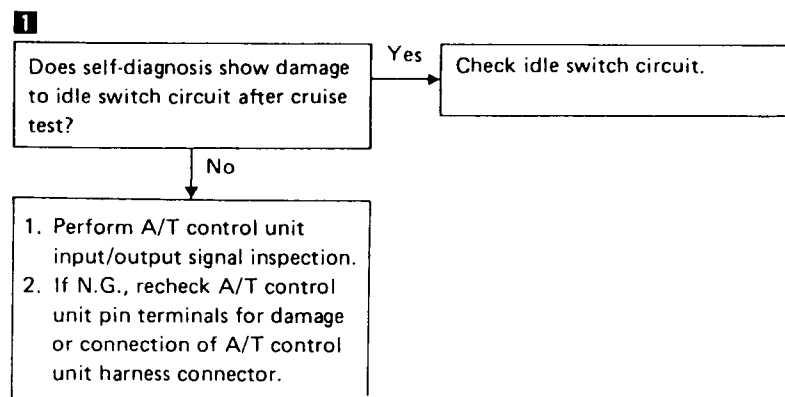




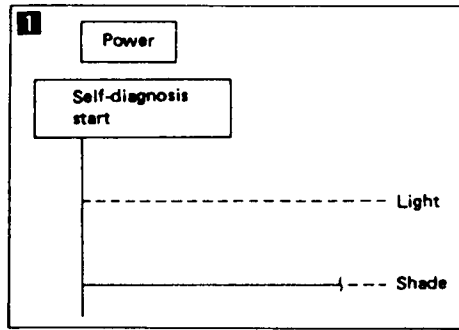


## Diagnostic Procedure 18

### SYMPTOM:

A/T does not shift from D<sub>1</sub> to D<sub>2</sub> when changing overdrive switch to "OFF" position.


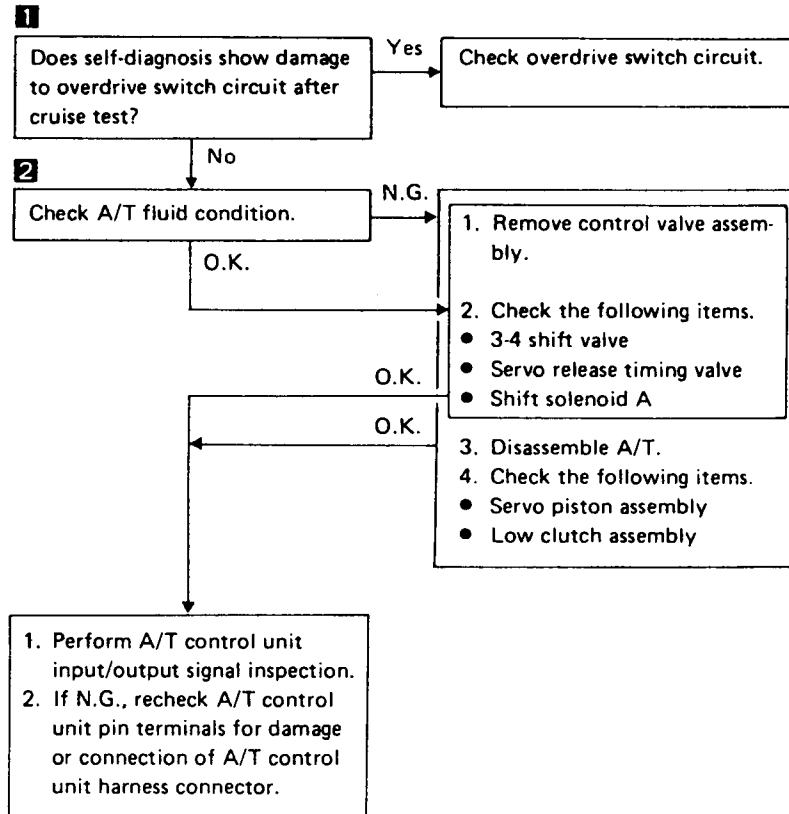


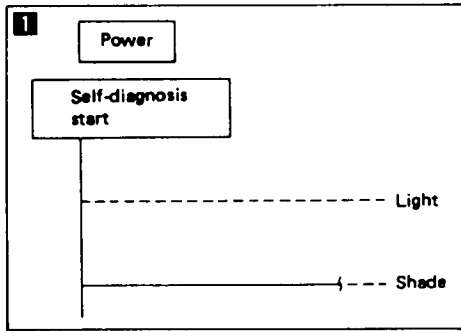

## Diagnostic Procedure 19

### SYMPTOM:



A/T does not shift from D<sub>3</sub> to 2<sub>2</sub> when changing selector lever from "D" to "2" range.

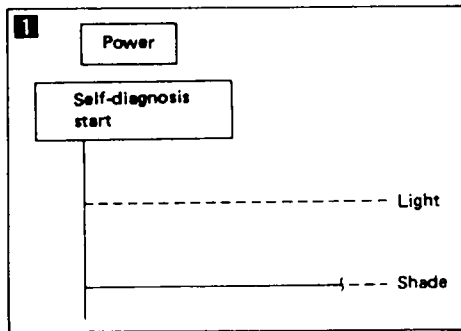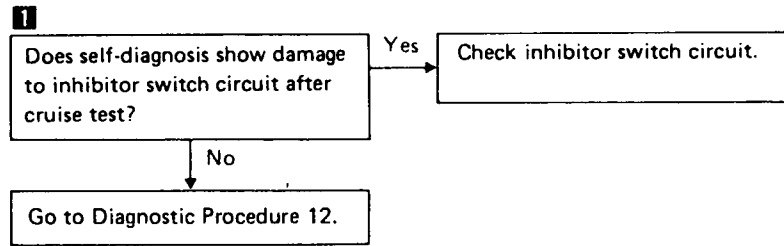

## Diagnostic Procedure 20

### SYMPTOM:



A/T does not shift from 2<sub>2</sub> to 1<sub>1</sub> when changing selector lever from "2" to "1" range.  
Vehicle does not decelerate by engine brake when shifting from 2<sub>2</sub> (1<sub>2</sub>) to 1<sub>1</sub>.

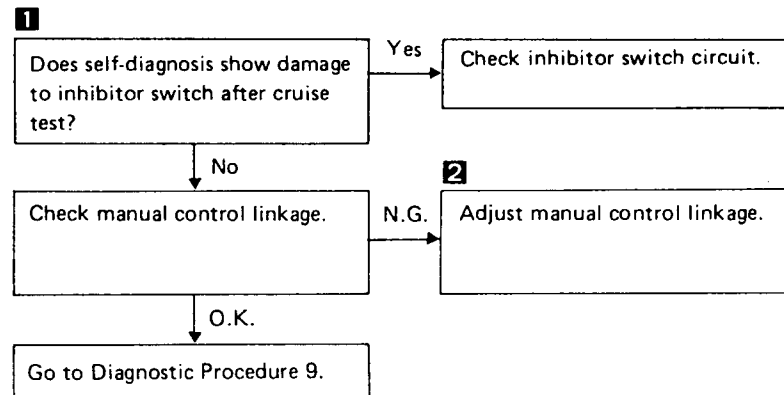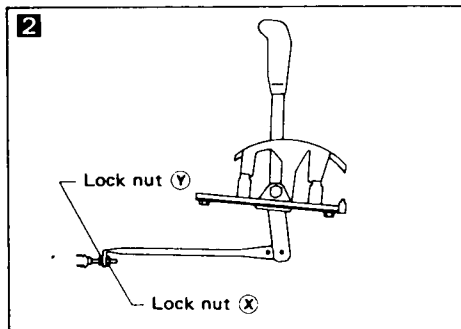

## HOW TO READ WIRING DIAGRAMS

### WIRING DIAGRAM

Symbols used in WIRING DIAGRAM are shown below:

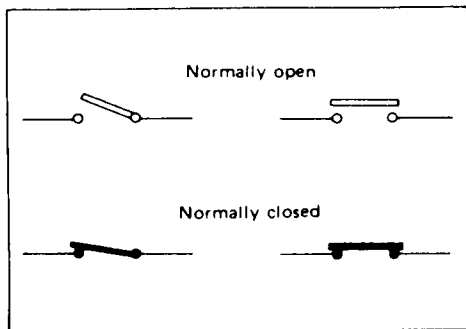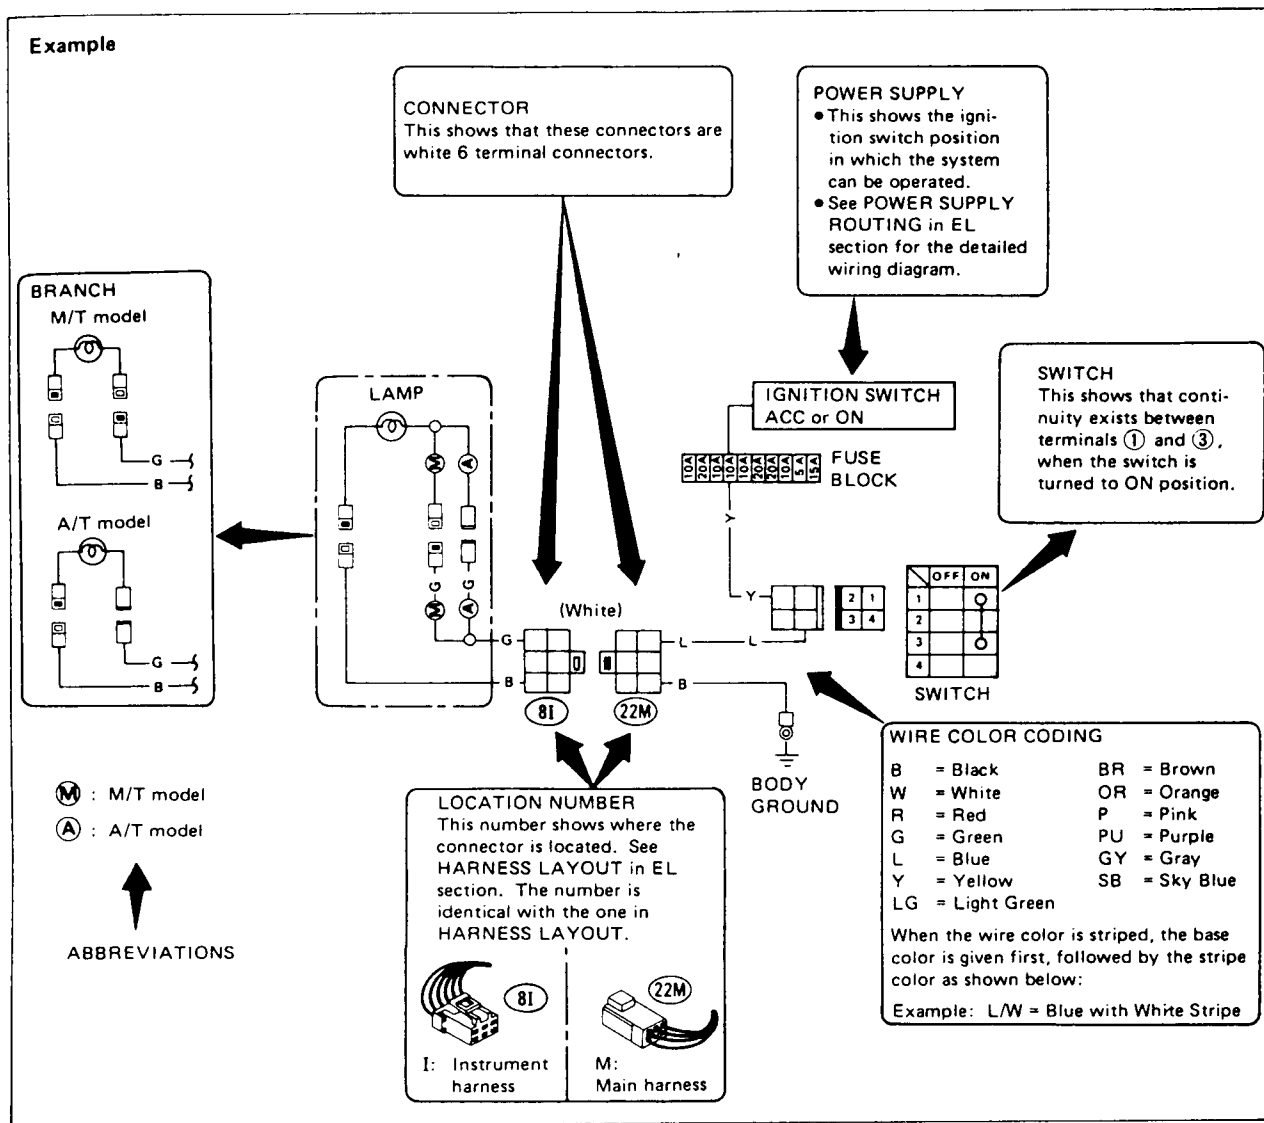


### SWITCH POSITIONS


Wiring diagram switches are shown with the vehicle in the following condition.

- Ignition switch "OFF".
- Doors, hood and trunk lid/back door closed.
- Pedals are not depressed and parking brake is released.
 
### Example



Connector symbol

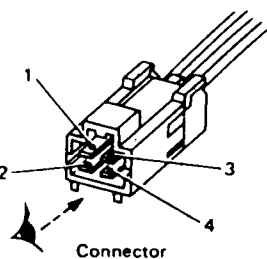


Connector

### CONNECTOR SYMBOLS

- All connector symbols in wiring diagrams are shown from the terminal side.

### Example


#### Male terminal

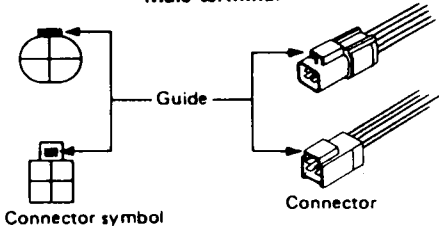

Connector symbol

Connector

#### Female terminal

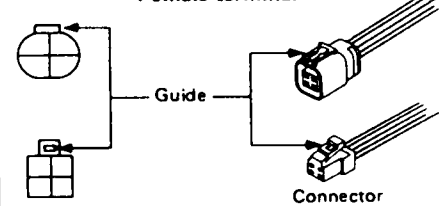

Connector symbol


Connector

- Male and female terminals  
Connector guides for male terminals are shown in black and female terminals in white in wiring diagrams.

### MULTIPLE SWITCH

The continuity of the multiple switch is identified in the switch chart in wiring diagrams.

### Example

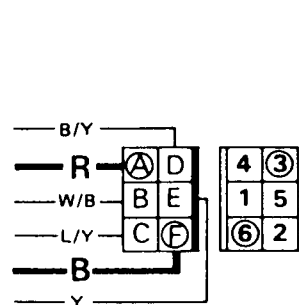

#### WIPER SWITCH

	OFF	INT	LO	HI	WASH
1					○
2				○	
③	○	○	●		
4	○	○	○		
5		○	○		
⑥		○	○	○	

#### Continuity circuit of wiper switch

SWITCH POSITION	CONTINUITY CIRCUIT
OFF	3 - 4
INT	3 - 4, 5 - 6
LO	3 - 6
HI	2 - 6
WASH	1 - 6


Example: Wiper switch in LO position

Continuity circuit: Red wire - (A) terminal - (3) terminal - Wiper switch (● - ●)  
LO) - (6) terminal - (F) terminal - Black wire



# Technical Service Information

## Circuit Diagram for Quick Pinpoint Check

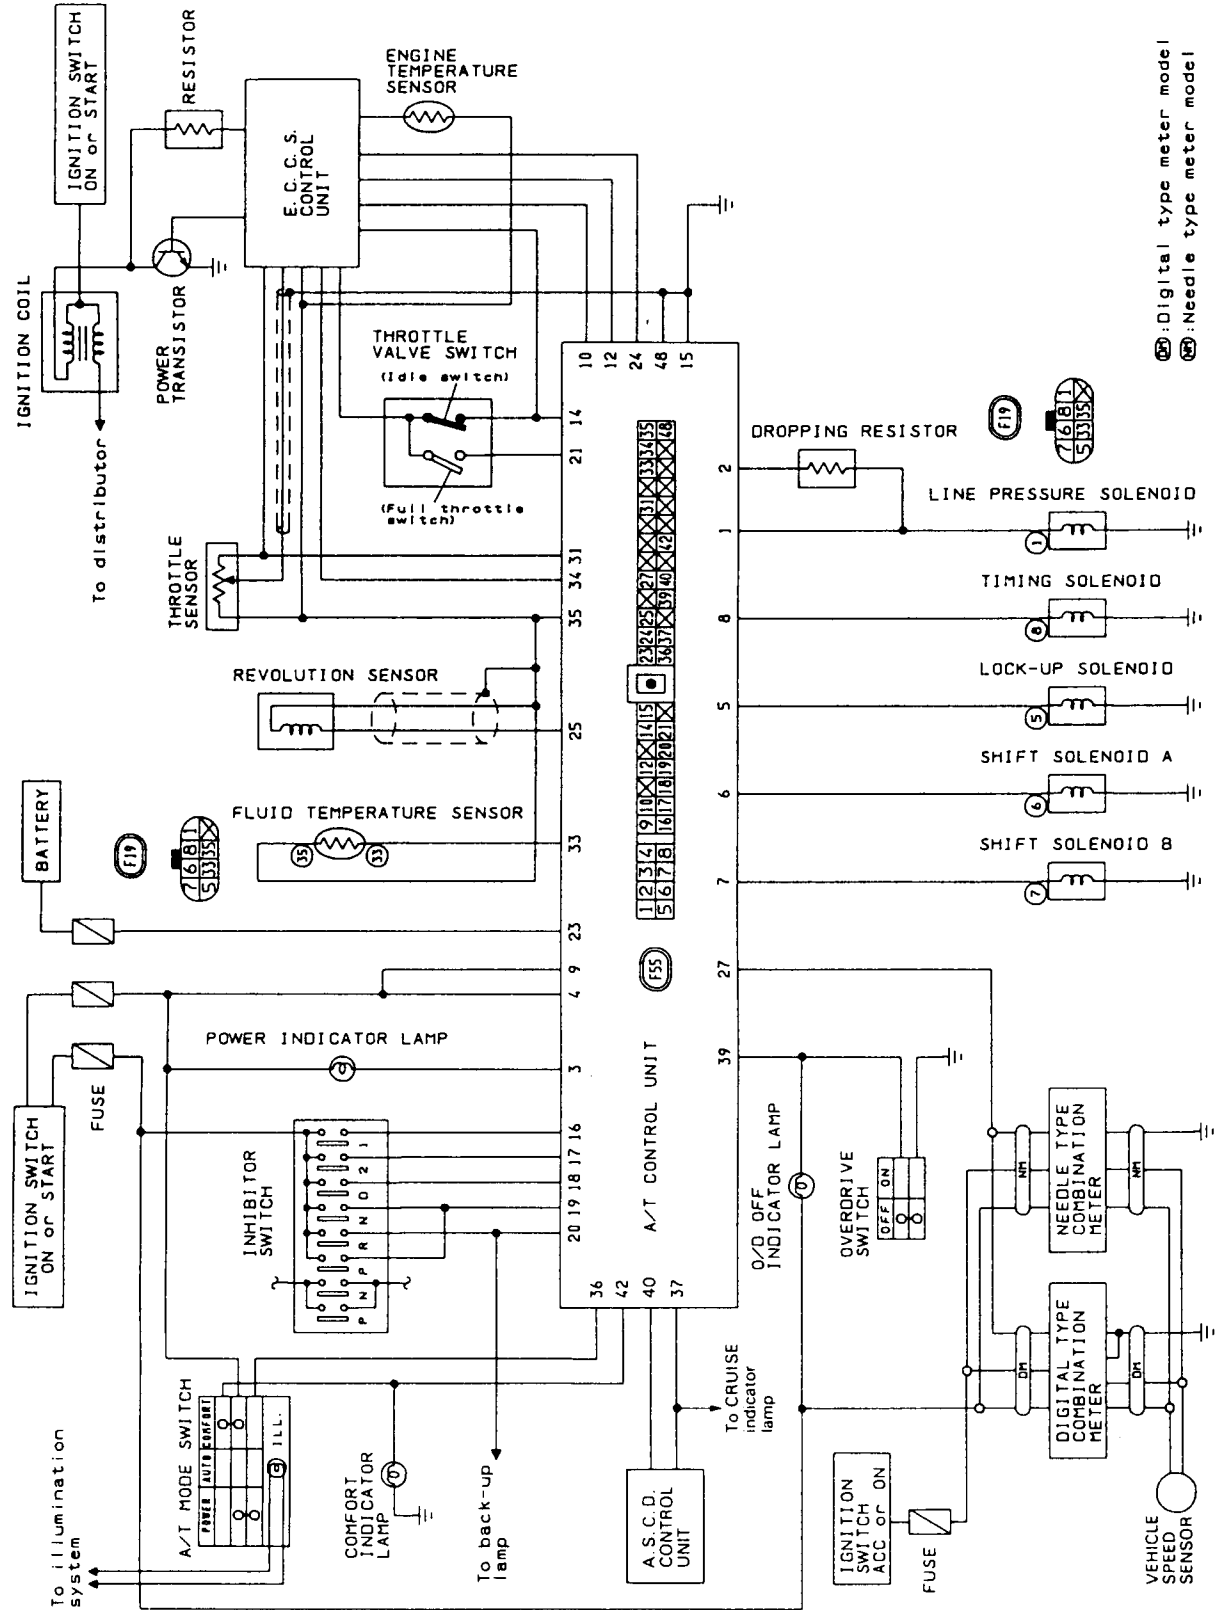


Ⓜ: Digital type meter model  
 Ⓜ: Needle type meter model

AUTOMATIC TRANSMISSION SERVICE GROUP




# Technical Service Information

## Wiring Diagram

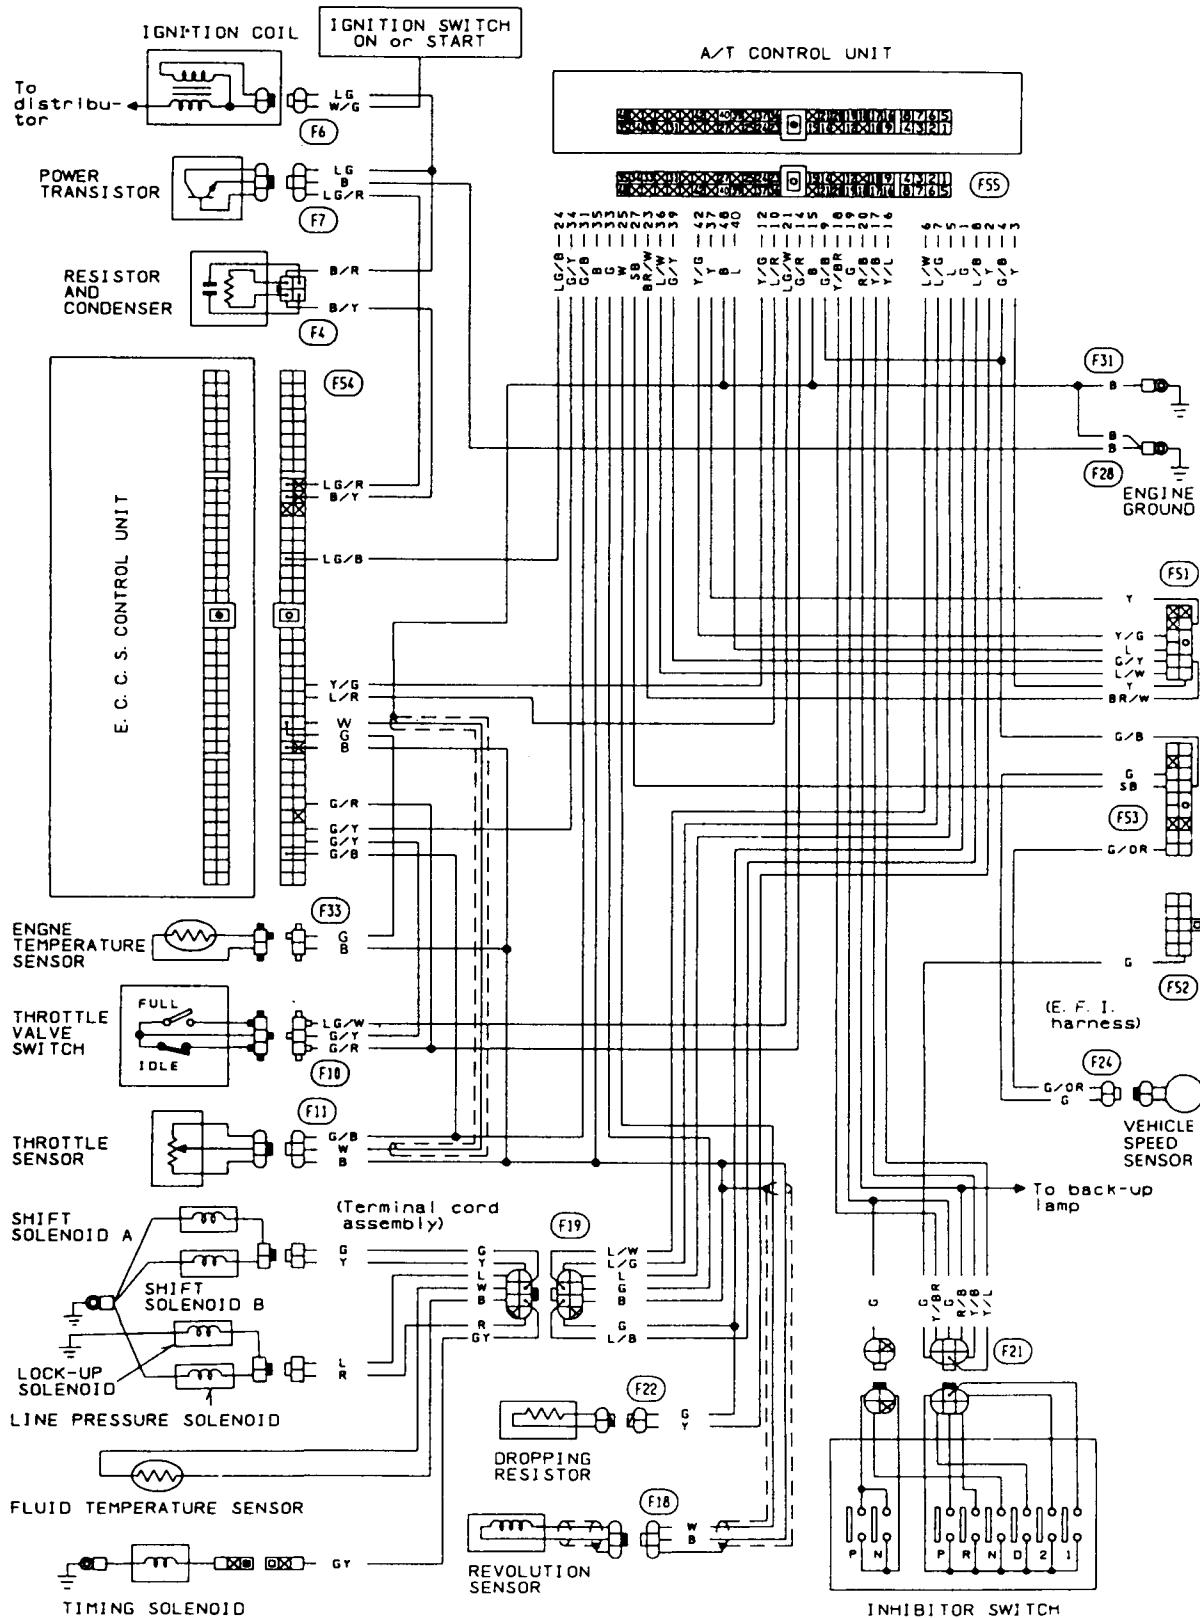

AUTOMATIC TRANSMISSION SERVICE GROUP

## Wiring Diagram (Cont'd)

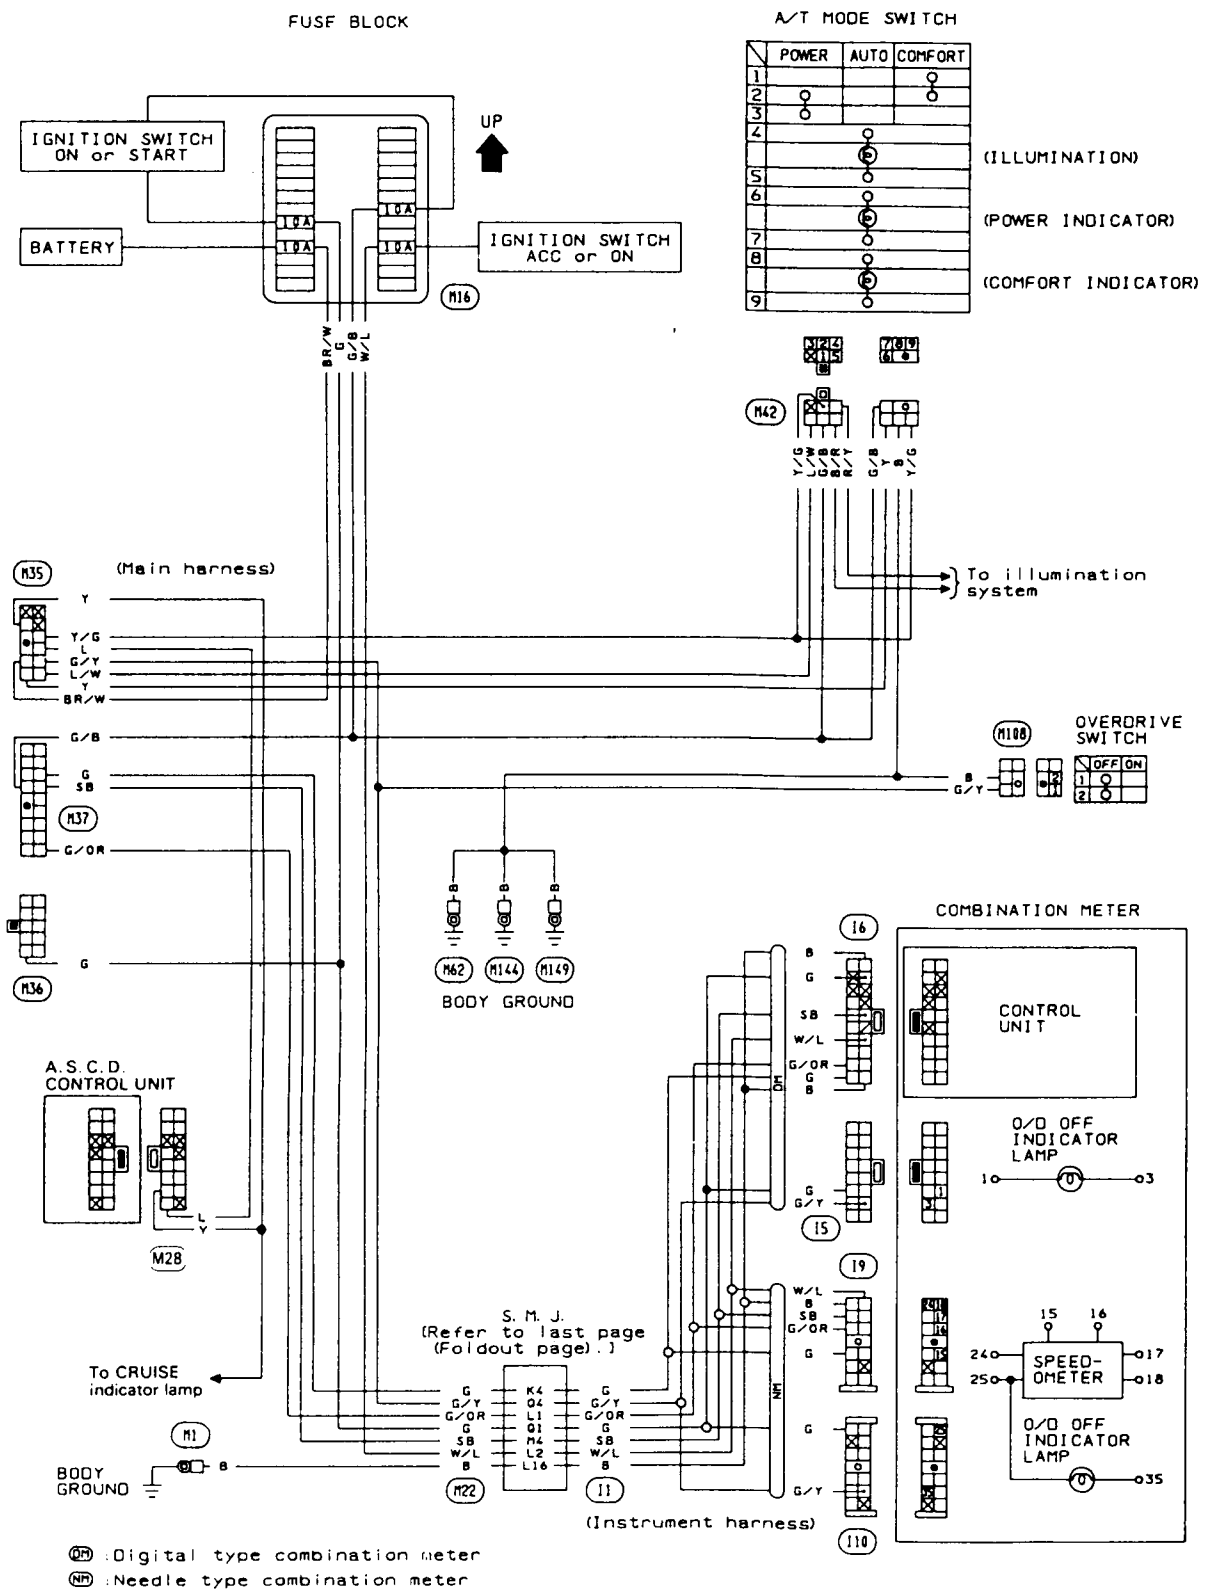




# Technical Service Information

## Electrical Components Inspection

### INSPECTION OF A/T CONTROL UNIT

- Measure voltage between each terminal and terminal ⑮ or ④⑧ by following "A/T CONTROL UNIT INSPECTION TABLE".

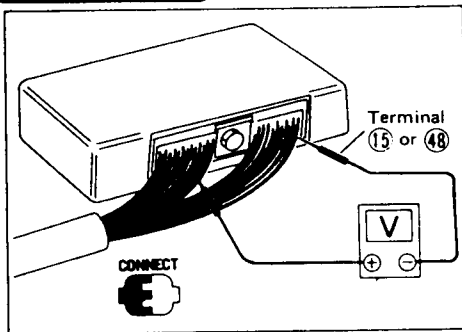

- Pin connector terminal layout.



**A/T CONTROL UNIT INSPECTION TABLE**  
(Data are reference values.)

Terminal No.	Item	Condition	Judgement standard
1	Line pressure solenoid	When accelerator pedal is released after warming up engine.	1.5 - 2.5V
		When accelerator pedal is depressed fully after warming up engine.	0.5V or less
2	Line pressure solenoid (with dropping resistor)	When accelerator pedal is released after warming up engine.	5 - 14V
		When accelerator pedal is depressed fully after warming up engine.	0.5V or less
3	Power indicator lamp	When A/T mode switch is set in "POWER" position.	1V or less
		When A/T mode switch is set in any position except in "POWER" position.	Battery voltage
4	Power source	When ignition switch is turned to "ON".	Battery voltage
		When ignition switch is turned to "OFF".	1V or less
5	Lock-up solenoid	When A/T is performing lock-up.	8 - 15V
		When A/T is not performing lock-up.	1V or less
6	Shift solenoid A	When shift solenoid A is operating. (When driving in "D <sub>1</sub> " or "D <sub>4</sub> ".)	Battery voltage
		When shift solenoid A is not operating. (When driving in "D <sub>2</sub> " or "D <sub>3</sub> ".)	1V or less
7	Shift solenoid B	When shift solenoid B is operating. (When driving in "D <sub>1</sub> " or "D <sub>2</sub> ".)	Battery voltage
		When shift solenoid B is not operating. (When driving in "D <sub>3</sub> " or "D <sub>4</sub> ".)	1V or less
8	Timing solenoid	When timing solenoid is operating. (When driving in "D <sub>1</sub> " or "D <sub>4</sub> ".)	Battery voltage
		When timing solenoid is not operating. (When driving in "D <sub>2</sub> " or "D <sub>3</sub> ".)	1V or less

AUTOMATIC TRANSMISSION SERVICE GROUP





# Technical Service Information

## Electrical Components Inspection (Cont'd)

Terminal No.	Item	Condition	Judgement standard
9	Power source	Same as No. 4	
10*	--	--	--
11	--	--	--
12	--	--	--
13	--	--	--
14	Idle switch (in throttle valve switch)	When accelerator pedal is released after warming up engine.	8 - 15V
		When accelerator pedal is depressed after warming up engine.	1V or less
15	Ground	--	--
16	Inhibitor "1" range switch	When selector lever is set to "1" range.	Battery voltage
		When selector lever is set to other ranges.	1V or less
17	Inhibitor "2" range switch	When selector lever is set to "2" range.	Battery voltage
		When selector lever is set to other ranges.	1V or less
18	Inhibitor "D" range-switch	When selector lever is set to "D" range.	Battery voltage
		When selector lever is set to other ranges.	1V or less
19	Inhibitor "N" or "P" range switch	When selector lever is set to "N" range.	Battery voltage
		When selector lever is set to other ranges.	1V or less
20	Inhibitor "R" range switch	When selector lever is set to "R" range.	Battery voltage
		When selector lever is set to other ranges.	1V or less
21	Full throttle switch	When accelerator pedal is depressed more than half-way after warming up engine.	8 - 15V
		When accelerator pedal is released after warming up engine.	1V or less
22	--	--	--





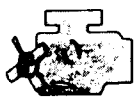


\*: This terminal is connected to terminal No. 36 of E.C.C.S. control unit.  
When code No. 54 appears during engine self-diagnosis, check line between above terminals for proper continuity.



# Technical Service Information
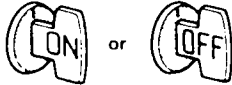
## Electrical Components Inspection (Cont'd)

Terminal No.	Item	Condition	Judgement standard	
23	Power source (Back-up)		When ignition switch is turned to "OFF".	Battery voltage
			When ignition switch is turned to "ON".	Battery voltage
24	Engine revolution signal		When engine is running at idle speed.	0.9V
			When engine is running at 3,000 rpm.	Approximately 3.7V
25	Revolution sensor (Measure in AC range)		When vehicle is cruising at 30 km/h (19 MPH).	1V or more Voltage rises gradually in response to vehicle speed.
26	—		When vehicle is parked.	0V
27	Speed sensor		When vehicle is moving at 2 to 3 km/h (1 to 2 MPH) for 1m (3ft) or more.	Vary from 0 to 5V
28	—	—	—	
29	—	—	—	
30	—	—	—	
31	Throttle sensor (Power source)	—	4.5 - 5.5V	
32	—	—	—	
33	Fluid temperature sensor		When A.T.F. temperature is 20°C (68°F).	1.56V
			When A.T.F. temperature is 80°C (176°F).	0.45V
34	Throttle sensor		When accelerator pedal is depressed slowly after warming up engine. Voltage rises gradually in response to throttle opening angle.	Fully-closed throttle: 0.2 - 0.6V Fully-open throttle: 2.9 - 3.9V
35	Throttle sensor (Ground)	—	—	
36	A/T mode switch "POWER"	—	When A/T mode switch is set in "POWER" position.	Battery voltage
			When A/T mode switch is set in any position except in "POWER" position.	1V or less




# Technical Service Information

## Electrical Components Inspection (Cont'd)

Terminal No.	Item	Condition	Judgement standard
37	-	-	-
38	-	-	-
39	Overdrive switch	When overdrive switch is set in "ON" position.	Battery voltage
		When overdrive switch is set in "OFF" position.	1V or less
40	-	-	-
41	-	-	-
42	A/T mode switch "COMFORT"	When A/T mode switch is set in "COMFORT" position.	Battery voltage
		When A/T mode switch is set in any position except in "COMFORT" position.	1V or less
43	-	-	-
44	-	-	-
45	-	-	-
46	-	-	-
47	-	-	-
48	Ground	-	-




## Electrical Components Inspection (Cont'd) REVOLUTION SENSOR

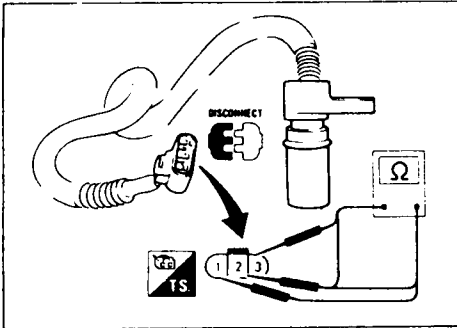


- Check resistance between terminals ①, ② and ③.

Terminal No.		Resistance
①	②	500 - 650Ω
②	③	No continuity
①	③	No continuity

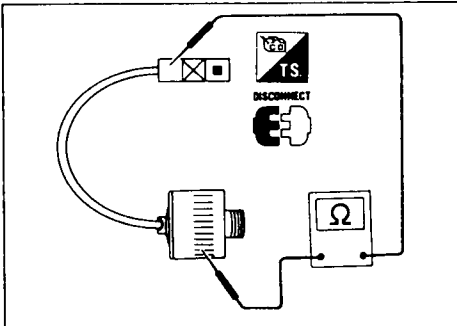

### TIMING SOLENOID

- Check resistance between two terminals.  
**Resistance:**  
Timing solenoid 20 - 40Ω

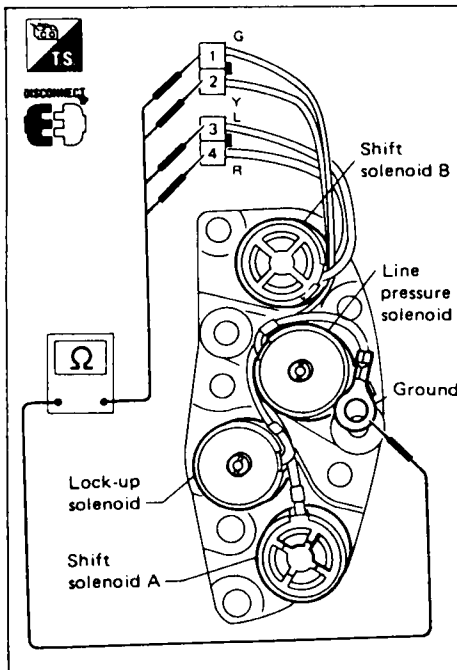


### 4-UNIT SOLENOID ASSEMBLY

(Shift solenoid A, B, lock-up solenoid and line pressure solenoid)

- Check resistance between terminals of each solenoid.

Solenoid	Terminal No.	Resistance Ω
Shift solenoid A	①	20 - 40
Shift solenoid B	②	
Lock-up solenoid	③	10 - 20
Line pressure solenoid	④	2.5 - 5

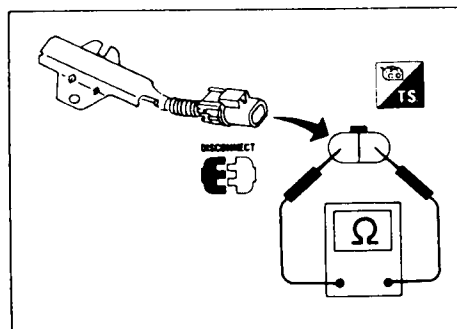



### DROPPING RESISTOR

- Check resistance between two terminals.  
**Resistance: 11.2 - 12.8Ω**

## Electrical Components Inspection (Cont'd)


### INHIBITOR SWITCH

1. Disconnect control cable from manual shaft.

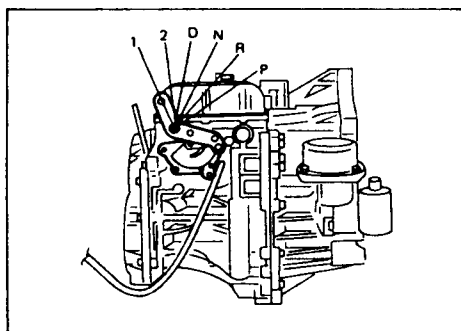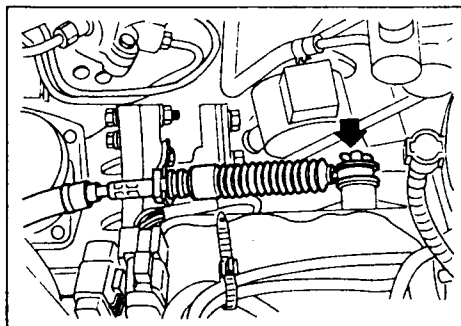


2. Check continuity between terminals ① and ③ and between terminals ④ and ②, ⑤, ⑥, ⑦, ⑧, ⑨ while moving selector lever through each range.

Terminal No.	①	②	③	④	⑤	⑥	⑦	⑧	⑨
Lever position									
P	○	—	○	○	—	○			
R				○	—		○		
N	○	—	○	○					
D				○	—	○			
2				○	—			○	
1				○	—				○

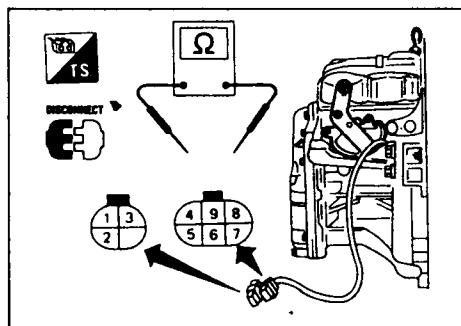


3. If N.G., adjust inhibitor switch.
4. Check terminal continuity again.
5. If N.G., replace inhibitor switch.

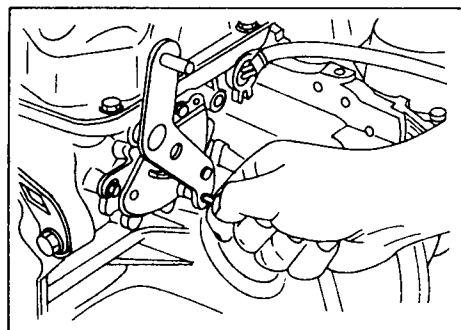

### FLUID TEMPERATURE SENSOR

- Check resistance between two terminals while changing temperature as shown as left.

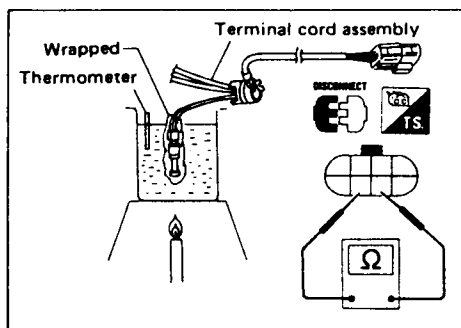

Temperature °C (°F)	Resistance kΩ
20 (68)	Approximately 2.5
80 (176)	Approximately 0.3





## Technical Service Information

### Electrical Components Inspection (Cont'd)

#### OVERDRIVE SWITCH

- Check continuity between two terminals.

O.D. switch position	Continuity
ON	No
OFF	Yes

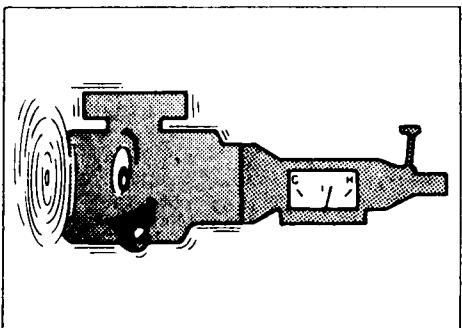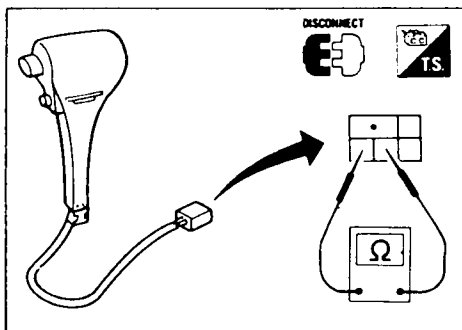


#### Final Check

##### STALL TESTING


###### Stall test procedure

1. Check A/T and engine fluid levels. If necessary, add.
2. Warm up engine until engine oil and A.T.F. reach operating temperature after vehicle has been driven approx. 10 minutes.


**A.T.F. operating temperature:**  
50 - 80°C (122 - 176°F)

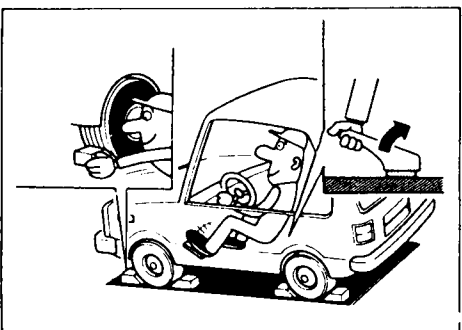

3. Set parking brake and block wheels.
  4. Install a tachometer where it can be seen by driver during test.
- It is good practice to put a mark on point of specified engine rpm on indicator.

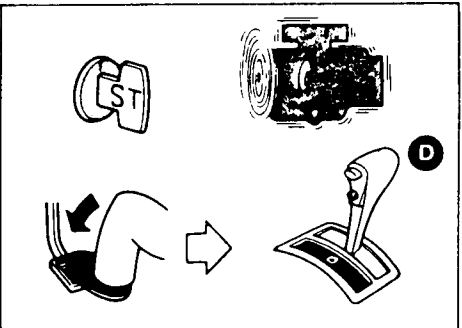

5. Start engine, apply foot brake, and place selector lever in "D" range.

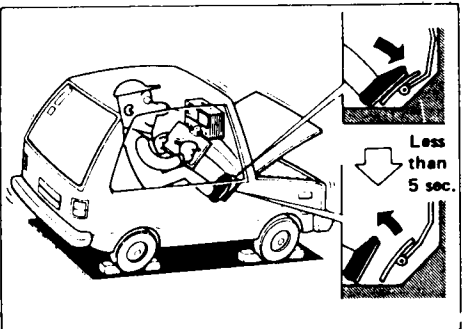

6. Accelerate to wide-open throttle gradually while applying foot brake.
  7. Quickly note the engine stall revolution and immediately release throttle.
- During test, never hold throttle wide-open for more than 5 seconds.

**Stall revolution:**  
2,350 - 2,650 rpm



# Technical Service Information


## Final Check (Cont'd)

8. Shift selector lever to "N".


9. Cool off A.T.F.

**Run engine at idle for at least one minute.**

10. Perform stall tests in the same manner as in steps 5 through 9 with selector lever in "1" and "R", respectively.

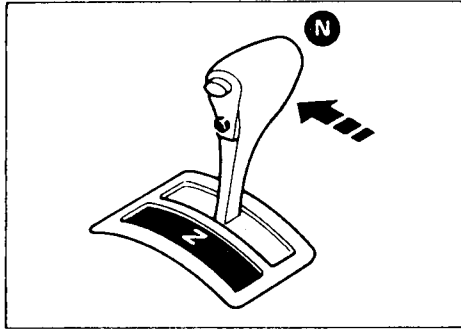

## JUDGEMENT OF STALL TEST


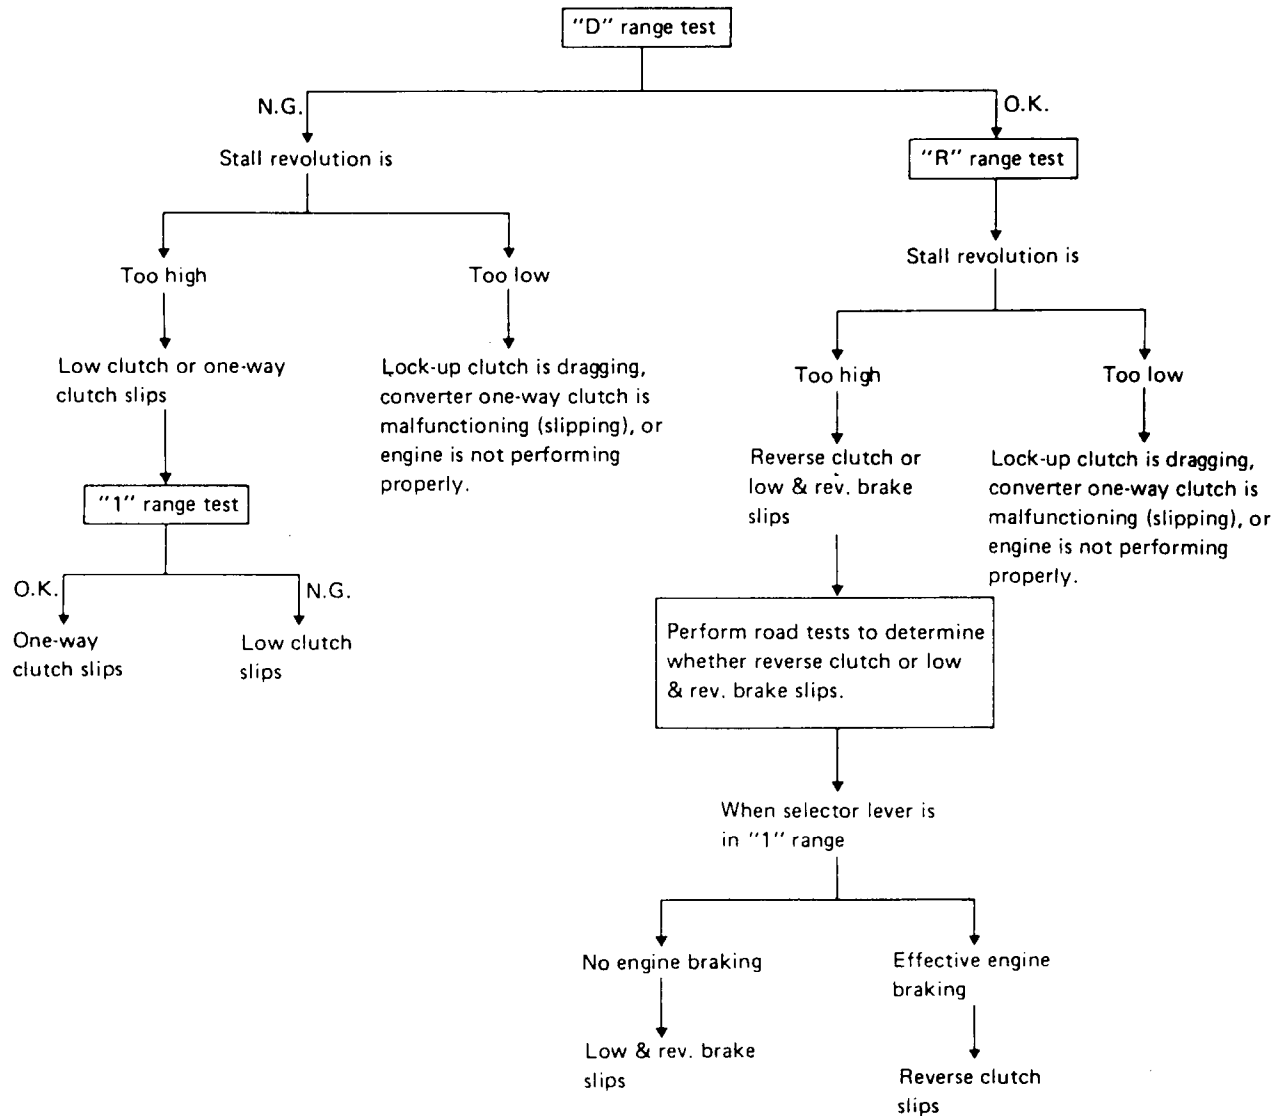


If converter one-way clutch is frozen, vehicle will have poor high-speed performance and low engine rpm when it is raced in "N" range. If converter one-way clutch is slipping, vehicle will be sluggish up to 50 or 60 km/h (30 or 40 MPH).

## Final Check (Cont'd)

### PRESSURE TESTING


- Location of line pressure test port
- Always replace line pressure plugs as they are self-sealing bolts.

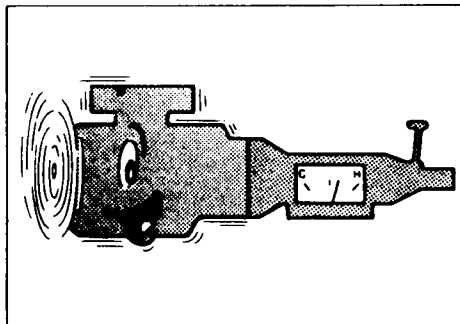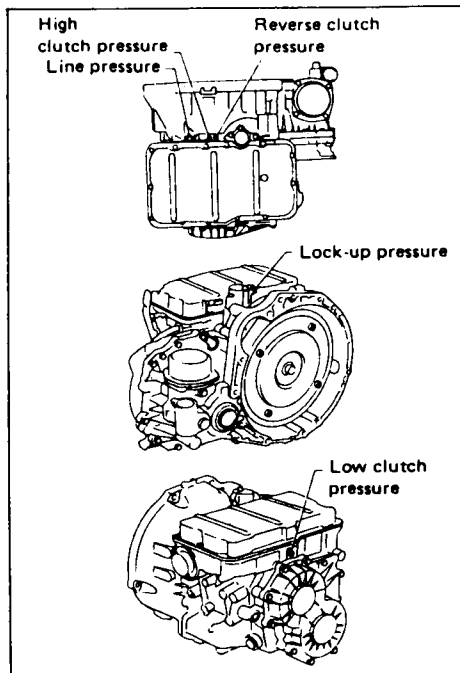


#### Line pressure test procedure

1. Check A/T and engine fluid levels. If necessary, add.
2. Warm up engine until engine oil and A.T.F. reach operating temperature after vehicle has been driven approx. 10 minutes.

**A.T.F. operating temperature:**  
50 - 80°C (122 - 176°F)

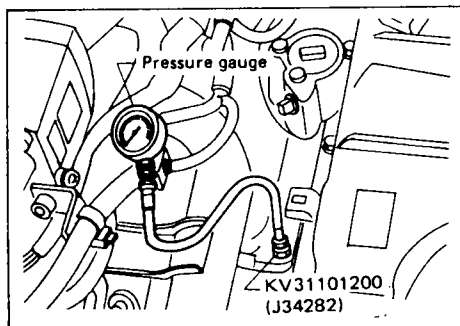

3. Install pressure gauge to line pressure port.

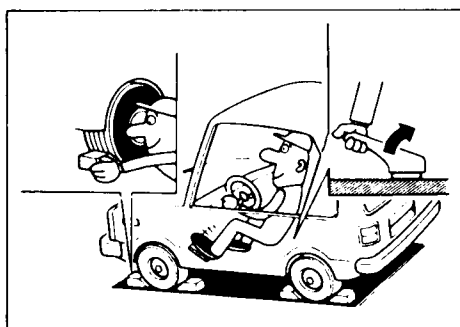


4. Set parking brake and block wheels.
  - Continue to depress brake pedal fully while line pressure test at stall speed is performed.





## Technical Service Information

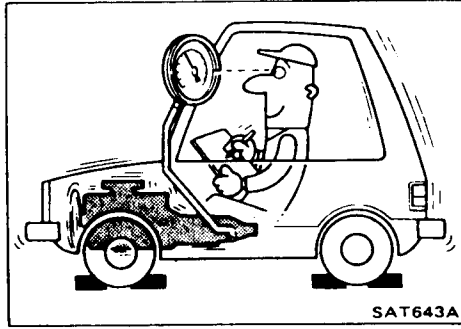

### Final Check (Cont'd)


- Start engine and measure line pressure at idle and stall speed.
  - When measuring line pressure at stall speed, follow the stall test procedure.

Line pressure:

Engine speed rpm	Line pressure kPa (kg/cm <sup>2</sup> , psi)
	D, 2, 1 and R ranges
Idle	382 - 422 (3.9 - 4.3, 55 - 61)
Stall	1,285 - 1,363 (13.1 - 13.9, 186 - 198)

### JUDGEMENT OF LINE PRESSURE TEST

Judgement		Suspected parts
At idle	Line pressure is low in all ranges.	<ul style="list-style-type: none"> <li>Oil pump wear</li> <li>Control piston damage</li> <li>Pressure regulator valve or plug sticking</li> <li>Spring for pressure regulator valve damaged</li> <li>Fluid pressure leakage between oil strainer and pressure regulator valve</li> </ul>
	Line pressure is low in particular range.	<ul style="list-style-type: none"> <li>Fluid pressure leakage between manual valve and particular clutch.</li> <li>For example; If line pressure is low in "R" and "1" ranges but is normal in "D" and "2" range, fluid leakage exists at or around low &amp; reverse brake circuit.</li> </ul>
	Line pressure is high.	<ul style="list-style-type: none"> <li>Mal-adjustment of throttle sensor</li> <li>Fluid temperature sensor damaged</li> <li>Line pressure solenoid sticking</li> <li>Short circuit of line pressure solenoid circuit</li> <li>Pressure regulator valve or plug sticking</li> </ul>
At stall speed	Line pressure is low.	<ul style="list-style-type: none"> <li>Mal-adjustment of throttle sensor</li> <li>Control piston damaged</li> <li>Line pressure solenoid sticking</li> <li>Short circuit of line pressure solenoid circuit</li> <li>Pressure regulator valve or plug sticking</li> <li>Pilot valve sticking</li> </ul>

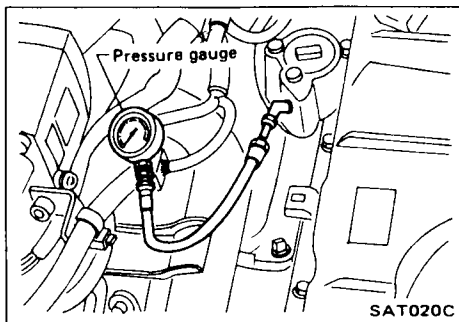

### LOCK-UP TEST


Install pressure gauge to lock-up pressure port. Shift selector lever in "D" range.

Condition	Torque converter lock-up pressure kPa (kg/cm <sup>2</sup> , psi)
Lock-up "ON"	49 (0.5, 7) or less
Lock-up "OFF"	196 (2, 28) or more

If lock-up pressure is not within specifications, refer to Diagnostic Procedures 15 and 16.

## AUTOMATIC TRANSMISSION SERVICE GROUP


## Hydraulic Control Circuits

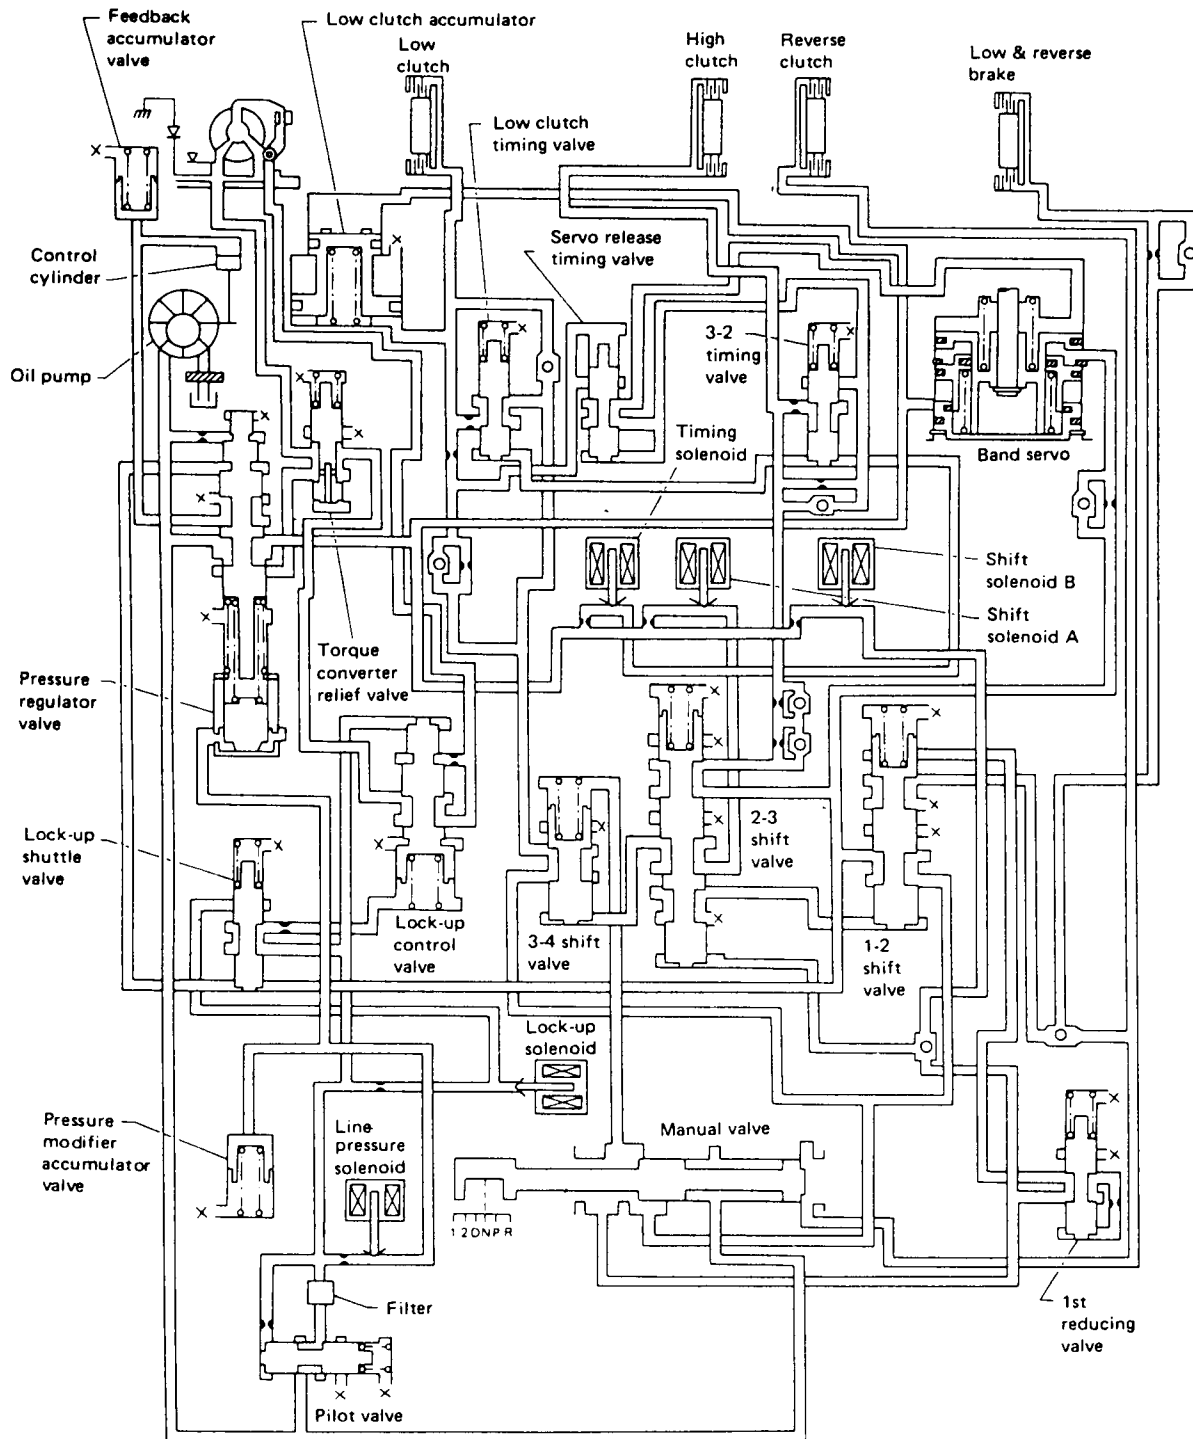


AUTOMATIC TRANSMISSION SERVICE GROUP

## Oil Channel


### OIL CHANNELS IN OIL PUMP COVER

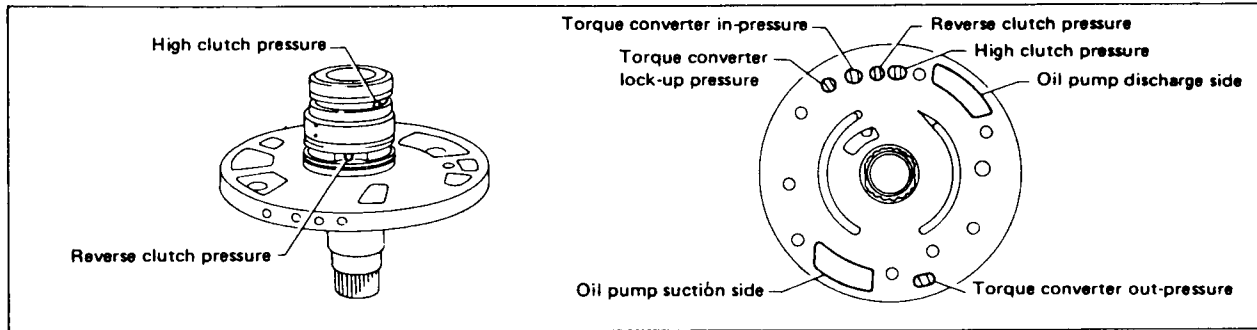

### OIL CHANNELS IN TRANSMISSION CASE

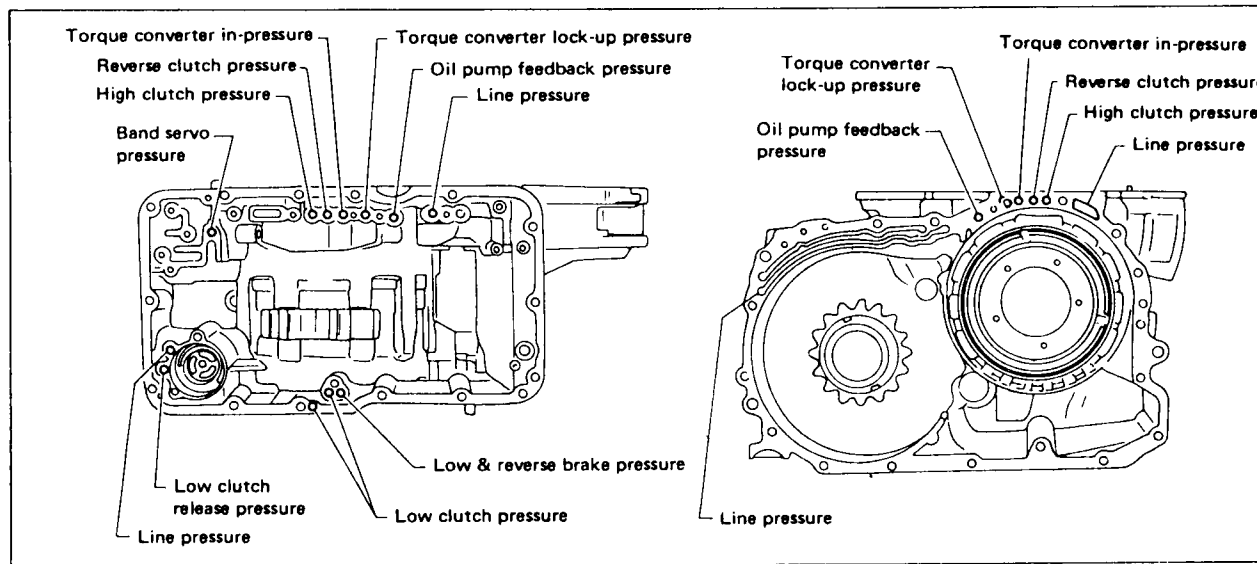


### OIL CHANNELS IN CONVERTER HOUSING

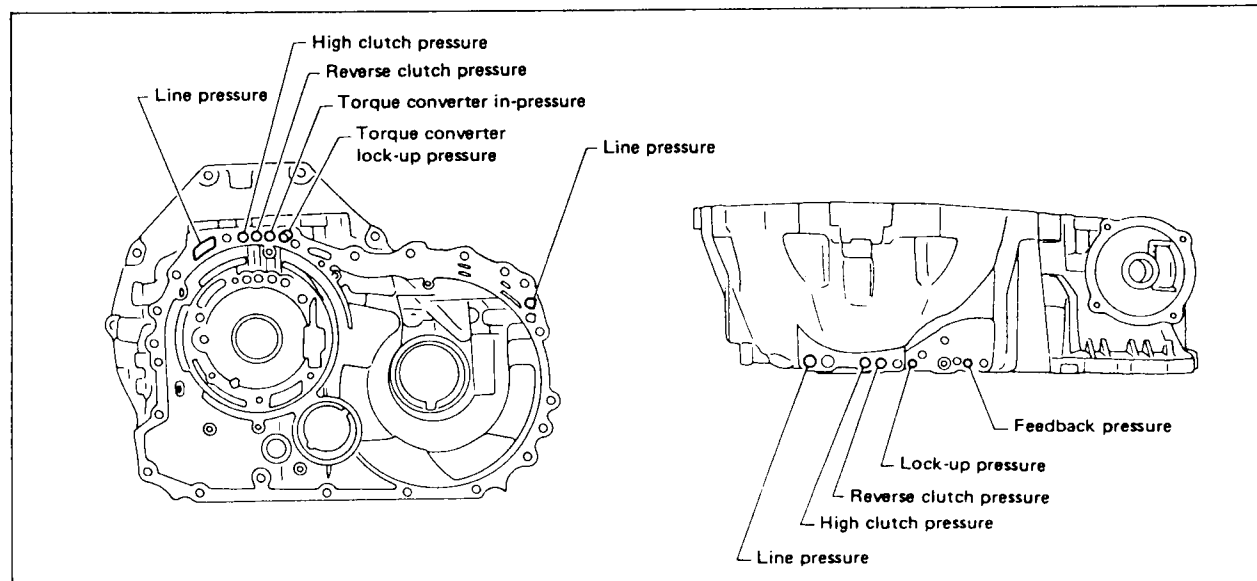






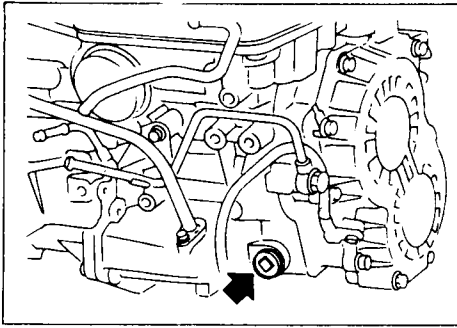


## Disassembly


1. Drain A.T.F. through drain hole.

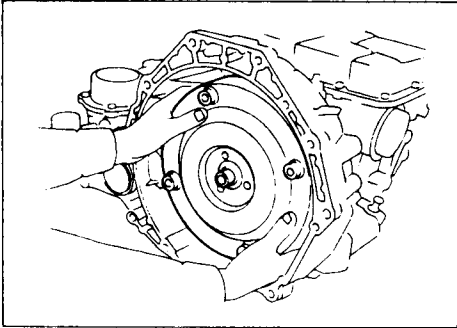


2. Remove torque converter.

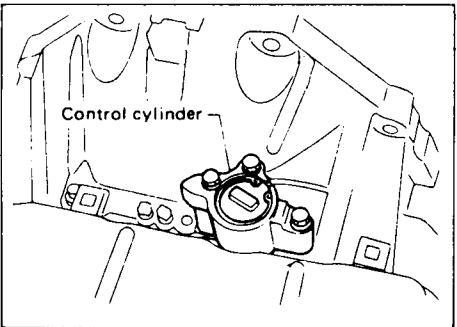

3. Remove control cylinder.

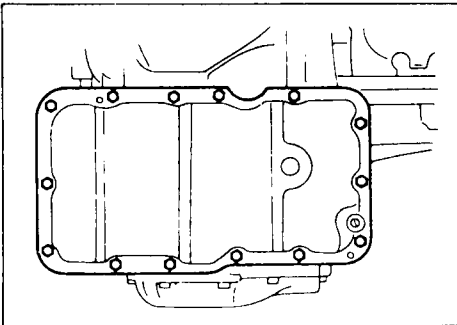

4. Remove control valve cover.

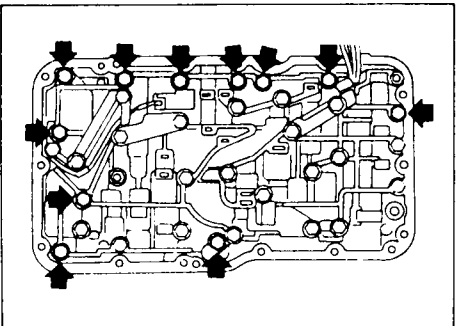

5. Disconnect harness connectors on control valve and remove control valve assembly.


6. Remove terminal assembly.

**The terminal retrieving hooks will break if they are forced inward too far. Bend them gently inward while pulling carefully outward on the terminal. Do not pull on the wires.**




## Technical Service Information


### Disassembly (Cont'd)

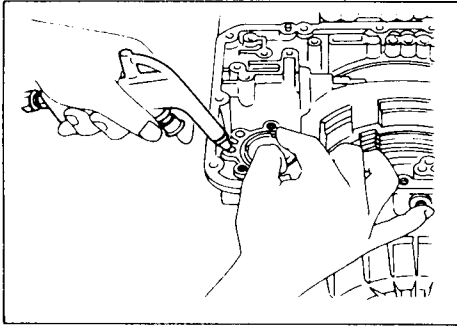


7. Remove accumulator.

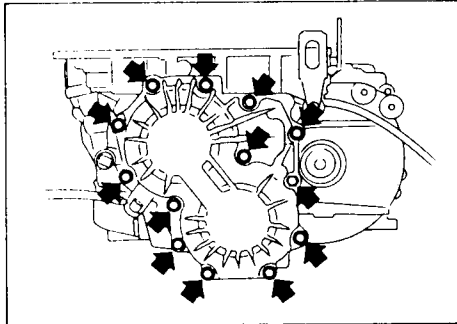


8. Remove side cover.

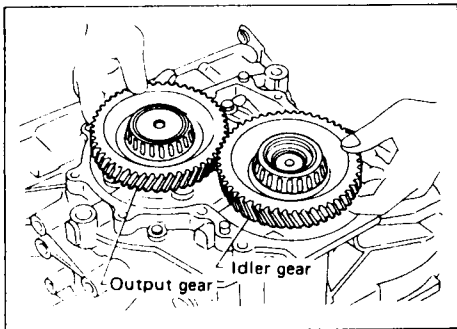

9. Remove output gear.

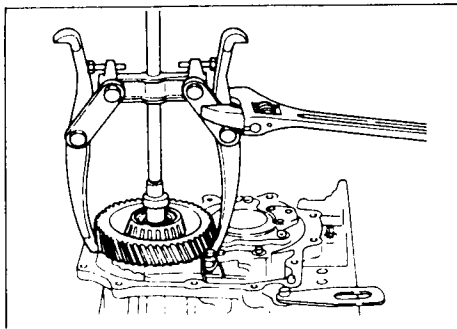

10. Draw out idler gear.

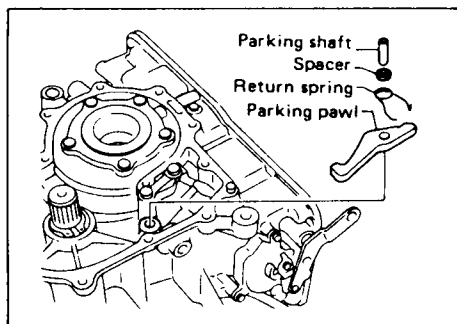


11. Remove parking pawl, return spring, parking shaft and spacer.


AUTOMATIC TRANSMISSION SERVICE GROUP




## Technical Service Information Disassembly (Cont'd)

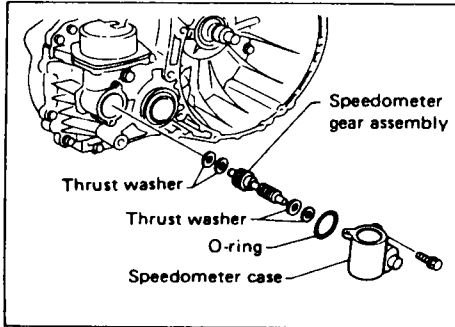


12. Remove speedometer and speedometer gear.

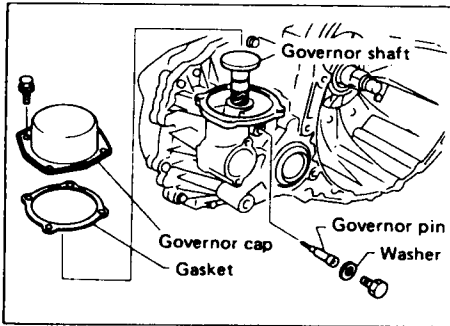


13. Remove governor shaft.

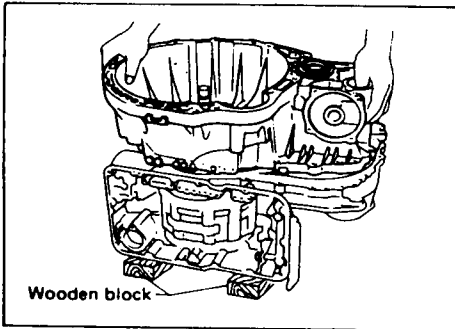

14. Put transaxle assembly on wooden block and remove converter housing.

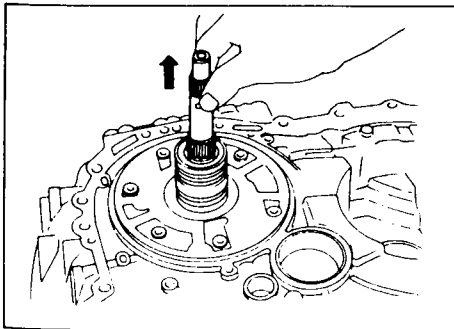

15. Remove final drive assembly and reduction pinion gear.  
16. After removing O-ring from input shaft, extract input shaft from converter housing.

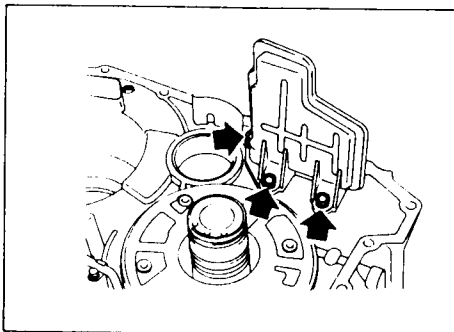


17. Remove oil strainer.







## Technical Service Information Disassembly (Cont'd)

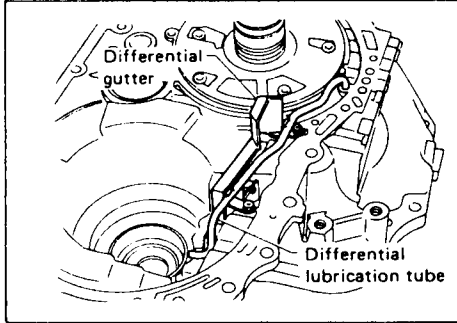


18. Remove differential lubrication tube and gutter.

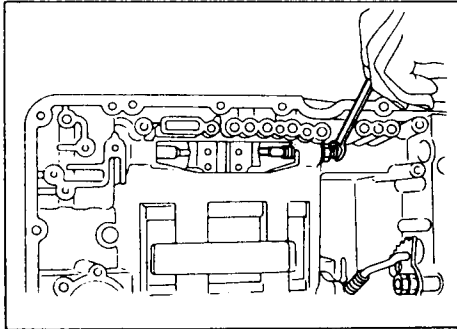


19. Loosen band brake stem lock nut, then back off piston stem.

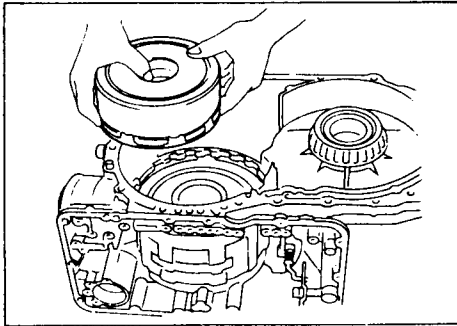

20. Remove brake band and high clutch & reverse clutch pack.

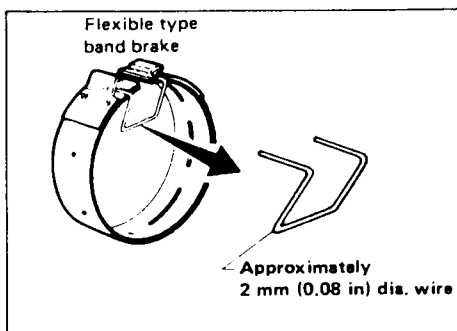


- To prevent brake linings from cracking or peeling, do not stretch the flexible band unnecessarily. Before removing the brake band, always secure it with a clip as shown in the figure at left. Leave the clip in position after removing the brake band.

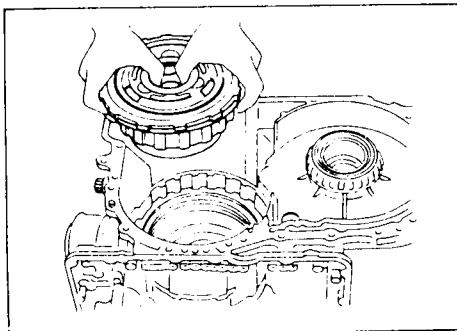


21. Remove one-way clutch, front carrier, rear carrier and low clutch as a set.

22. Remove low & reverse brake clutches, and detach low & reverse brake retainer snap ring pushing retainer.


## Disassembly (Cont'd)

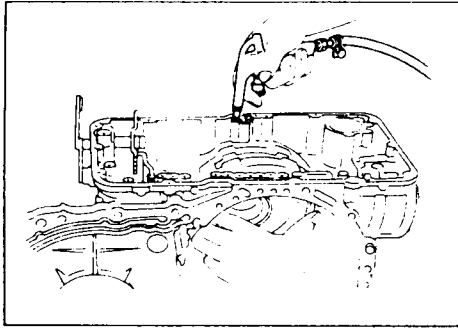


23. Remove low and reverse brake piston with compressed air

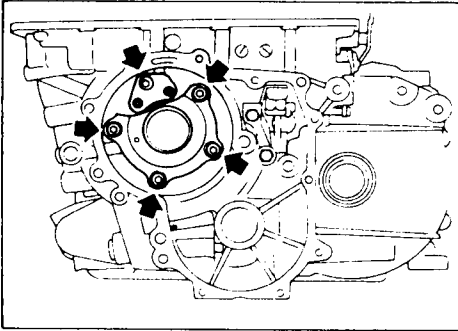


24. Remove bearing retainer assembly.

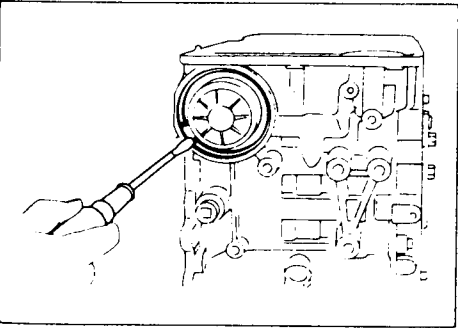

25. Remove band servo snap ring.


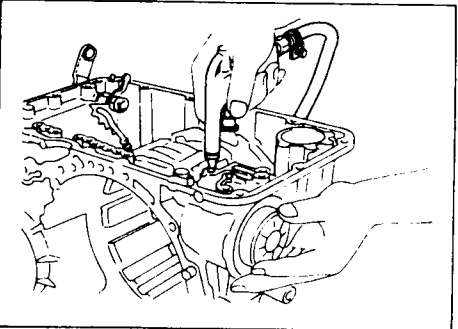


26. Remove band brake servo, retainer and return spring

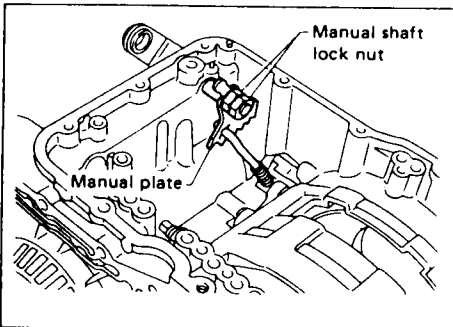


27. Loosen manual shaft lock nuts and remove manual plate.  
28. Pull out retaining pin, then remove manual shaft.

## Oil Pump

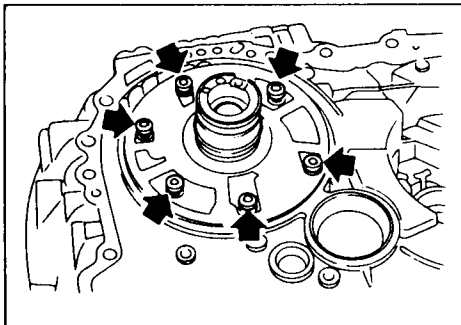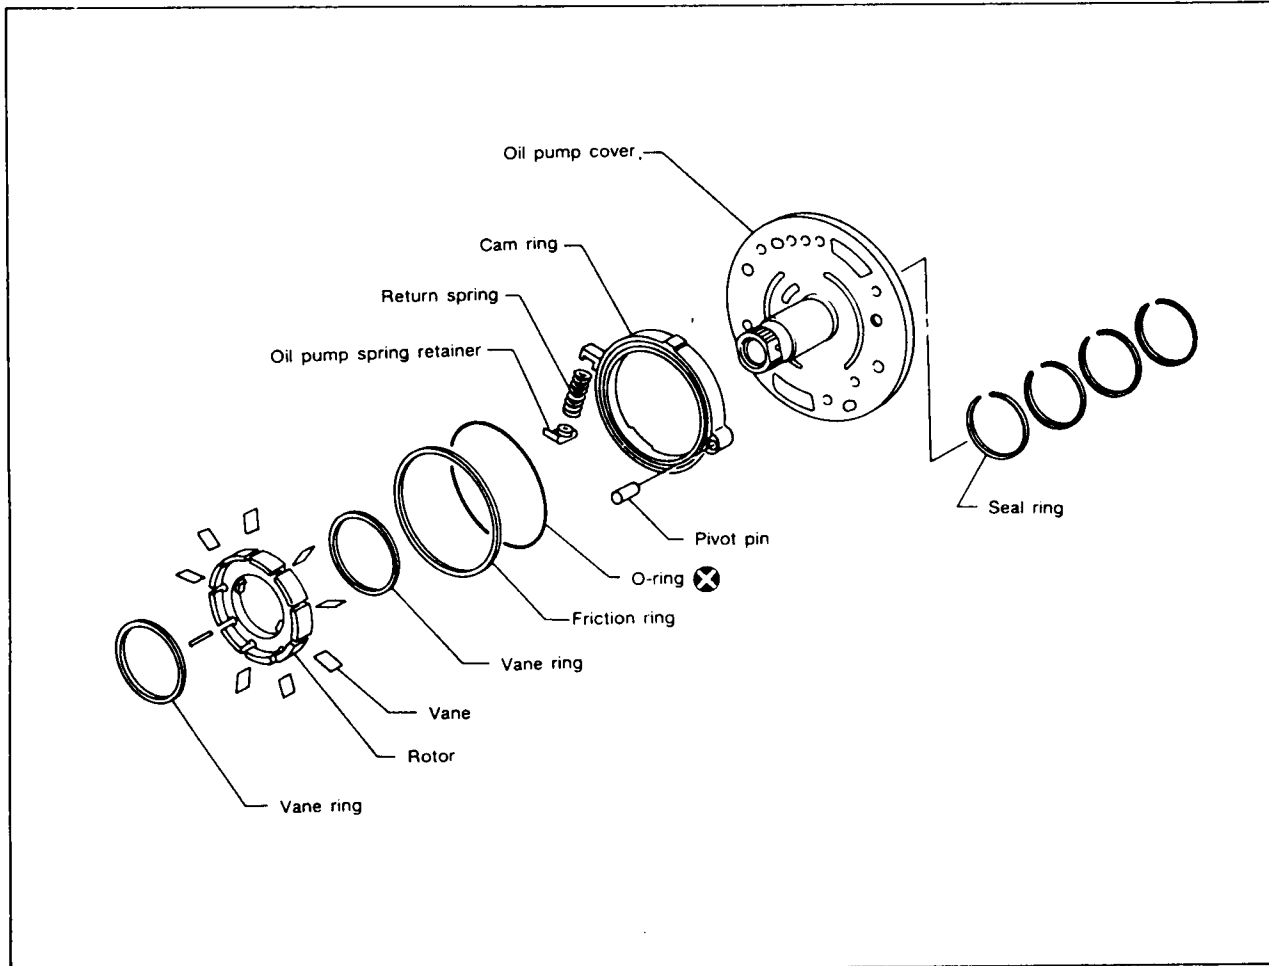

### DISASSEMBLY

1. Remove oil pump cover.

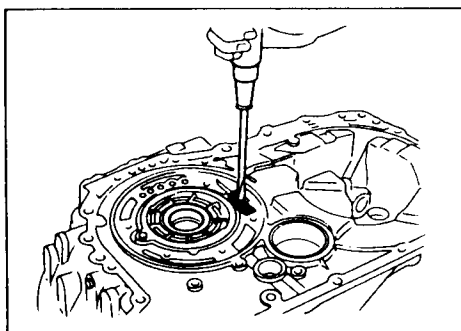

2. Remove return spring taking care not to damage converter housing.

## Oil Pump (Cont'd)

### INSPECTION

1. Inspect oil pump cover, cam ring, rotor and vanes for damage and visible wear.
2. Measure clearance between clutch housing and cam ring, rotor and vanes in at least four places along their circumferences. The maximum measured value should be within the specified range.

- **Be sure to remove friction ring and vane ring when measuring clearance.**

#### Standard clearance:

0.010 - 0.024 mm (0.0004 - 0.0009 in)

(Cam ring to oil pump cover)

0.017 - 0.031 mm (0.0007 - 0.0012 in)

(Rotor to oil pump cover)



0.017 - 0.031 mm (0.0007 - 0.0012 in)

(Vane to oil pump cover)

#### Wear limit:

0.034 mm (0.0013 in)

If the clearance is out of above specification, replace oil pump as an assembly.

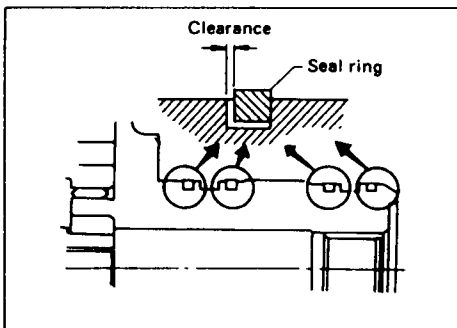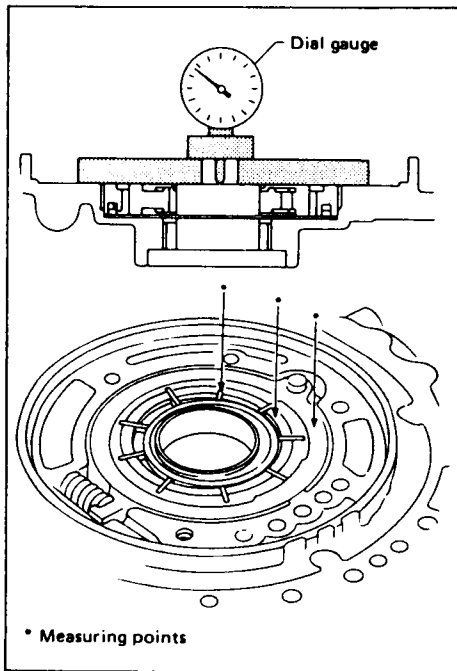


3. Measure clearance between seal ring and ring groove.

#### Standard clearance:

0.10 - 0.25 mm (0.0039 - 0.0098 in)


#### Wear limit:

0.25 mm (0.0098 in)

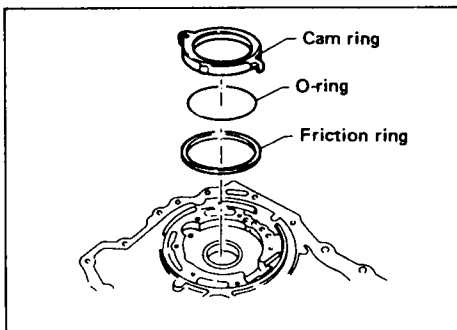

### ASSEMBLY

1. Install cam ring, O-ring and friction ring.

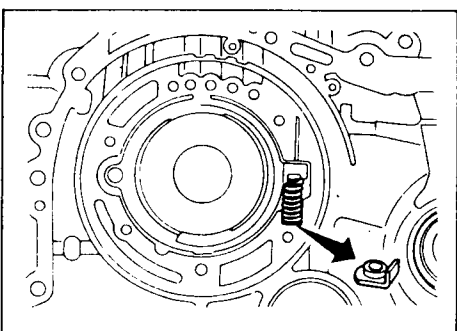


2. Install return spring and spring retainer.




## Technical Service Information

### Oil Pump (Cont'd)

3. Assemble rotor, vanes, rotor support ring and vane rings. Pay attention to direction of rotor.

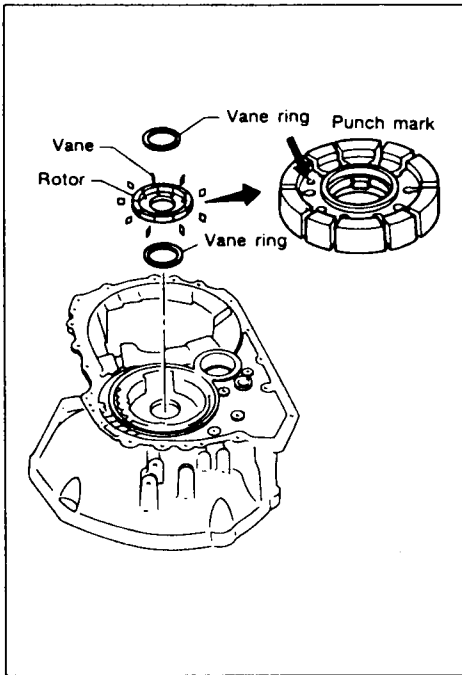


4. Install oil pump cover. Tighten down cover evenly in a criss-cross type pattern.

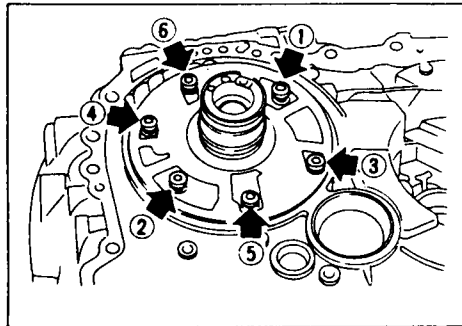



5. Rotate the pump when it has been assembled to ensure that all parts have been correctly assembled.

6. Install seal rings. Refer to the figure at left for proper locations of the two different types of seal rings.

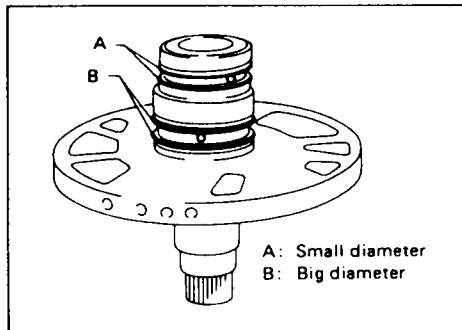


- These seal rings can be cut or deformed if they are improperly seated in their grooves when the drum is installed. Clean the ring grooves carefully and fill them with petroleum jelly. Then install the rings making sure they fit into the grooves as tightly as possible.

## Control Cylinder

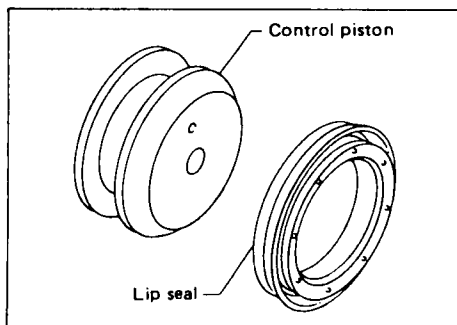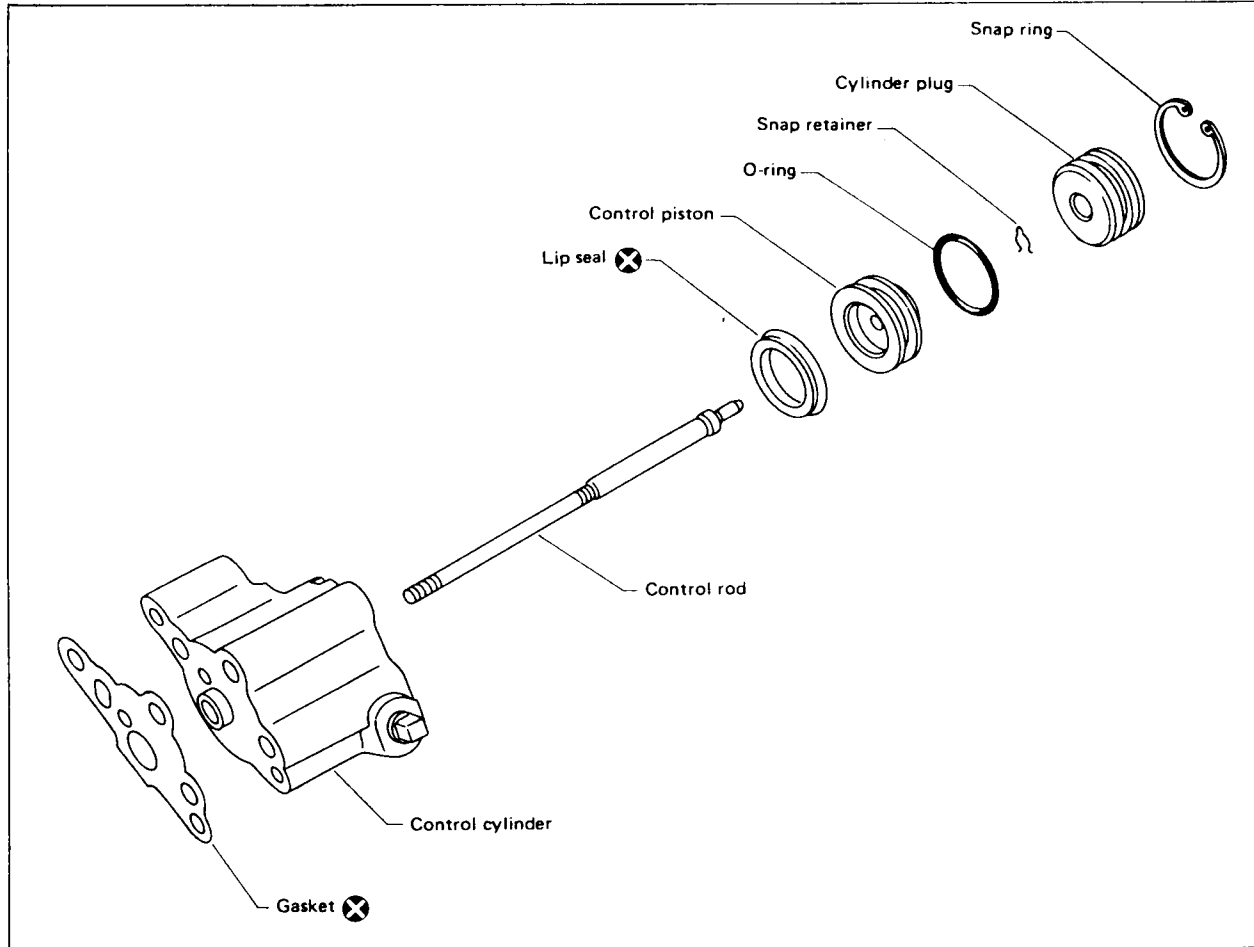

### INSPECTION AND ASSEMBLY

- Inspect control cylinder body, control piston and cylinder plug for scratches or damage. Replace if necessary.
- When assembling, pay attention to the direction of lip seal.

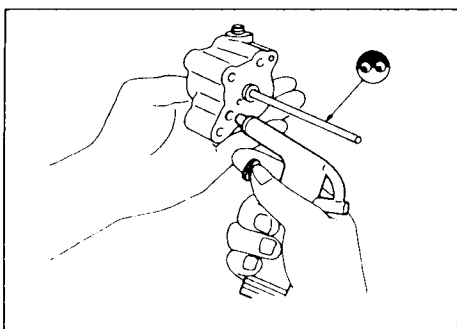


- After assembling, check the operation.



# Technical Service Information



## Control Valve Assembly

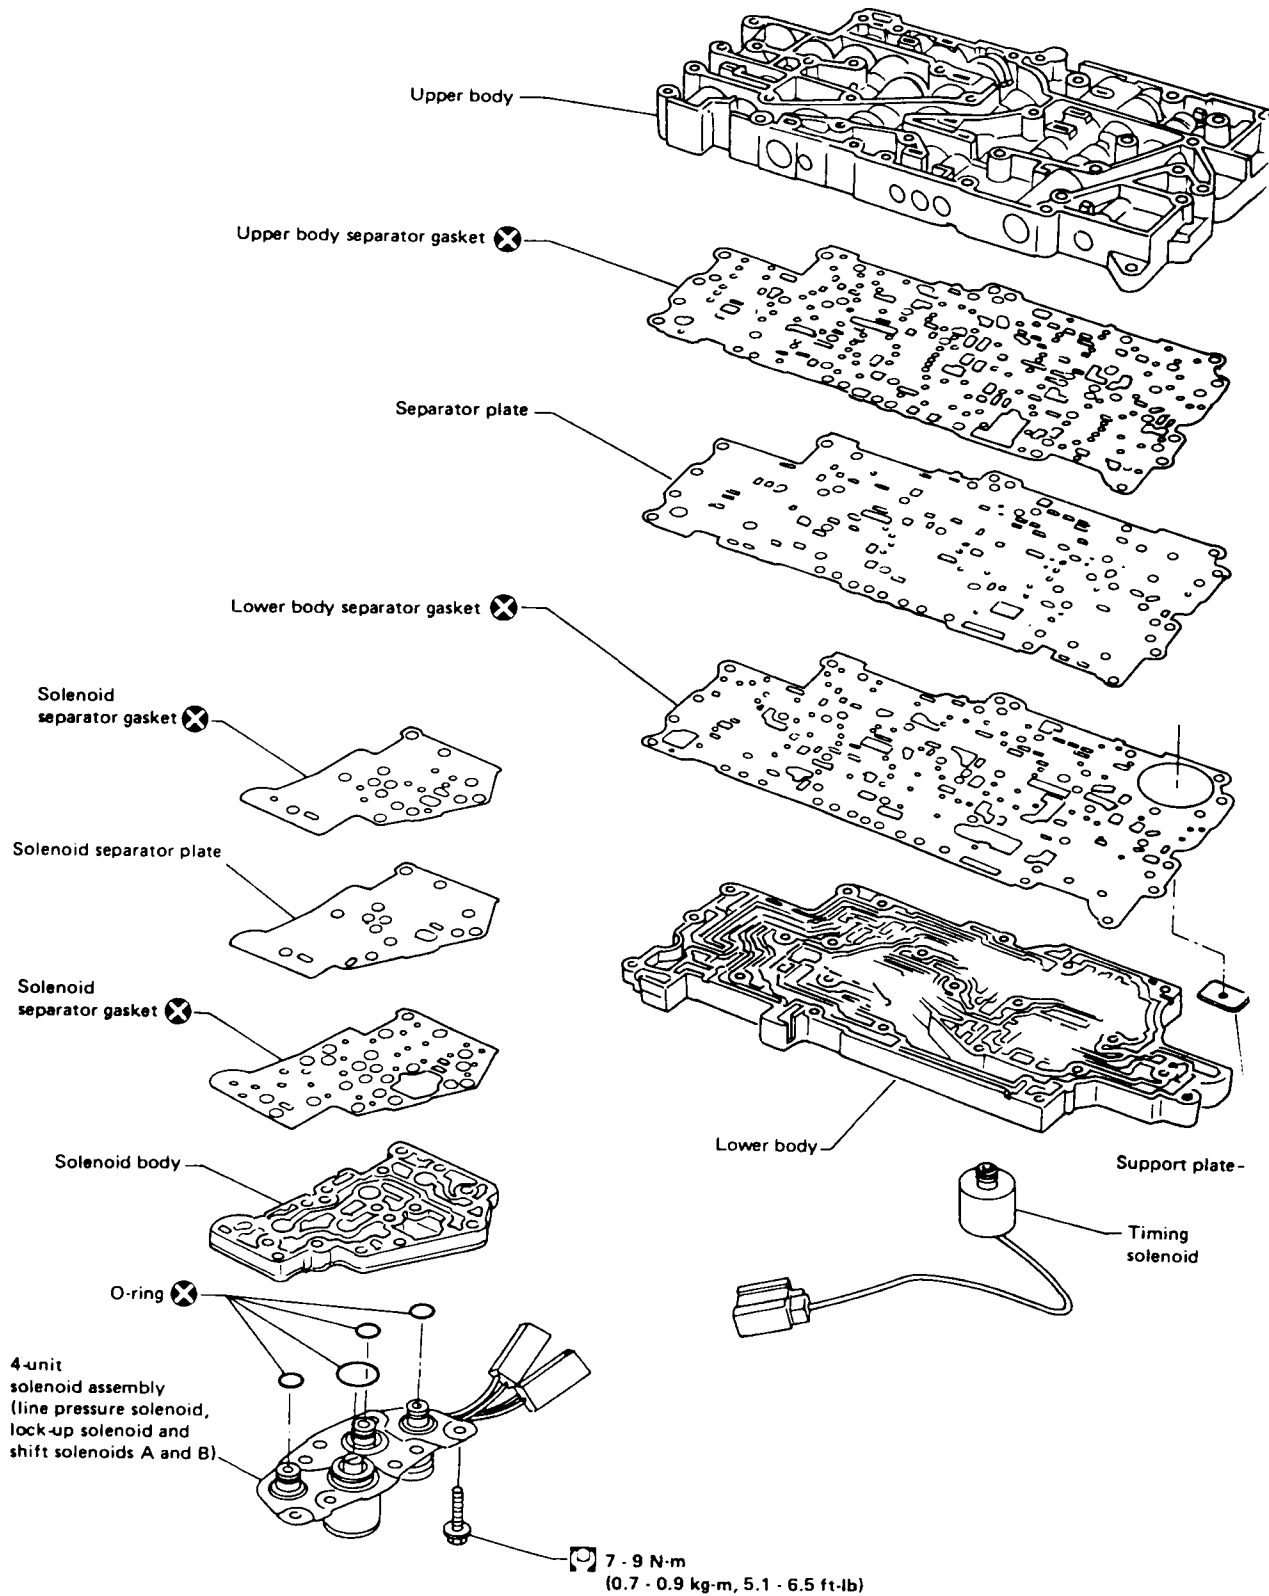


## Control Valve Assembly (Cont'd)

### DISASSEMBLY


1. Remove solenoids.
  - a. Remove timing solenoid.
  - b. Remove O-ring from solenoid.
  - c. Remove shift solenoid A, shift solenoid B, line pressure solenoid and lock-up solenoid.
  - d. Remove O-rings from solenoids.

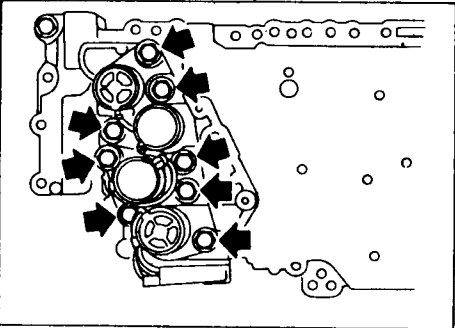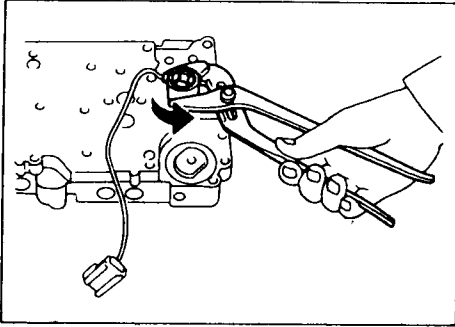


2. Remove solenoid body.
  - a. Place lower body facedown and remove bolts. **Be careful not to drop solenoid body.**

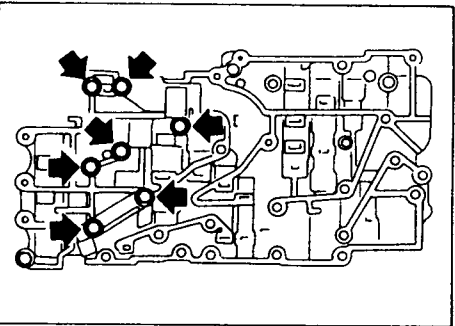

- b. Place upper body face down, and remove solenoid body with separator gaskets and separator plate.
- c. Remove separator gaskets, separator plate and oil filter from solenoid body.

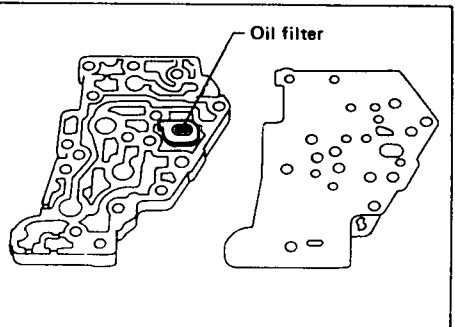

3. Dissassemble upper and lower bodies.
  - a. Place lower body facedown, and remove bolts, reamer bolts and support plate.

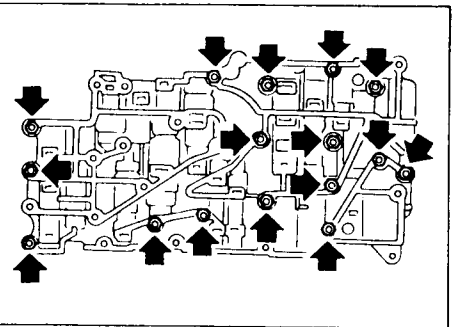







## Technical Service Information



### Control Valve Assembly (Cont'd)

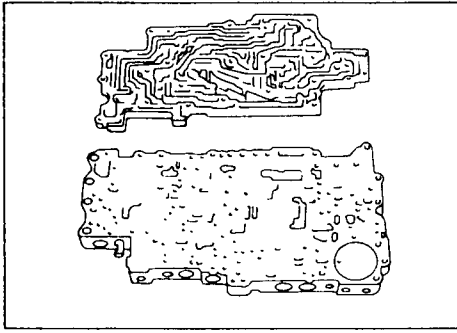

- b. Position upper body downward. Remove lower body with separator plate and separator gasket attached to upper body.

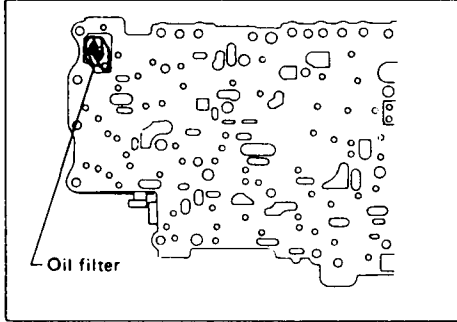

- c. Remove oil filter, separator gaskets and separator plate from upper body.

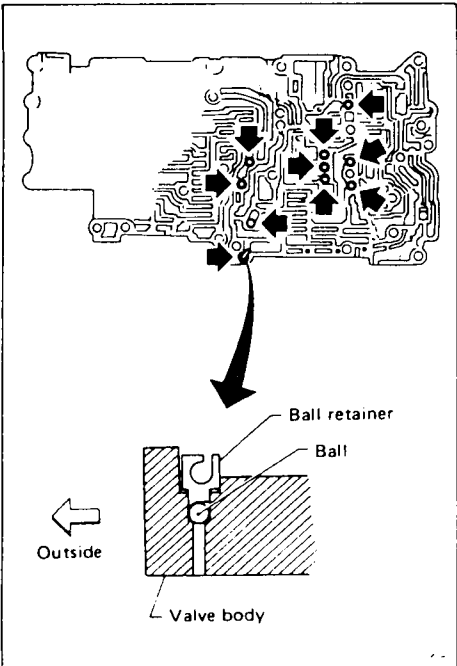
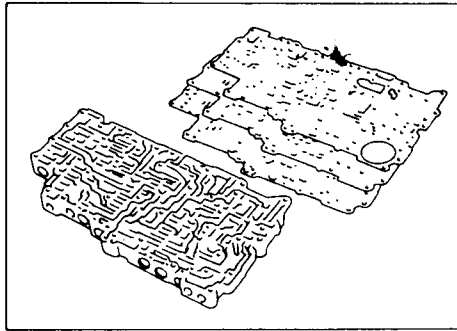


- d. Check to see that steel balls are properly positioned in upper body and then remove them from upper body.

## Control Valve Upper Body


### DISASSEMBLY

1. Remove valves at parallel pins.  
Do not use a magnetic hand.

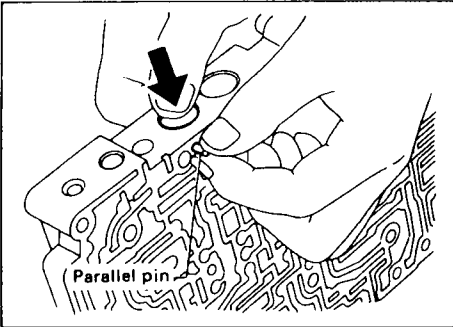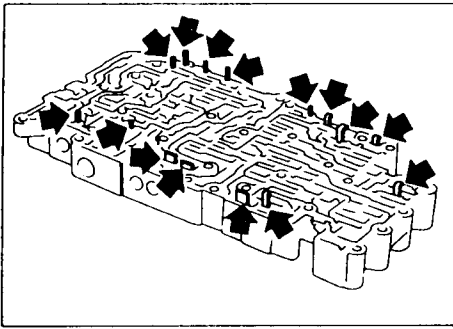


- a. Remove parallel pins while pressing their corresponding plugs and sleeves.

**Remove plug slowly to prevent internal parts from jumping out.**

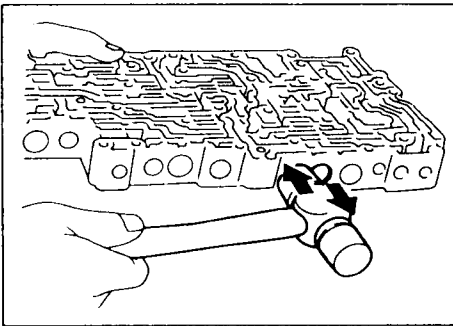


- b. Place mating surface of valve facedown, and remove internal parts.

- If a valve is hard to remove, place valve body facedown and lightly tap it with a soft hammer.
- Be careful not to drop or damage valves and sleeves.

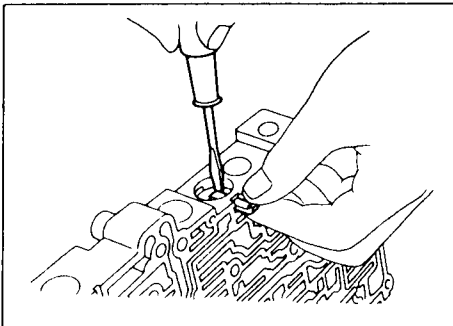

2. Remove valves at retainer plates.

- a. Remove retainer plates while pressing their corresponding plugs, sleeves or springs.

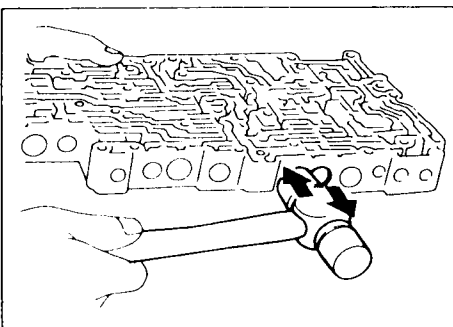


- b. Place mating surface of valve facedown, and remove internal parts.


- If a valve is hard to remove, lightly tap valve body with a soft hammer.
- Be careful not to drop or damage valves, sleeves, etc.



Control Valve Upper Body (Cont'd)

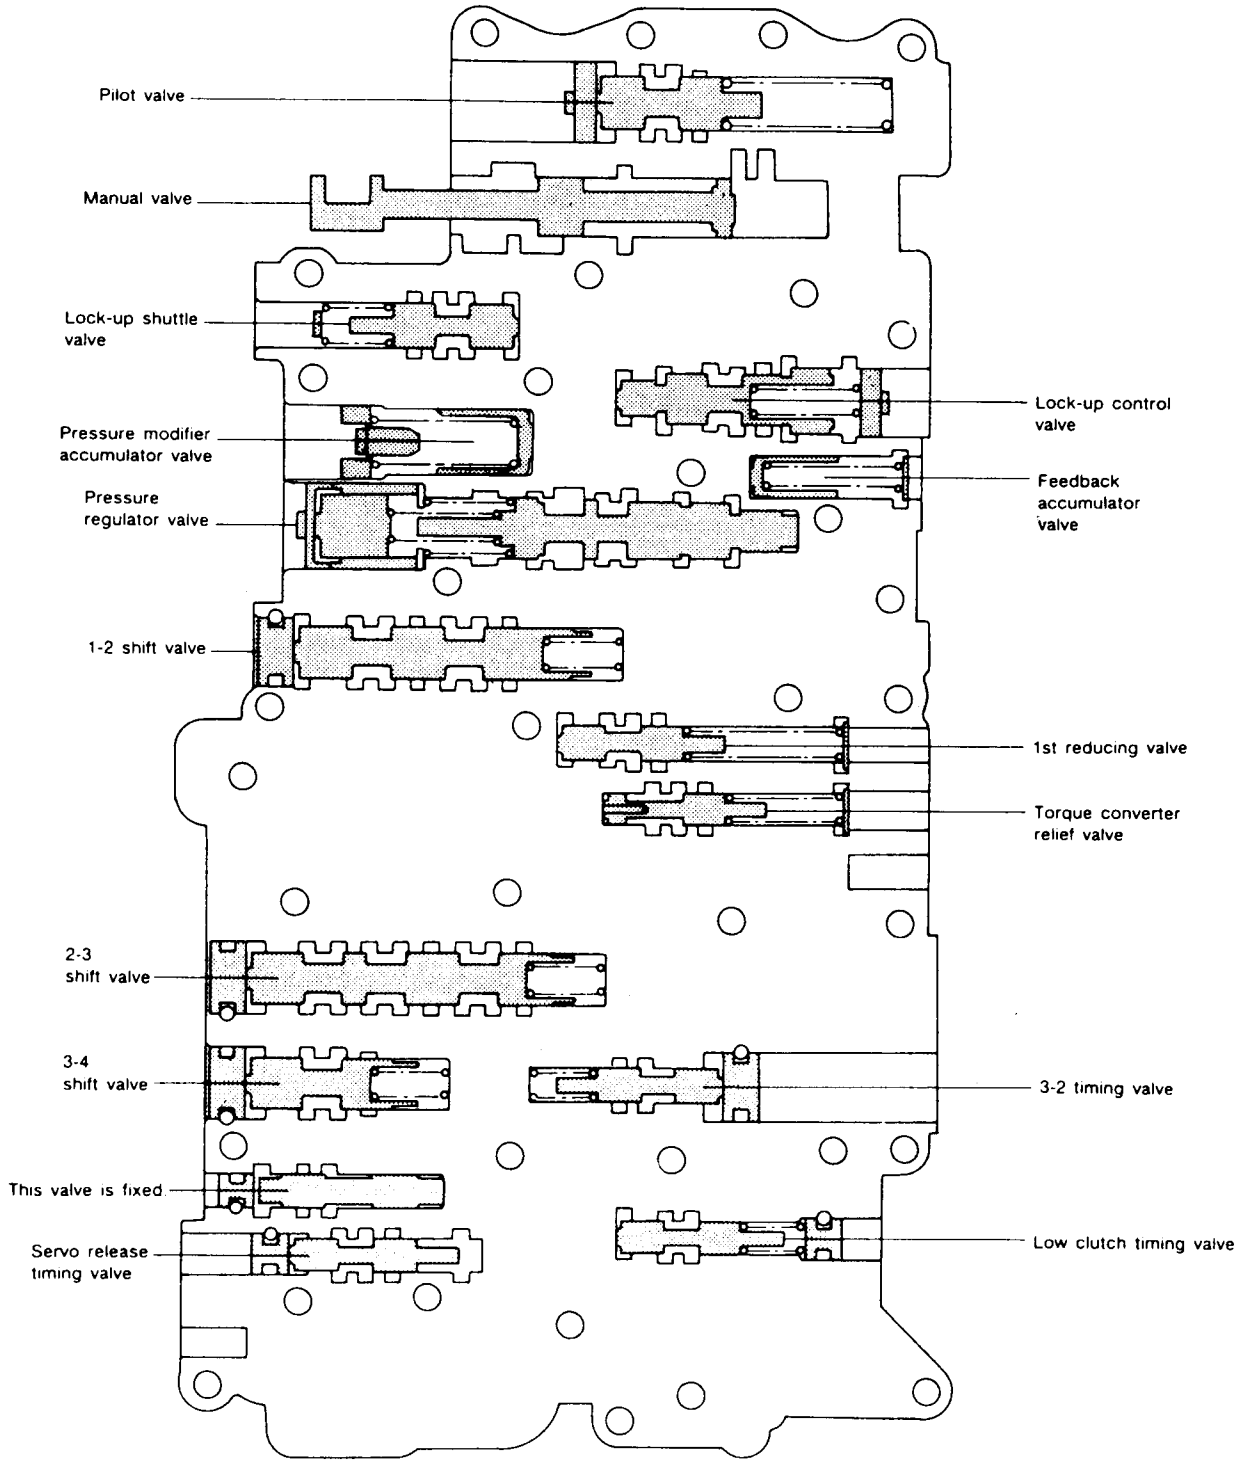

## Control Valve Upper Body

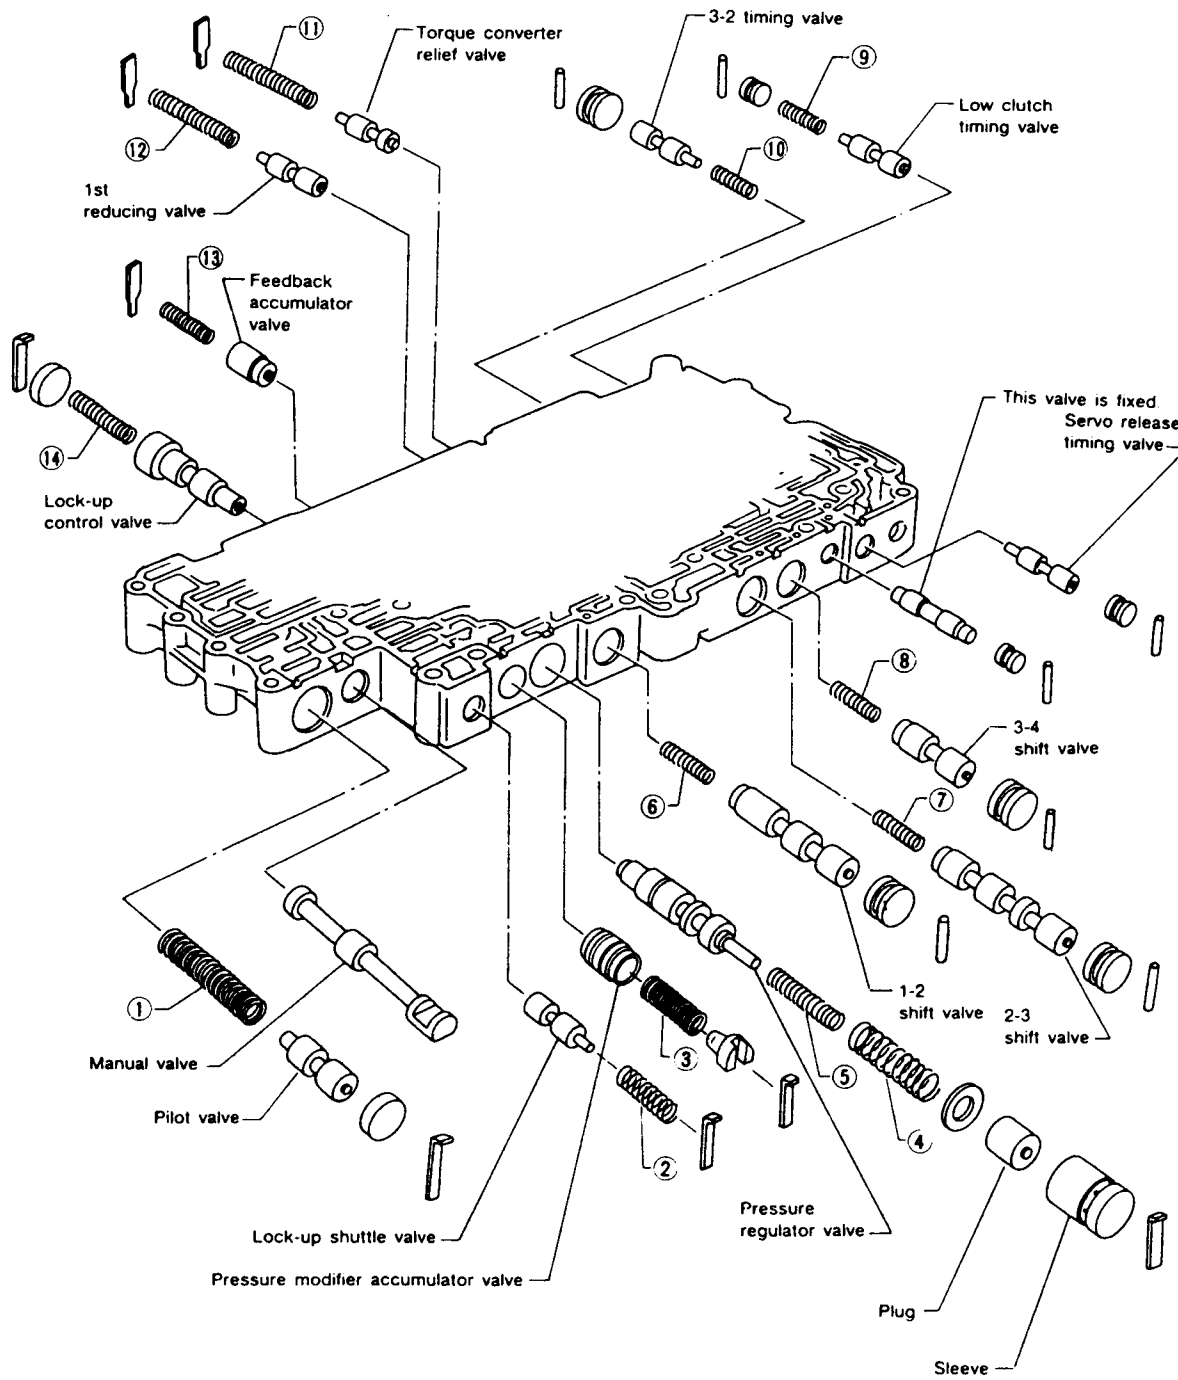




# Technical Service Information

## Control Valve Upper Body (Cont'd)

### INSPECTION

#### Valve springs

- Measure free length and outer diameter of each valve spring. Also check for damage or deformation.
- Numbers of each valve spring listed in table below are the same as those in the figure on AT-108.

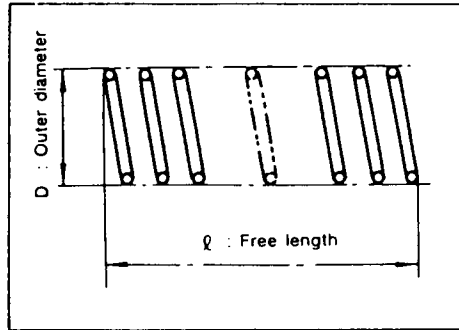

### Inspection standard

Unit: mm (in)

Parts	Item	Part No.	l	D
①	Pilot valve spring	31742-27X60	56.6 (2.228)	10.9 (0.429)
②	Lock-up shuttle valve spring	31742-27X65	28.8 (1.134)	9.0 (0.354)
③	Pressure modifier accumulator valve spring	31742-27X72	30.84 (1.2142)	9.8 (0.386)
④	Pressure regulator valve outer spring	31742-27X61	37.3 (1.469)	12.9 (0.508)
⑤	Pressure regulator valve inner spring	31742-27X62	37.7 (1.484)	7.95 (0.3130)
⑥	1 - 2 shift valve spring	31762-27X61	24.9 (0.980)	7.0 (0.276)
⑦	2 - 3 shift valve spring	31762-27X61	24.9 (0.980)	7.0 (0.276)
⑧	3 - 4 shift valve spring	31762-27X61	24.9 (0.980)	7.0 (0.276)
⑨	Low clutch timing valve spring	31736-01X02	21.7 (0.854)	6.65 (0.2618)
⑩	3 - 2 timing valve spring	31736-01X02	21.7 (0.854)	6.65 (0.2618)
⑪	Torque converter relief valve spring	31742-27X01	44.7 (1.760)	7.0 (0.276)
⑫	1st reducing valve spring	31742-27X67	48.8 (1.921)	6.8 (0.268)
⑬	Feedback accumulator valve spring	31742-27X71	33.75 (1.3287)	6.35 (0.2500)
⑭	Lock-up control valve spring	31742-27X69	41.8 (1.646)	7.0 (0.276)

- Replace valve springs if deformed or fatigued.


### Control valves

- Check sliding surfaces of valves, sleeves and plugs.

### ASSEMBLY


1. Lubricate the control valve body and all valves with A.T.F. Install control valves by sliding them carefully into their bores.

**Be careful not to scratch or damage valve body.**

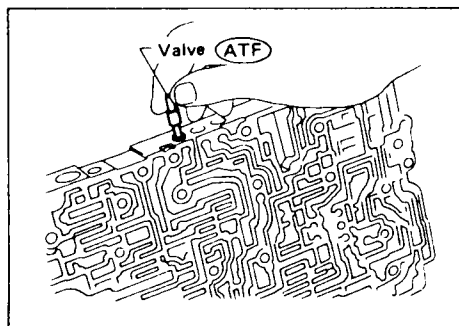


## Control Valve Upper Body (Cont'd)

- Wrap a small screwdriver with vinyl tape and use it to insert the valves into proper position.

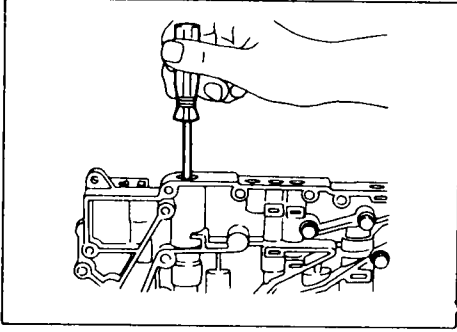


### — Pressure regulator valve —


Position plug in sleeve and install pressure regulator valve on upper body.

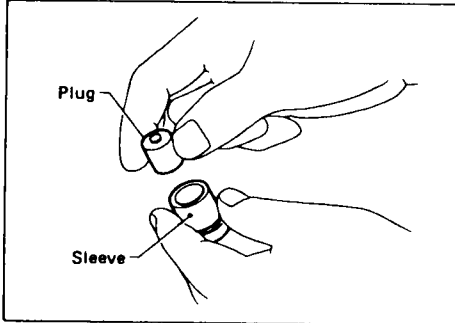


2. Install parallel pins and retainer plates.

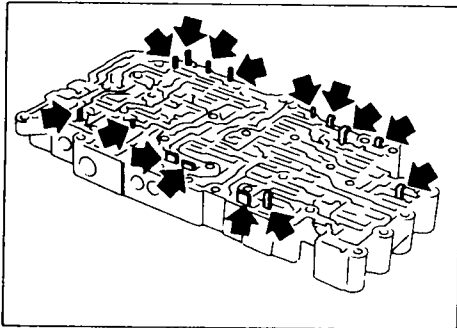


- While pushing plug, install parallel pin.

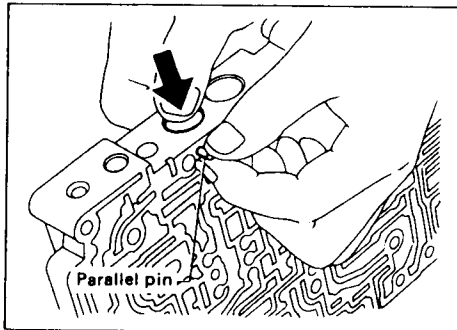

- Insert retainer plate while pressing their corresponding plugs, sleeves or springs.

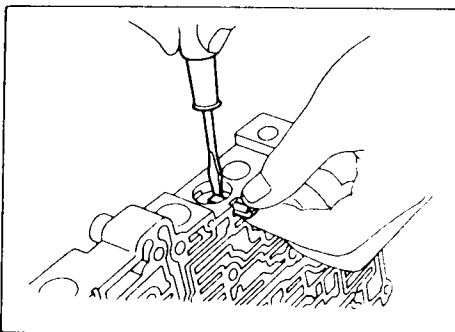

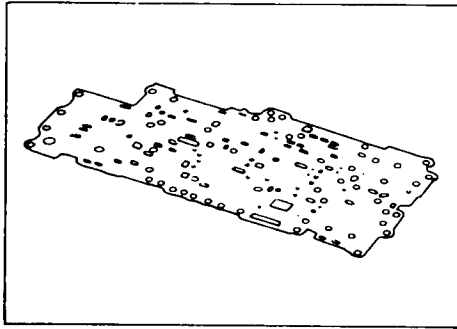


## Control Valve Assembly

### INSPECTION


#### Separator plates

Check to make sure that separator plate is free of damage and not deformed and oil holes are clean.

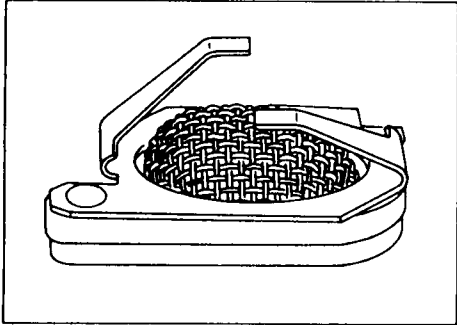


#### Oil filter

Check to make sure that filter is not clogged or damaged.

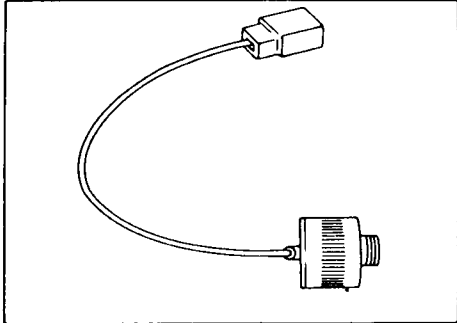


#### Timing solenoid

Measure resistance — Refer to "Electrical Components Inspection".

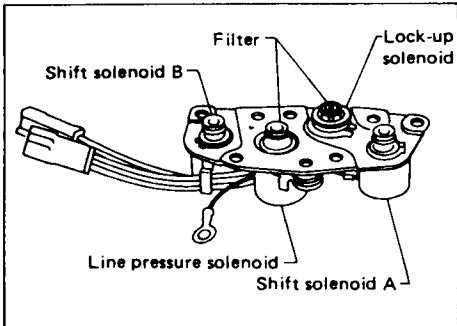

#### 4-unit solenoid assembly (Line pressure solenoid, lock-up solenoid and shift solenoids A and B)


- Check that filter is not clogged or damaged (line pressure solenoid and lock-up solenoid).
- Measure resistance of each solenoid — Refer to "Electrical Components Inspection".

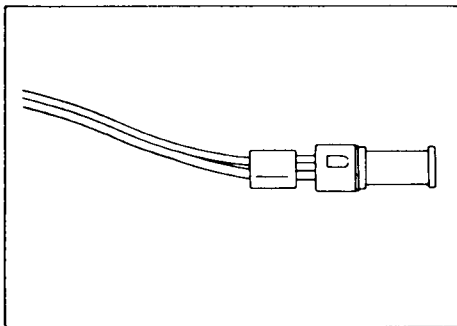


#### Fluid temperature sensor

Measure resistance — Refer to "Electrical Components Inspection".


## Control Valve Assembly (Cont'd)

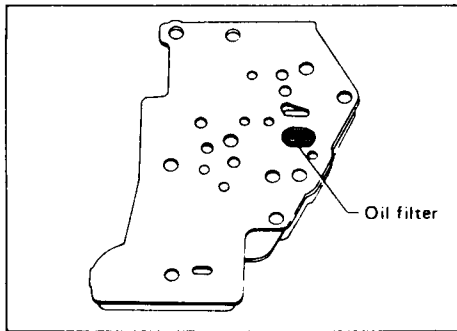

2. Install solenoid body on control valve body.
  - a. Fit oil filter and install solenoid body separator gaskets and separator plate on solenoid body.

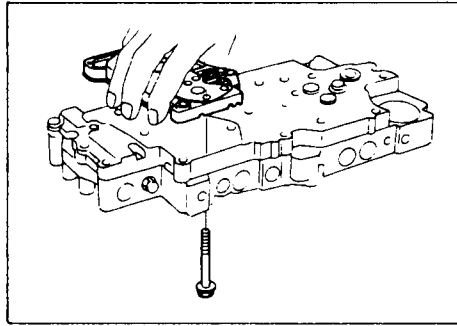


- b. Install solenoid body on control valve body and temporarily tighten bolts.

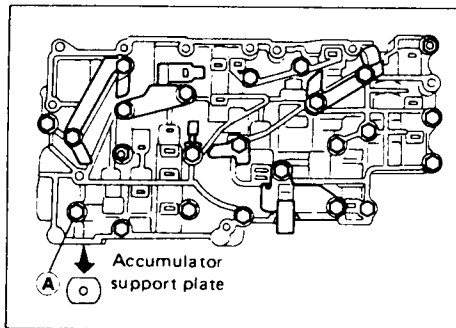


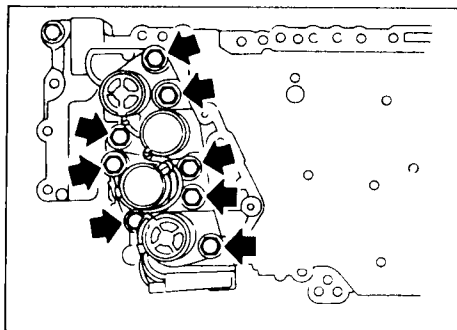
- c. Install accumulator support plate and harness clips in their proper locations, and tighten all bolts.

**Bolt A :**

: 3.4 - 4.4 N·m (0.35 - 0.45 kg-m, 2.5 - 3.3 ft-lb)


**Other bolts:**


: 7 - 9 N·m (0.7 - 0.9 kg-m, 5.1 - 6.5 ft-lb)



3. Install solenoids.

- a. Attach O-ring and install 4-unit solenoid assembly on solenoid body.

: 7 - 9 N·m (0.7 - 0.9 kg-m, 5.1 - 6.5 ft-lb)

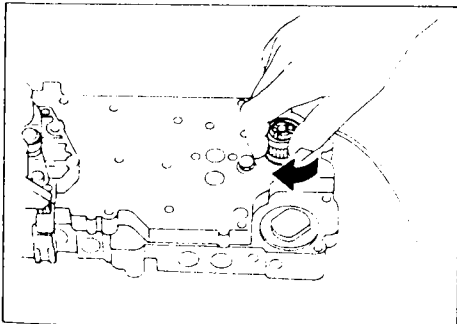




- b. Attach O-ring, and install and tighten timing solenoid firmly





# Technical Service Information

## High Clutch

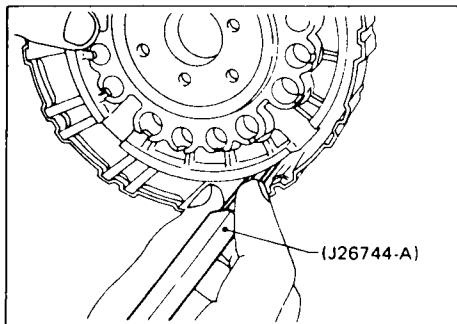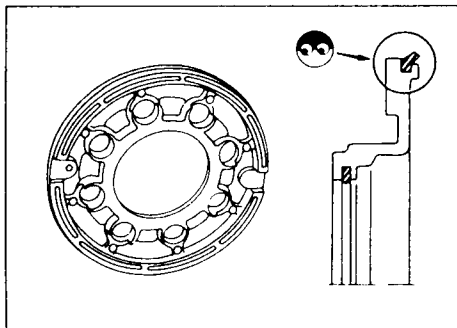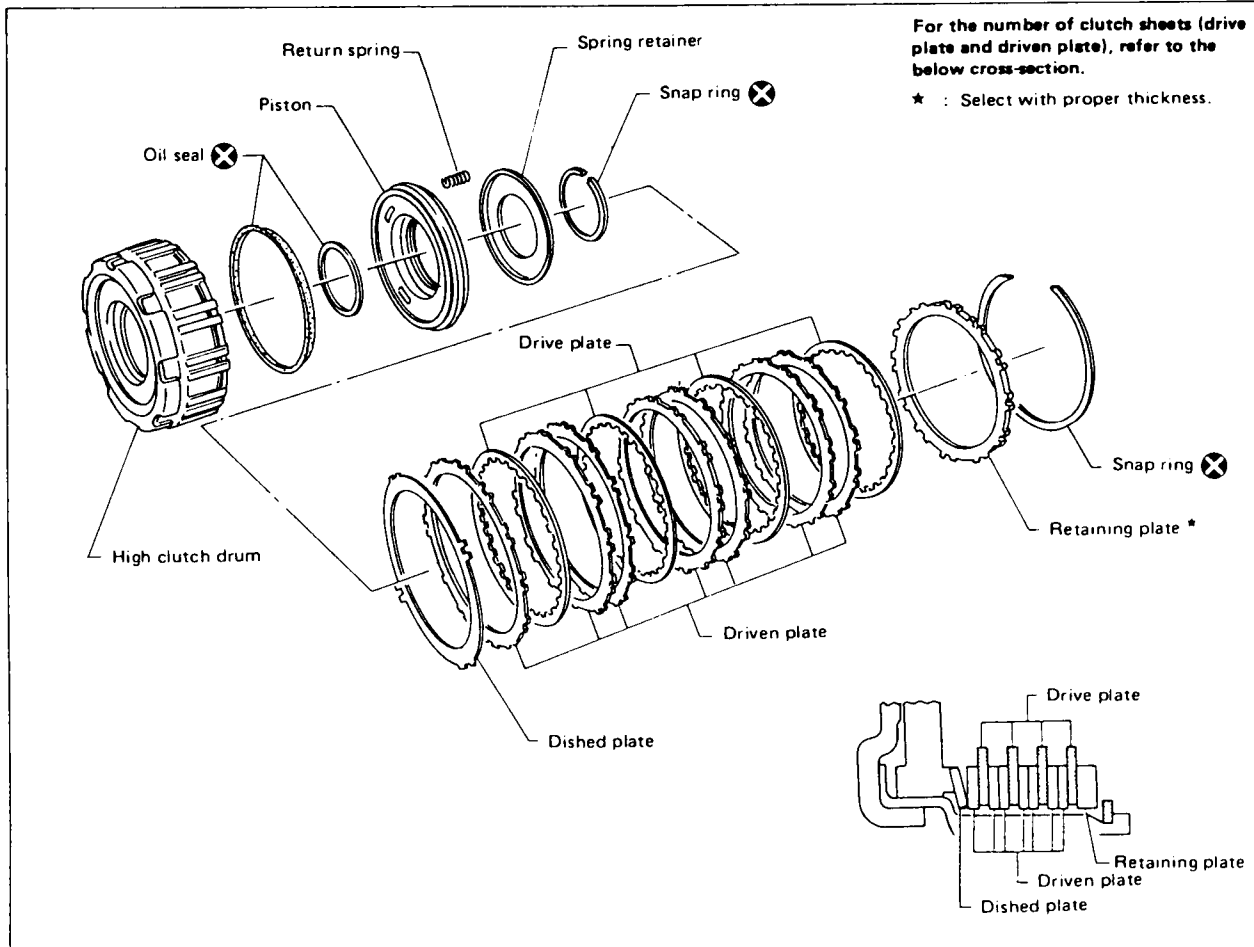

### DISASSEMBLY

- Compress clutch springs and remove snap ring from spring retainer.
- Place clutch drum onto oil pump, and withdraw clutch piston with compressed air.

### INSPECTION AND ASSEMBLY

1. Check clutch drive plate facing for wear or damage.

**Standard drive plate thickness:**

**1.6 mm (0.063 in)**


2. Check for wear on snap ring, weak or broken coil springs, and warped spring retainer.
3. Lubricate clutch drum bushing, and install inner seal and piston seal as illustrated. Be careful not to stretch seals during installation.
  - Never assemble clutch dry; always lubricate its components thoroughly.
  - Always install piston seal in direction shown in figure at left.
4. Assemble piston, being careful not to allow seal to kink or become damaged during installation.

**Use Tool, which does not damage lip seal, to make sure the lip seal goes into place.**




# Technical Service Information


## High Clutch (Cont'd)

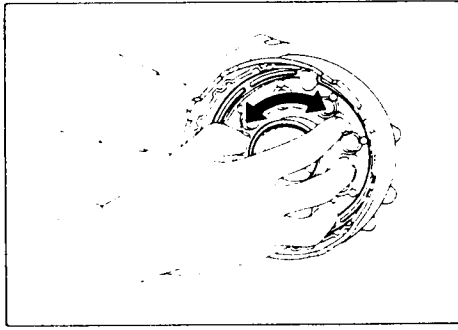

- After installing piston, turn piston by hand to ensure that there is no binding.

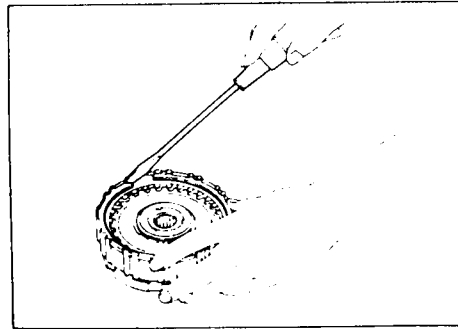

5. Install clutch springs.
6. Reinstall snap ring. Be sure snap ring is properly seated.

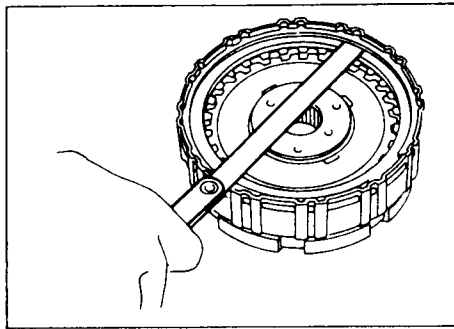

7. Install driven plates, drive plates, and secure with snap ring

8. Measure clearance between retaining plate and snap ring. Always measure the existing minimum clearance, since snap ring is a wave type.

### Specified clearance:

#### Standard


1.4 - 1.8 mm (0.055 - 0.071 in)

#### Allowable limit

2.6 mm (0.102 in)




### Retaining plate of high clutch

Thickness mm (in)	Part number
3.6 (0.142)	31567-21X00
3.8 (0.150)	31567-21X01
4.0 (0.157)	31567-21X02
4.2 (0.165)	31567-21X03
4.4 (0.173)	31567-21X04
4.6 (0.181)	31567-21X05
4.8 (0.189)	31567-21X06

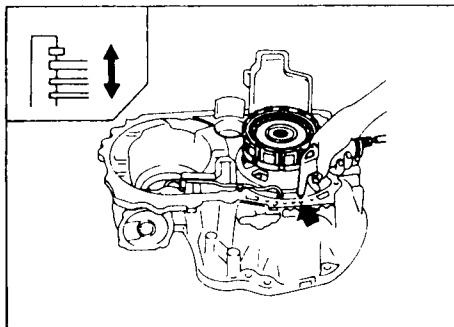

9. Check high clutch operation using compressed air.

## Low Clutch

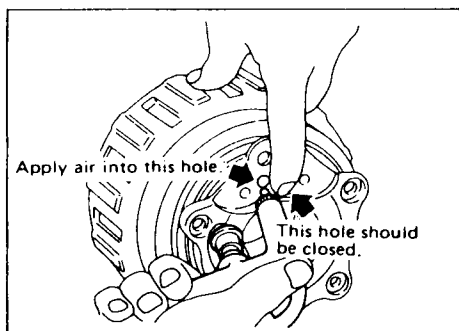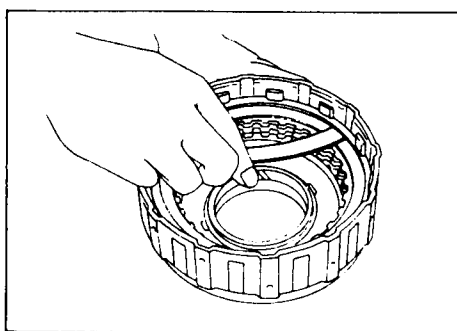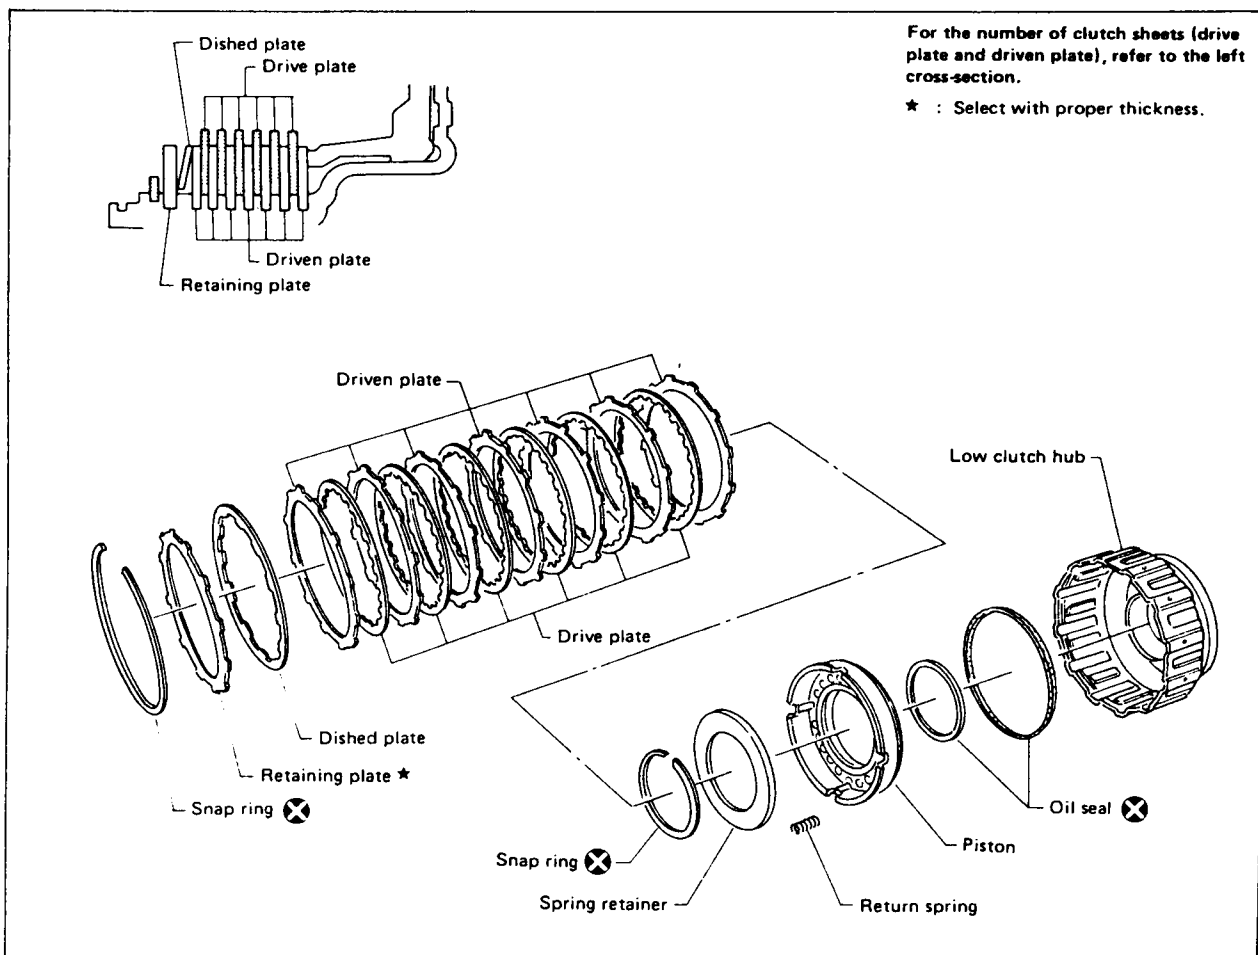



- Use Tool to remove the clutch spring snap ring.
- Service procedures for low clutch are essentially the same as those for high clutch, with the following exception:  
**Specified clearance between retaining plate and snap ring:**  
**Standard**  
 0.5 - 0.8 mm (0.020 - 0.031 in)  
**Allowable limit**  
 2.0 mm (0.079 in)

### Retaining plate of low clutch

Thickness mm (in)	Part number
3.2 (0.126)	31597-21X10
3.4 (0.134)	31597-21X11
3.6 (0.142)	31597-21X12
3.8 (0.150)	31597-21X13
4.0 (0.157)	31597-21X14
4.2 (0.165)	31597-21X15

- After assembly, check the operation of clutch.

## Reverse Clutch

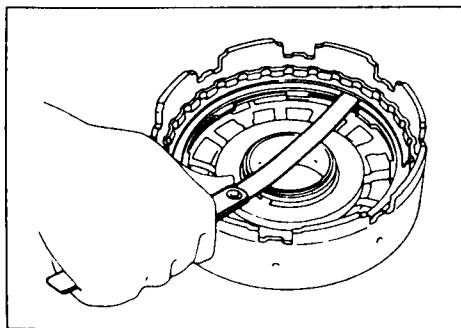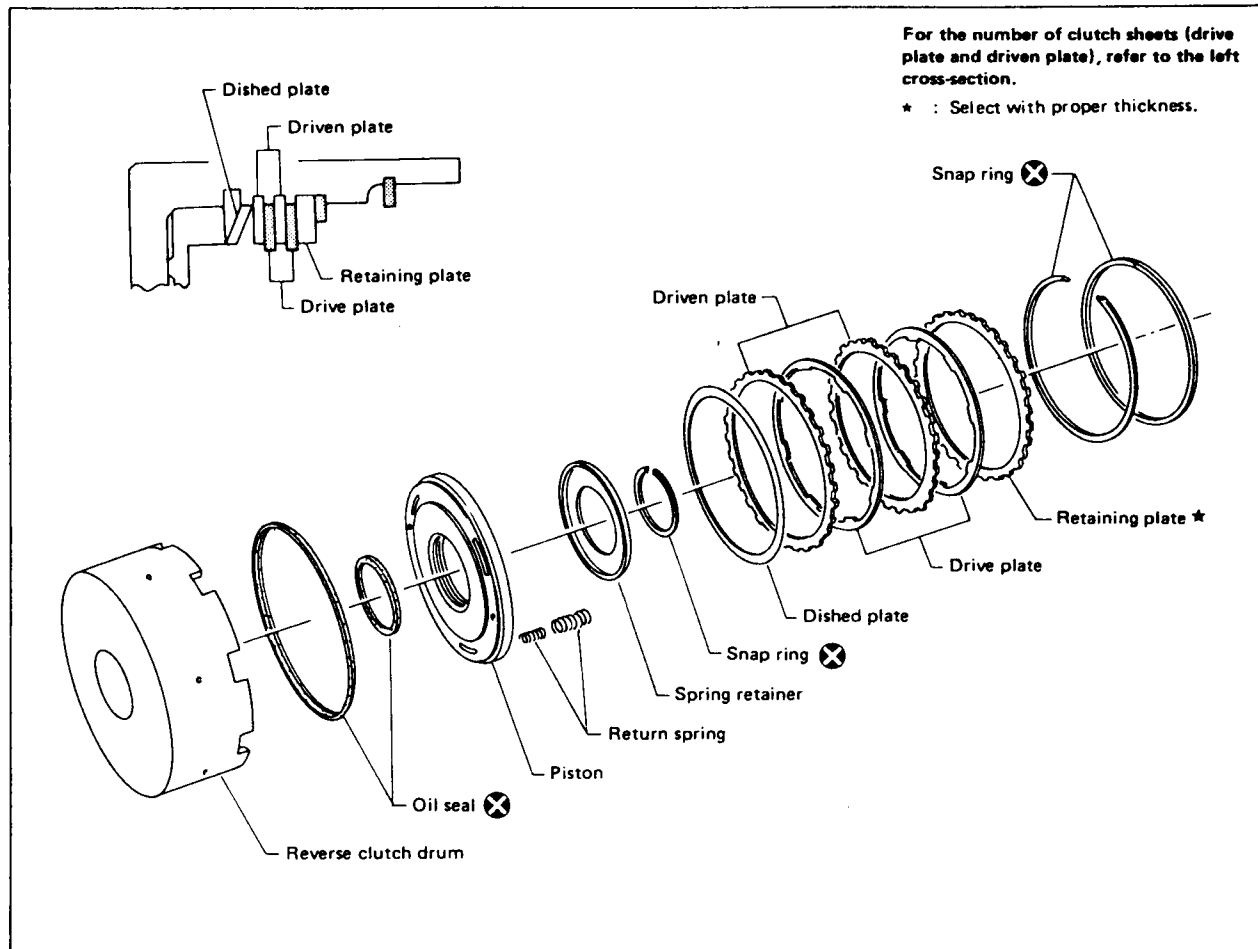

Service procedures for reverse clutch are essentially the same as those for high clutch, with the following exception:

- Remove reverse clutch piston.


**Specified clearance between retaining plate and snap ring:**

**Standard**

0.5 - 0.8 mm (0.020 - 0.031 in)

**Allowable limit**

1.2 mm (0.047 in)

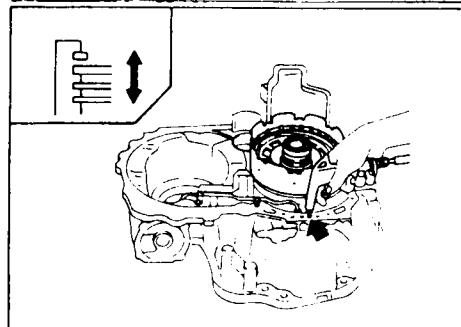

**Retaining plate of reverse clutch**


Thickness mm (in)	Part number
4.6 (0.181)	31537-21X10
4.8 (0.189)	31537-21X11
5.6 (0.220)	31537-21X12
5.8 (0.228)	31537-21X13
6.0 (0.236)	31537-21X14

- After assembly, check the operation of clutch.



# Technical Service Information

## Low & Reverse Brake

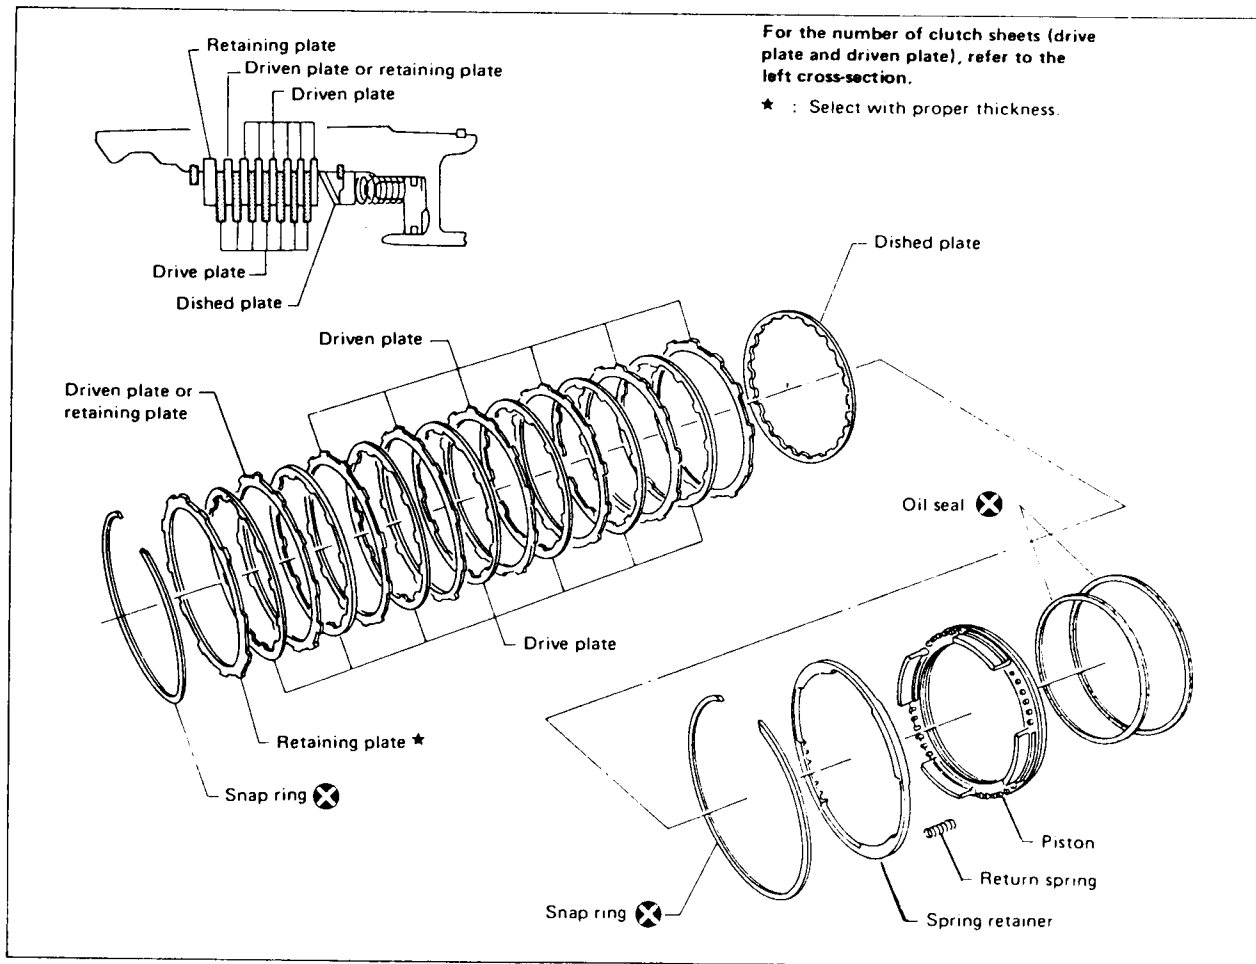

Adjust clearance using driven plate at part A first. If clearance exceeds specified value after using 5.0 mm (0.197 in) retaining plate (31667-23X08), remove driven plate and install 3.4 mm (0.134 in) retaining plate (31667-23X00). Readjust clearance by using another suitable retaining plate.

### INSPECTION

- Examine low and reverse brake for damaged clutch drive plate facing and worn snap ring.
- Check drive plate facing for wear or damage; if necessary, replace.

Specified clearance between retaining plate and snap ring:

Standard


1.2 - 1.6 mm (0.047 - 0.063 in)

Allowable limit



3.0 mm (0.118 in)

### Retaining plate of low & reverse brake

Thickness mm (in)	Part number
3.4 (0.134)	31667-23X00
3.6 (0.142)	31667-23X01
3.8 (0.150)	31667-23X02
4.0 (0.157)	31667-23X03
4.2 (0.165)	31667-23X04
4.4 (0.173)	31667-23X05
4.6 (0.181)	31667-23X06
4.8 (0.189)	31667-23X07
5.0 (0.197)	31667-23X08

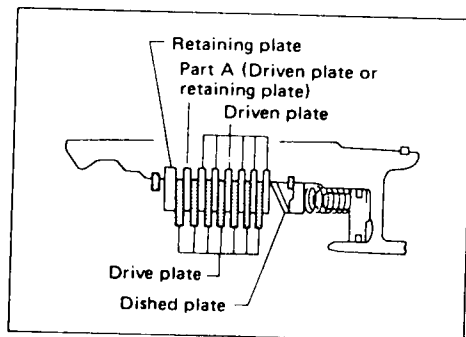

## Brake Band and Band Servo

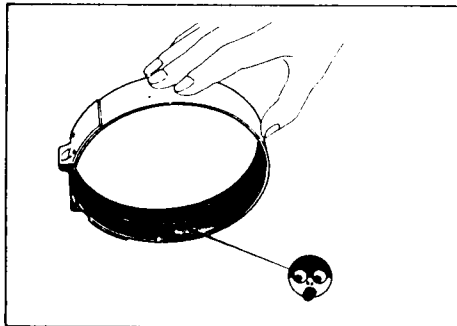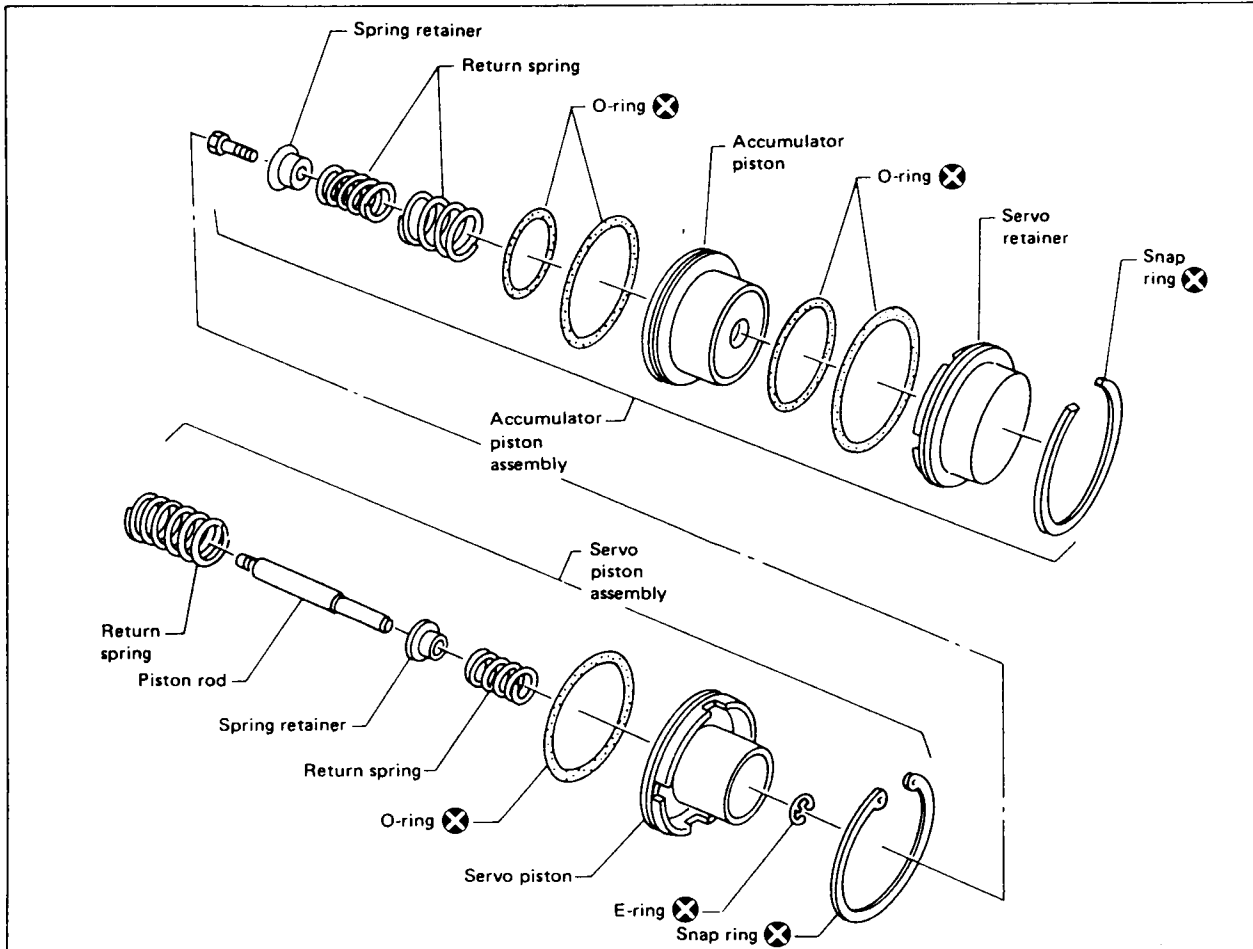


### INSPECTION

- Inspect band friction material for wear. If cracked, chipped or burnt spots are apparent, replace the band.
- Check band servo components for wear and scoring.



## Technical Service Information

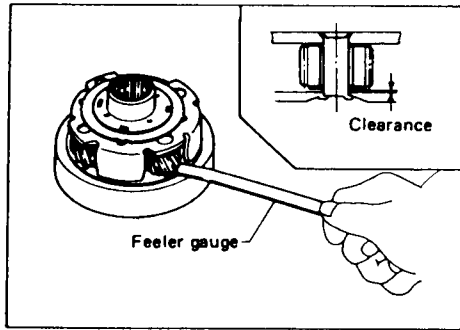

### Planetary Carrier

#### INSPECTION

- Check clearance between pinion washer and planetary carrier with a feeler gauge.

#### Standard clearance:

##### Front carrier


0.15 - 0.70 mm (0.0059 - 0.0276 in)

##### Rear carrier

0.20 - 0.70 mm (0.0079 - 0.0276 in)

Replace if the clearance exceeds 0.80 mm (0.0315 in).

- Check planetary gear sets and bearings for damaged or worn gears.

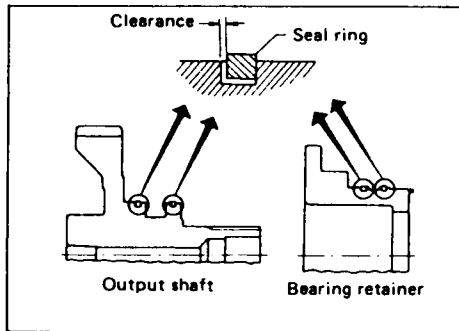

### Bearing Retainer and Output Shaft

#### INSPECTION


Measure clearance between seal ring and ring groove.

#### Standard clearance:

0.10 - 0.25 mm (0.0039 - 0.0098 in)

#### Wear limit:


0.25 mm (0.0098 in)

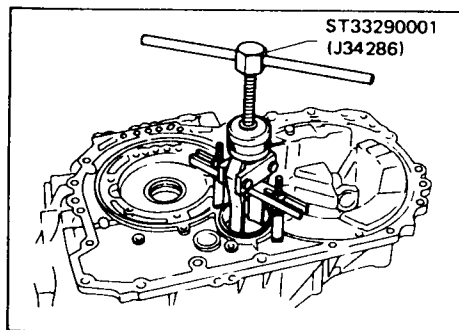

### Converter Housing and Transmission Case



#### BEARING OUTER RACE

- Reduction pinion gear front bearing outer race

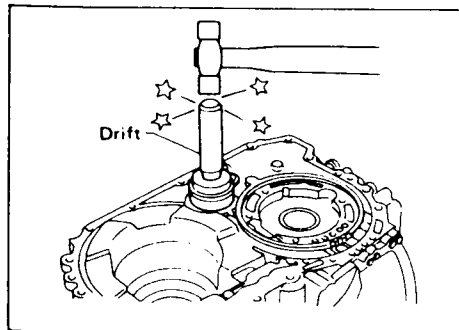


### Converter Housing and Transmission Case (Cont'd)

- Differential side bearing outer race

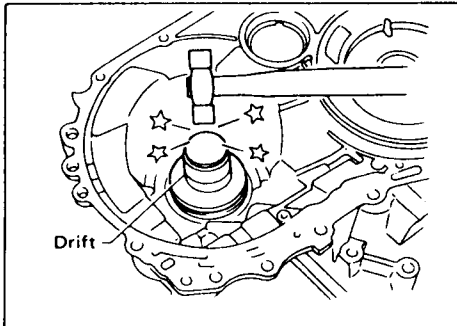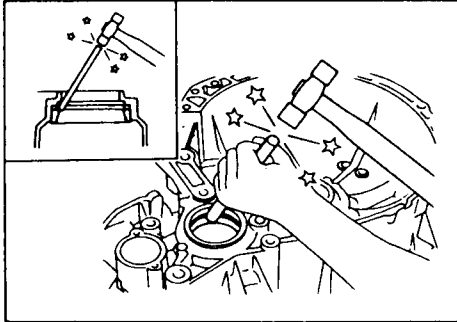


### OIL SEAL

- Torque converter oil seal

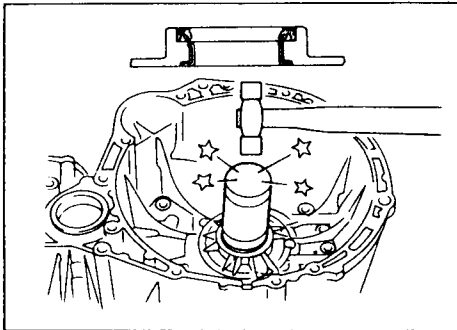

- Differential side oil seal


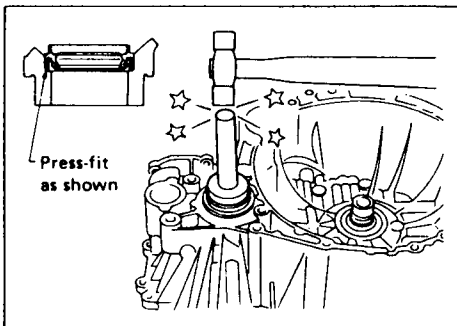







# Technical Service Information

## Final Drive

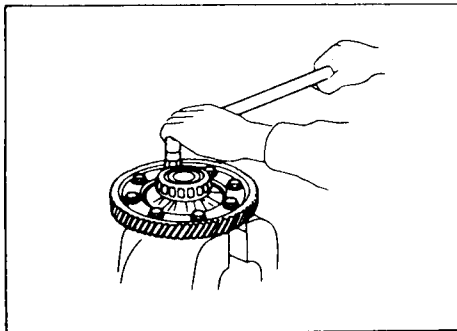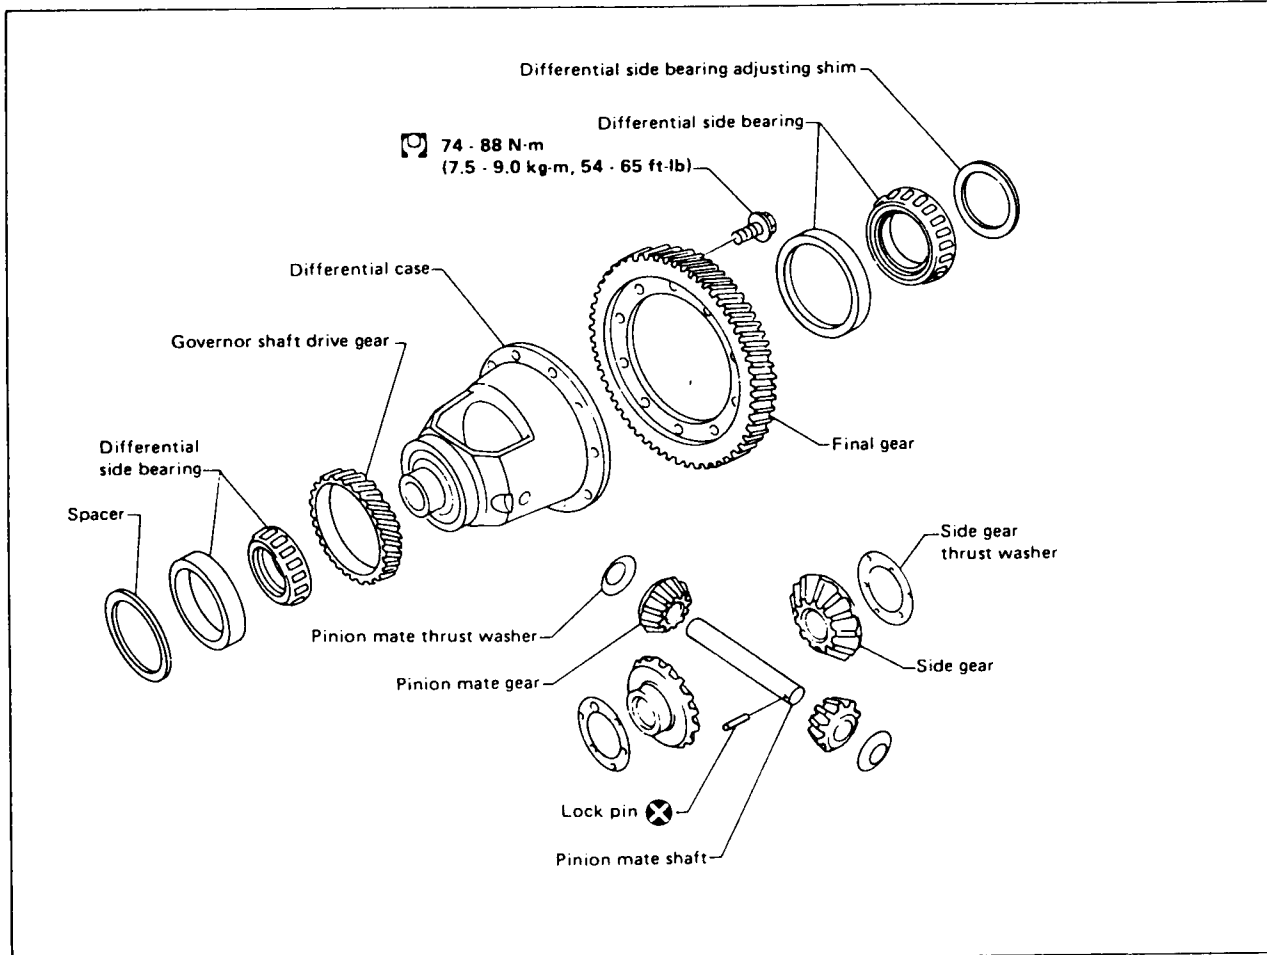

### DISASSEMBLY


1. Remove final gear.

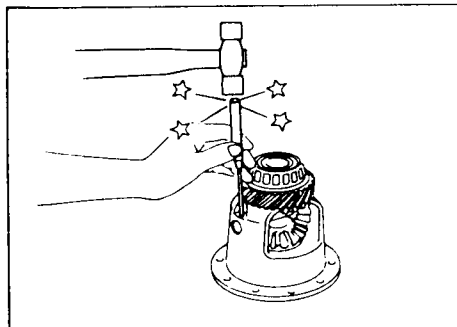


2. Drive out pinion mate shaft lock pin and draw out pinion mate shaft.

## Final Drive (Cont'd)

3. Remove governor shaft drive gear.

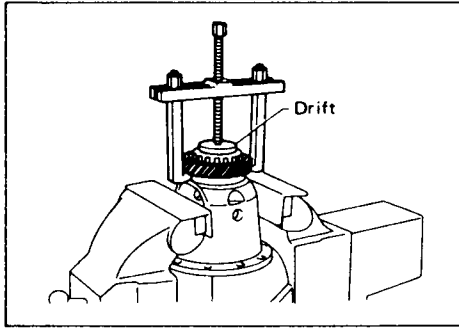


4. Drive out differential side bearing outer race and inner cone.

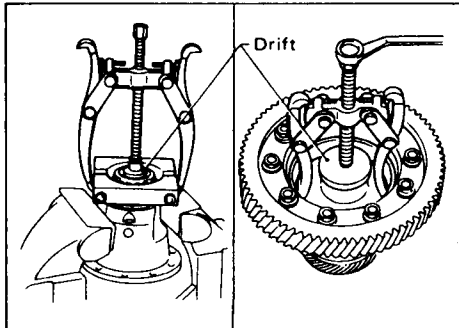


## INSPECTION

1. Check mating surface of differential case, side gears and pinion mate gears. Replace as required.

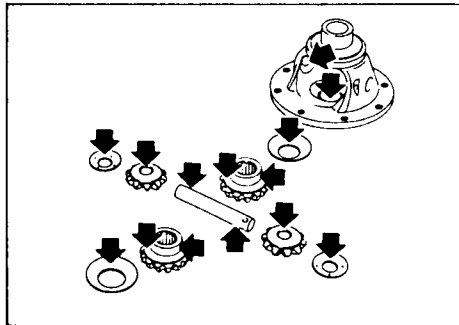

2. Check clearance between side gear and differential case with washer following the procedure below.

a. Set Tool and dial gauge on side gear.

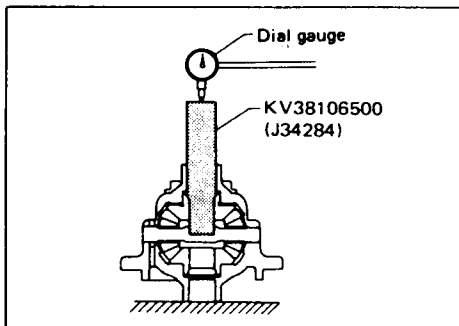


b. Move side gear up and down to measure dial gauge deflection. Always measure gauge deflection on both side gears.

**Clearance between side gear and differential case with washer:**

**0.1 - 0.2 mm (0.004 - 0.008 in)**

c. If clearance exceeds the specified value, check for wear and replace necessary parts.

3. Check tapered roller bearings for wear, scratches, pitching or flaking.

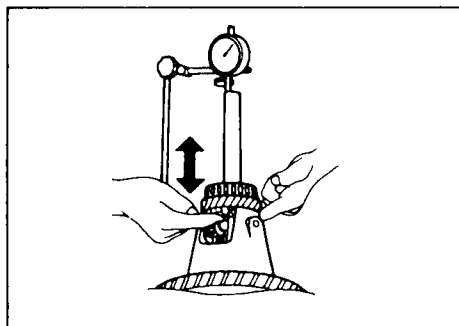





## Technical Service Information

### Final Drive (Cont'd)

#### ASSEMBLY

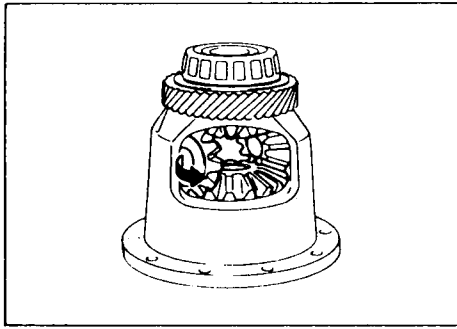


1. Install the side gear and thrust washer in the differential case.
2. Install the pinion mate gear and thrust washer in the differential case while rotating them.

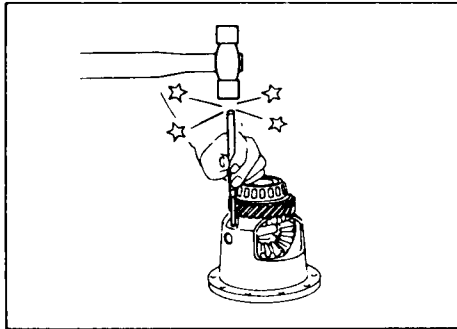

3. Insert pinion mate shaft.  
**When inserting, be careful not to damage pinion mate washers.**


4. Measure clearance between side gear and pinion mate gear, referring to "Inspection". If necessary, adjust.

\* Side gear to pinion mate clearance:  
0.1 - 0.2 mm (0.004 - 0.008 in)

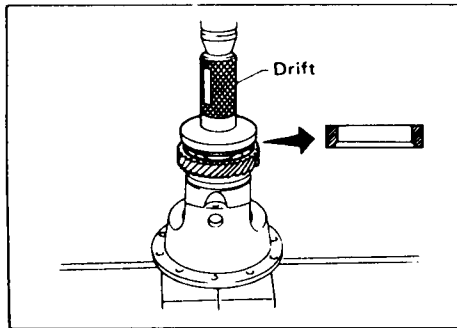

5. Install pinion mate shaft lock pin using a punch.  
**Make sure that lock pin is flush with case.**

6. Install governor shaft drive gear.

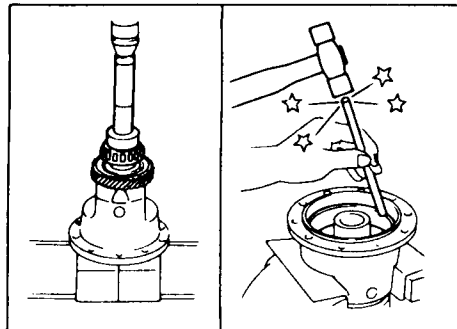


7. Press on differential side bearing inner cone and outer race.
8. Install final gear.

#### \* SIDE GEAR THRUST WASHER

Thickness mm (in)	Part number
0.75 - 0.80 (0.0295 - 0.0315)	38424-E3020
0.80 - 0.85 (0.0315 - 0.0335)	38424-E3021
0.85 - 0.90 (0.0335 - 0.0354)	38424-E3022
0.90 - 0.95 (0.0354 - 0.0374)	38424-E3023


## ASSEMBLY

When installing/assembling needle bearing and bearing race, use the following illustrations as a guide to installation procedures and locations.

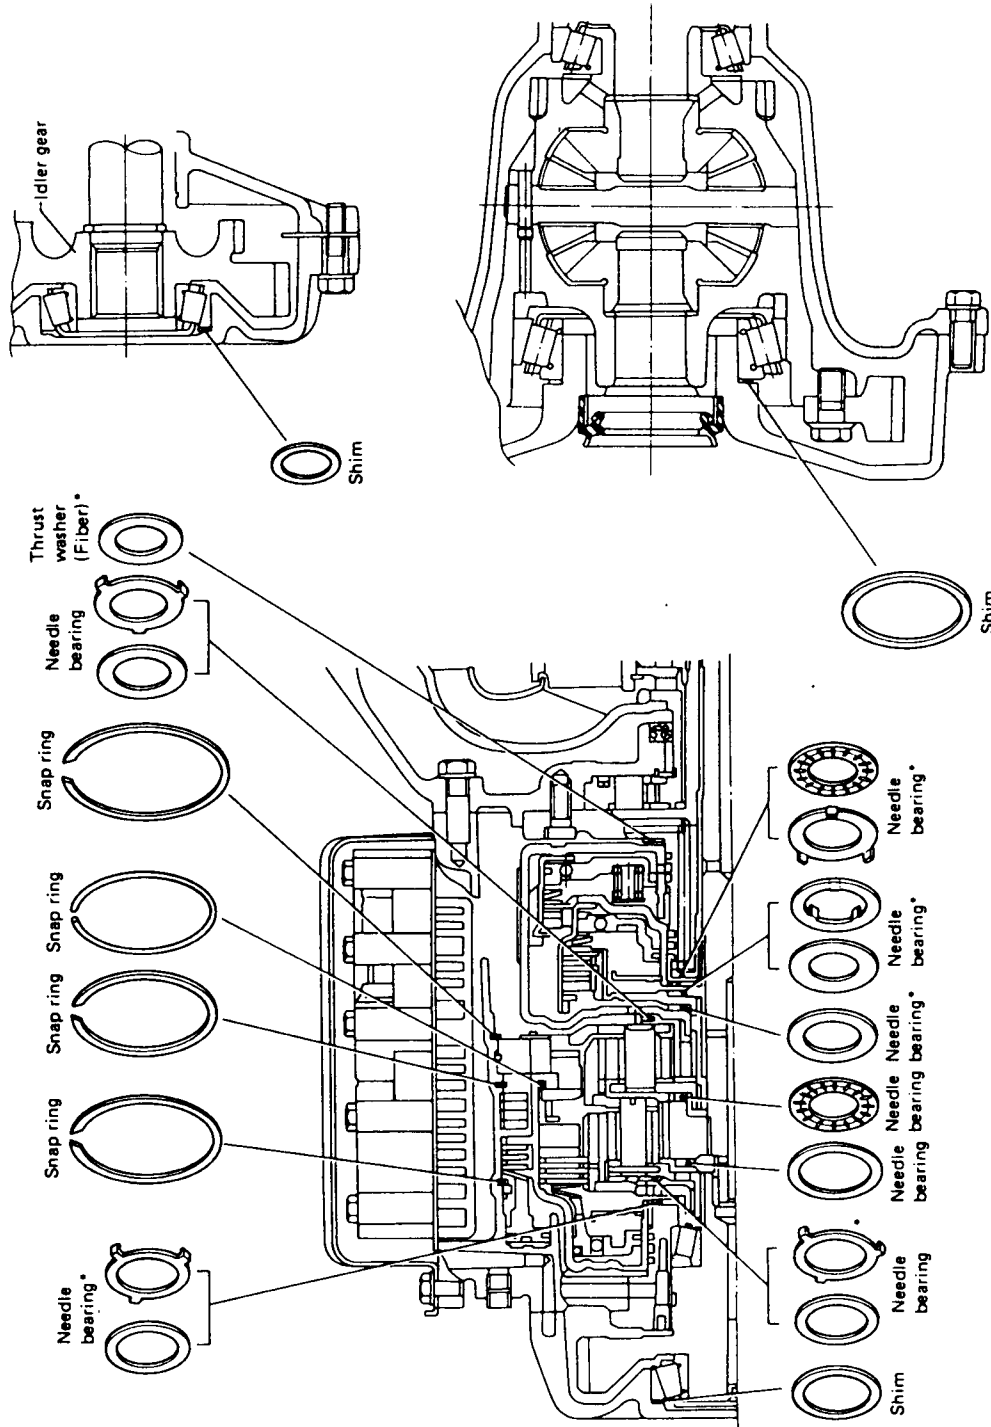


When installing, apply vaseline to parts with "\*" so that they will not drop off.


## ASSEMBLY

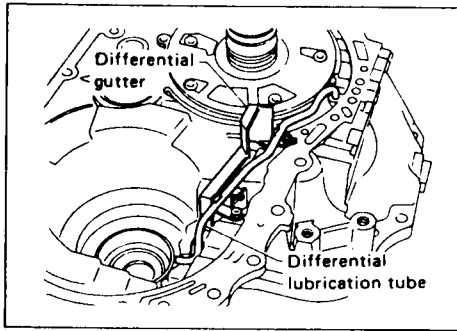


1. Install differential lubrication tube and differential gutter to converter housing.

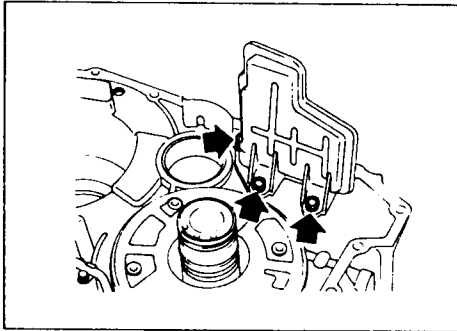


2. Install oil strainer.

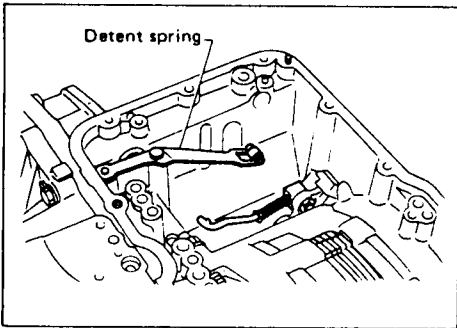

3. Install detent spring assembly.

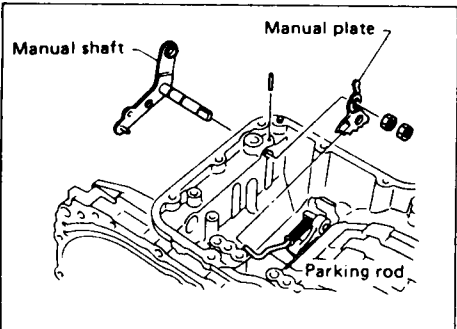

4. Pass parking rod into the hole in the manual plate and then install manual plate on manual shaft.

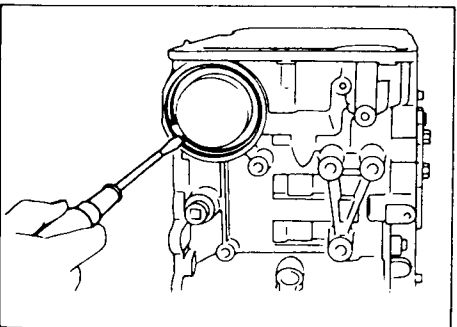


5. Install band brake servo, retainer and return spring and secure with snap ring.




# Technical Service Information


## ASSEMBLY

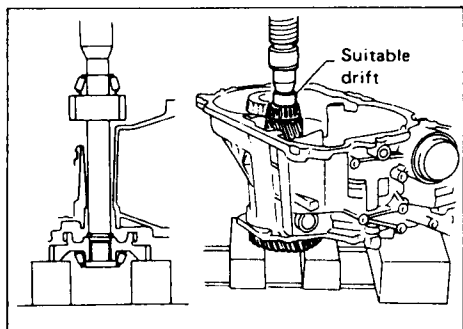


6. Install reduction gear.
  - a. Position reduction gear in transmission case so that it meshes with idler gear.
  - b. Press reduction gear into place using a drift, and install idler gear.

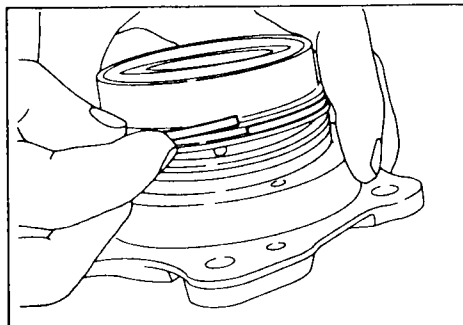


7. Install bearing retainer assembly.
  - a. Install seal rings onto bearing retainer with great care. Clean the grooves and liberally apply petroleum jelly to hold the rings in place. Otherwise, they could be cut or deformed when the low clutch and carrier assembly are installed.

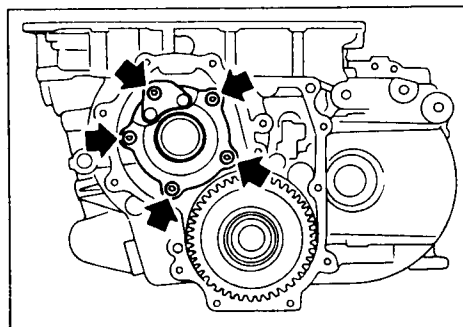

- b. Install bearing retainer assembly.

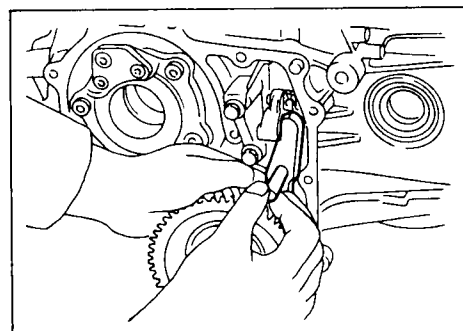


8. Install parking pawl and parking shaft.

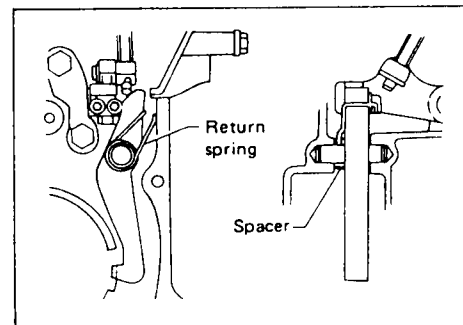


9. Install spacer and return spring.


AUTOMATIC TRANSMISSION SERVICE GROUP

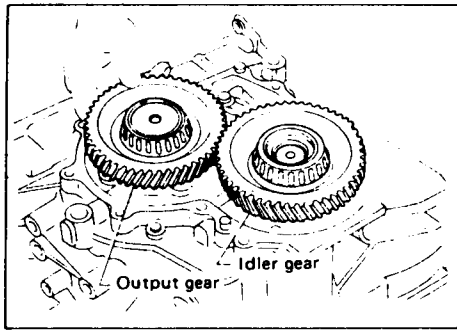

10. Install output gear.

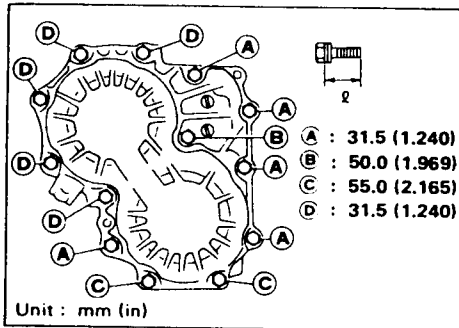

11. Temporarily install side cover and gasket.

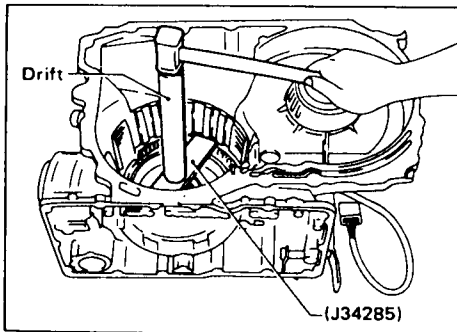

12. Lubricate low and reverse brake piston seal, then install piston by tapping it evenly with Tool.

13. Install low and reverse brake retainer, and secure with snap ring.

14. Install low and reverse brake driven & drive plates and retaining plate, then secure with snap ring.

15. After low and reverse brake has been completely assembled, measure clearance between snap ring and retainer plate. If measurement exceeds specifications, it can be adjusted by replacing retainer plate with one of a different thickness.


**Low and reverse brake clearance:**

**Standard**

1.2 - 1.6 mm (0.047 - 0.063 in)


**Allowable limit**

3.0 mm (0.118 in)

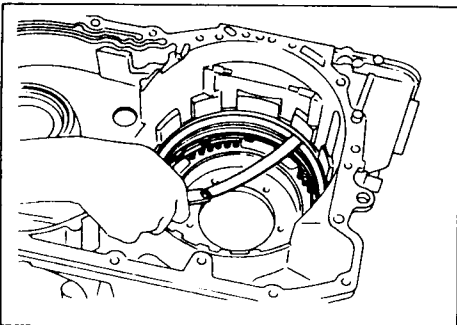


**Retaining plate of low & reverse brake**

Thickness mm (in)	Part number
2.0 (0.079)	31666-23X00
3.4 (0.134)	31667-23X00
3.6 (0.142)	31667-23X01
3.8 (0.150)	31667-23X02
4.0 (0.157)	31667-23X03
4.2 (0.165)	31667-23X04
4.4 (0.173)	31667-23X05
4.6 (0.181)	31667-23X06
4.8 (0.189)	31667-23X07
5.0 (0.197)	31667-23X08

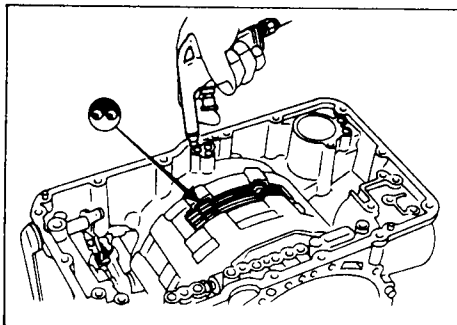


● Check low & reverse brake operation using air.


## ASSEMBLY

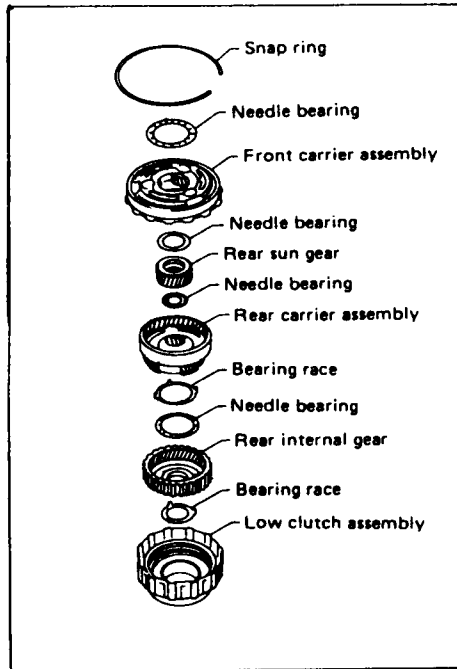


16. Assemble front carrier, rear carrier and low clutch.

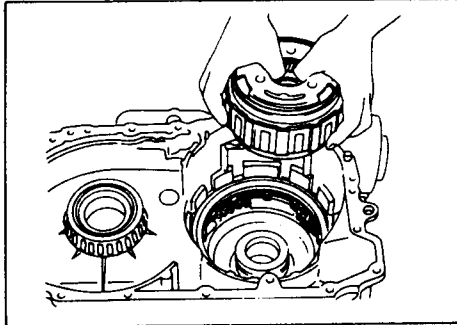

17. Install carrier set.

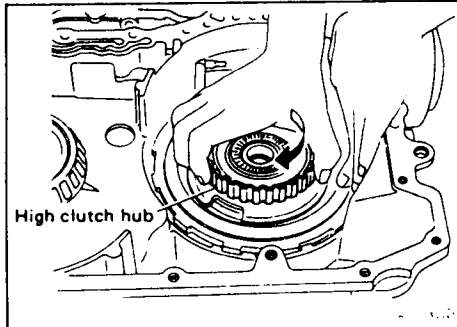

18. Install one-way clutch assembly while rotating front carrier with high clutch hub.

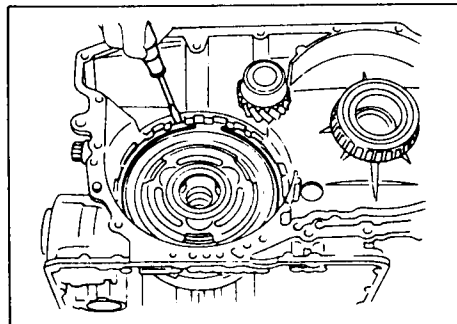


19. Remove high clutch hub, and install clutch snap ring.






# Technical Service Information


## ASSEMBLY

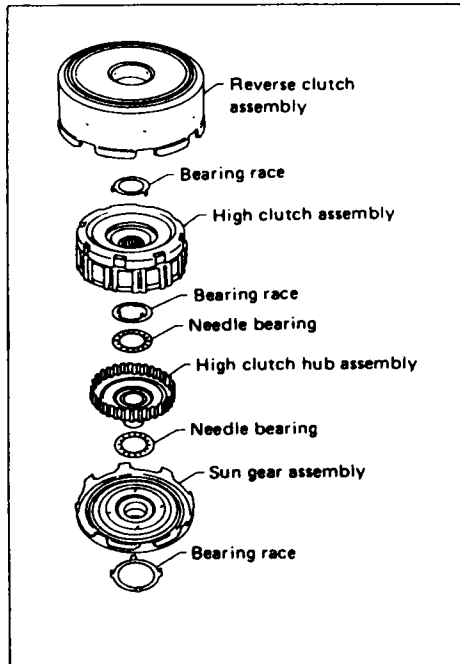


20. Assemble reverse clutch and high clutch.

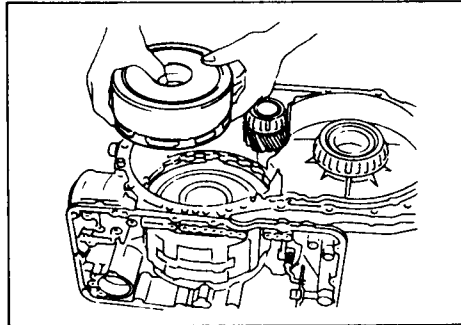

21. Install reverse and high clutch as a pack.

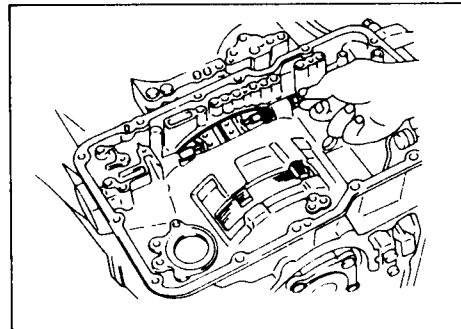

22. Install brake band and anchor pin. Temporarily tighten anchor bolt by hand.

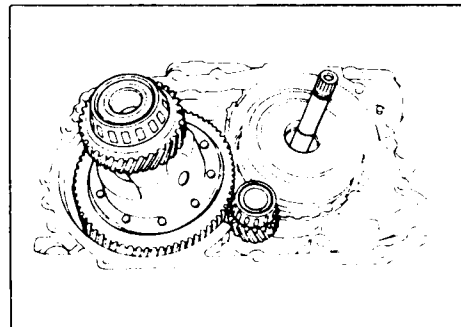

23. Install input shaft.

24. Special factory tool part numbers:  
J34290-1, J34290-2, J34290-3,  
J34290-6, J34290-7.  
are required to set proper end play.

25. To set clutch pack end play use the same special tools.



26. To adjust differential bearing preload use the same special tools.

AUTOMATIC TRANSMISSION SERVICE GROUP



# Technical Service Information

## ASSEMBLY

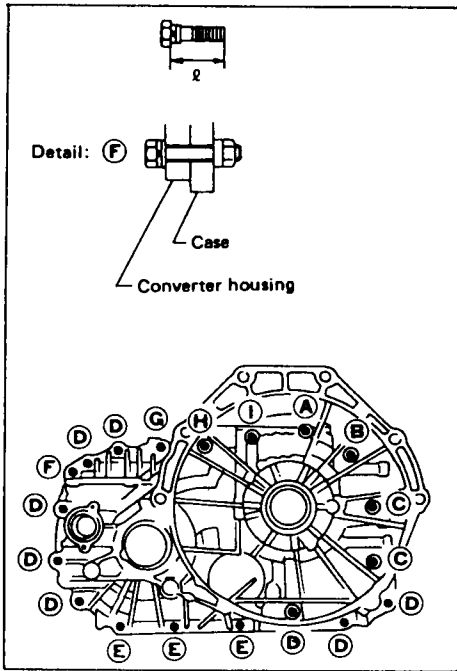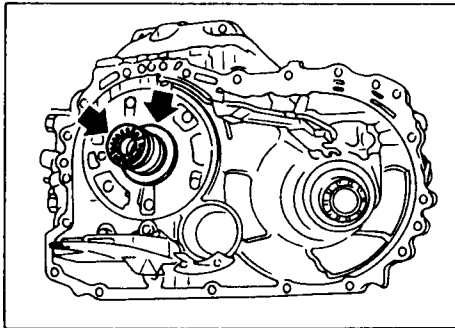


27. Install selected thrust washer and bearing on oil pump cover.

Place gasket on transmission case and install converter housing.


Bolt	Tightening torque N-m (kg-m, ft-lb)	ℓ mm (in)
Ⓐ	21 - 23 (2.1 - 2.3, 15 - 17)	31.5 (1.240)
Ⓑ		27 (1.06)
Ⓒ	19 - 23 (1.9 - 2.3, 14 - 17)	31.5 (1.240)
Ⓓ		35 (1.38)
Ⓔ	43 - 47 (4.4 - 4.8, 32 - 35)	50 (1.97)
Ⓕ	43 - 47 (4.4 - 4.8, 32 - 35)	39 (1.54)
Ⓖ	45 - 47 (4.6 - 4.8, 33 - 35)	
Ⓗ	45 - 47 (4.6 - 4.8, 33 - 35)	35 (1.38)
Ⓘ		

Always use new bolts at portions Ⓐ, Ⓑ, Ⓖ and Ⓘ as they are self-sealing bolts. Apply A.T.F. to thread of other bolts by that fix converter housing to transmission case when installing them.

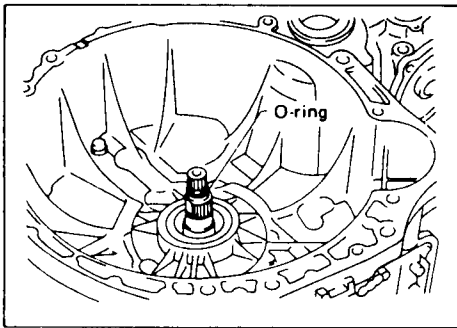

28. Install O-ring onto input shaft.

29. To adjust the out put shaft and idler bearing preload, an additional factory tool part number J34290-4 is required.

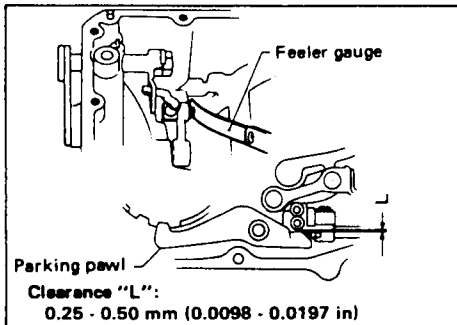


30. Move manual lever until parking pawl engages idler gear. Measure clearance between parking pawl and parking actuator.

If clearance is outside specifications, replace parking pawl.

Part number	Identification letter
31989-21X00	D
31989-21X01	E
31989-21X02	F

AUTOMATIC TRANSMISSION SERVICE GROUP

## ASSEMBLY

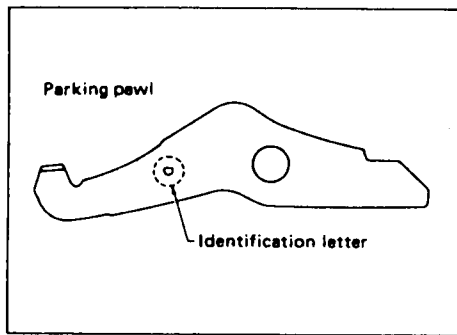

Example:


When parking pawl with identification letter "E" is used:

Clearance "L" is larger.

→ Replace with parking pawl with identification letter "D".

Clearance "L" is smaller.

→ Replace with parking pawl with identification letter "F".

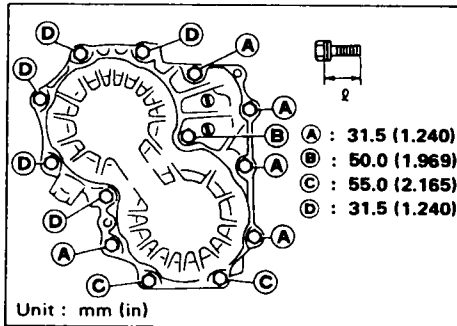

31. Install side cover and gasket.


**Always use new bolts at portions B and D as they are self-sealing bolts. Apply A.T.F. to thread of other bolts by that fix side cover to transmission case when installing them.**

**Bolts A and C :**

☑: 19 - 23 N·m (1.9 - 2.3 kg·m, 14 - 17 ft·lb)

**Bolts B and D :**


☑: 21 - 23 N·m (2.1 - 2.3 kg·m, 15 - 17 ft·lb)

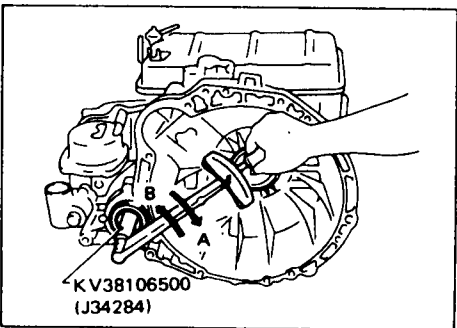

32. Insert Tool into final drive portion to see if internal parts rotates smoothly. Rotating portion in direction "B" is slightly harder than in direction "A".


If abnormalities are noted, proceed with the following:

- Disassemble parts to see if they are properly assembled.
- Readjust bearing preloads of final drive, output shaft and idler gear.

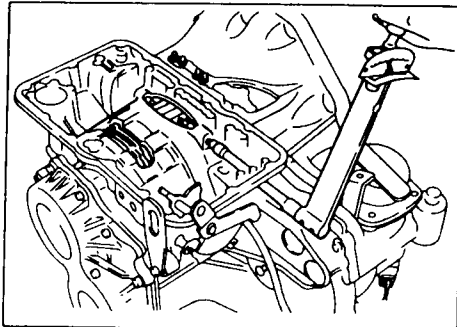

33. Adjust brake band.

- 1) First tighten anchor end pin.
- 2) Back off anchor end pin 5-1/4 turns.
- 3) Tighten lock nut while holding anchor end pin stationary.

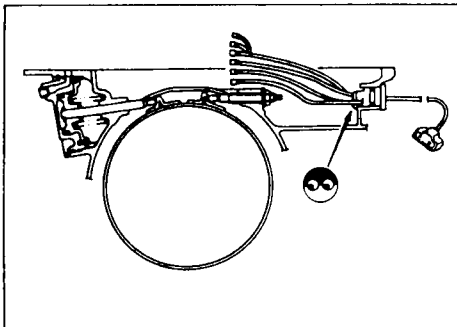


34. Install terminal assembly, paying attention to the direction of its hook.




# Technical Service Information

## ASSEMBLY

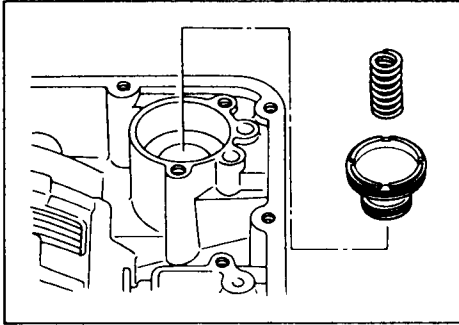

35. Install accumulator and spring.

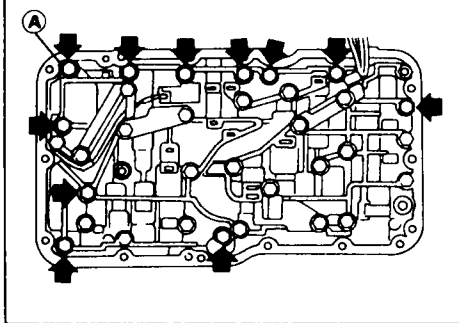


36. Insert manual valve to control valve body, then assemble them to transmission case.

**Bolt A :**


: 3.7 - 5.0 N·m (0.38 - 0.51 kg-m, 2.7 - 3.7 ft-lb)

**Other bolts:**


: 7 - 9 N·m (0.7 - 0.9 kg-m, 5.1 - 6.5 ft-lb)

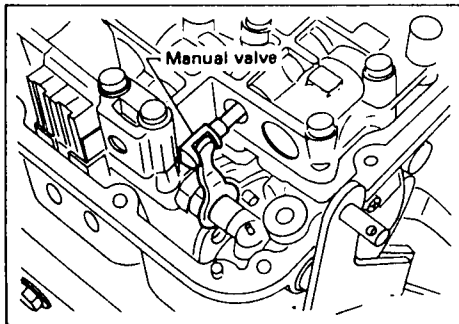

● Pay attention to the direction of manual valve groove.

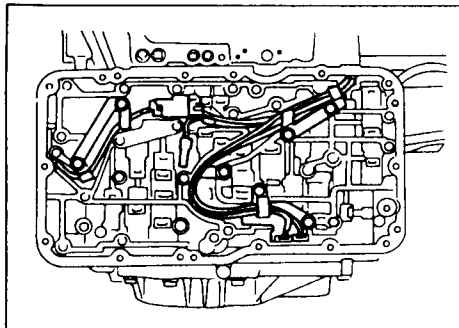


37. Connect harness connectors between terminal assembly and solenoids.

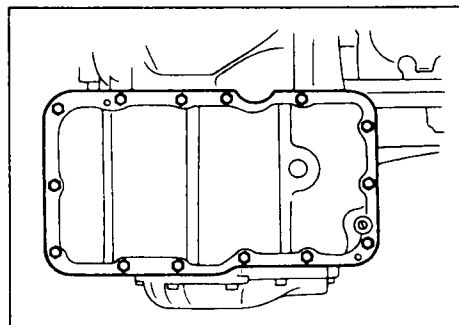


38. Put gasket on transmission case and install valve cover.  
**Always use new bolts as they are self-sealing bolts.**


## ASSEMBLY

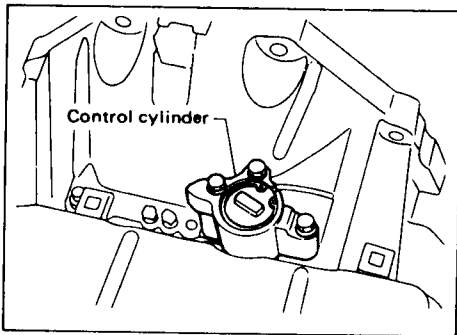


39. Install control cylinder.

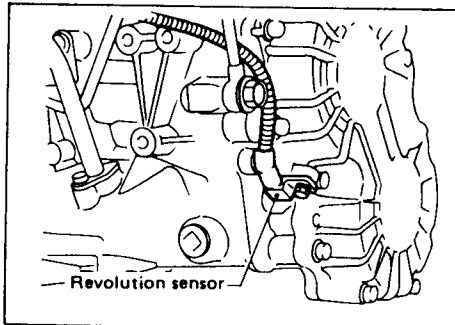


40. Install revolution sensor.

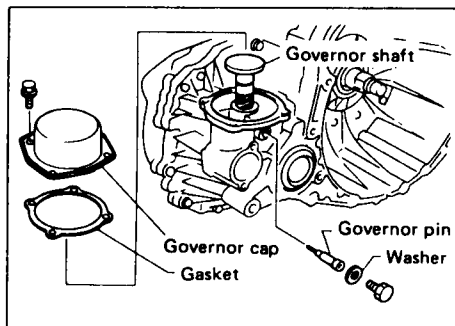

41. Install governor shaft.

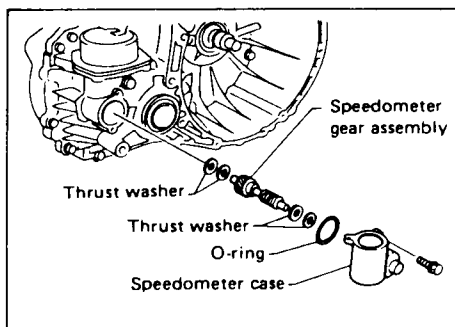

42. Install speedometer parts.

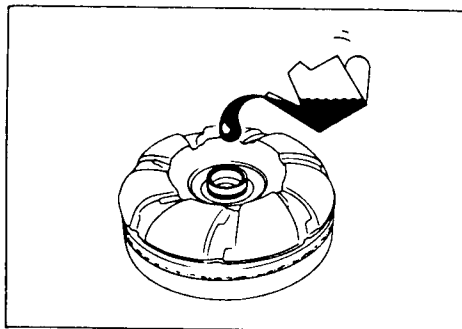

43. Pour approx. 2 liters (2-1/8 US qt, 1-3/4 Imp qt) of automatic transmission fluid into converter housing.

44. Install torque converter to converter housing.

**Be careful not to scratch front oil seal.**

45. Apply sealant to threads of drain plug and install it in place.

46. Install inhibitor switch to transmission case.

47. Adjust inhibitor switch. Refer to On-vehicle Service.

48. Make sure that manual lever operates smoothly.




# Technical Service Information

## SERVICE DATA AND SPECIFICATIONS (S.D.S.)

### General Specifications

Engine	VG30E
Automatic transaxle model	RE4F02A
Automatic transaxle assembly Model code number	27X62
Transaxle gear ratio	
1st	2.785
2nd	1.545
3rd	1.000
4th	0.694
Reverse	2.272
Final drive	3.642
Recommended oil	Automatic transmission fluid Type DEXRON™
Oil capacity ② (US qt, Imp qt)	7.3 (7-3/4, 6-3/8)

### AUTOMATIC TRANSAXLE NUMBER

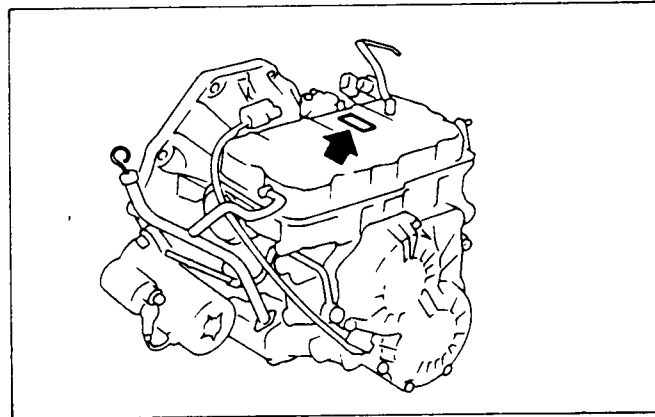

### Specifications and Adjustment

#### CLUTCHES AND BRAKES

<b>High clutch</b>		
Number of drive plates	4	
Number of driven plates	7	
Clearance mm (in)		
Standard	1.4 - 1.8 (0.055 - 0.071)	
Allowable limit	2.6 (0.102)	
Drive plate thickness mm (in)		
Standard	1.6 (0.039)	
Allowable limit	1.4 (0.055)	
Thickness of retaining plate	Thickness mm (in)	Part number
	3.8 (0.142)	31567-21X00
	3.8 (0.150)	31567-21X01
	4.0 (0.157)	31567-21X02
	4.2 (0.165)	31567-21X03
	4.4 (0.173)	31567-21X04
	4.6 (0.181)	31567-21X05
	4.8 (0.189)	31567-21X06

<b>Low clutch</b>		
Number of drive plates	6	
Number of driven plates	7	
Clearance mm (in)		
Standard	0.5 - 0.8 (0.020 - 0.031)	
Allowable limit	2.0 (0.079)	
Drive plate thickness mm (in)		
Standard	2.0 (0.079)	
Allowable limit	1.8 (0.071)	
Thickness of retaining plate	Thickness mm (in)	Part number
	3.2 (0.126)	31597-21X10
	3.4 (0.134)	31597-21X11
	3.6 (0.142)	31597-21X12
	3.8 (0.150)	31597-21X13
	4.0 (0.157)	31597-21X14
	4.2 (0.165)	31597-21X15
<b>Reverse clutch</b>		
Number of drive plates	2	
Number of driven plates	2	
Clearance mm (in)		
Standard	0.5 - 0.8 (0.020 - 0.031)	
Allowable limit	1.2 (0.047)	
Drive plate thickness mm (in)		
Standard	2.0 (0.079)	
Allowable limit	1.8 (0.071)	
Thickness of retaining plate	Thickness mm (in)	Part number
	4.6 (0.181)	31537-21X10
	4.8 (0.189)	31537-21X11
	5.0 (0.197)	31537-21X12
	5.2 (0.205)	31537-21X13
	5.4 (0.213)	31537-21X14

AUTOMATIC TRANSMISSION SERVICE GROUP



# Technical Service Information

## SERVICE DATA AND SPECIFICATIONS (S.D.S.)

### Specifications and Adjustment (Cont'd)

<b>Low &amp; reverse brake</b>		
Number of drive plates	7	
Number of driven plates	6 or 7	
Clearance mm (in)	1.2 - 1.6 (0.047 - 0.063)	
Standard	3.0 (0.118)	
Allowable limit		
Drive plate thickness mm (in)	2.0 (0.079)	
Standard	1.8 (0.071)	
Allowable limit		
Thickness of retaining plate	Thickness mm (in)	Part number
	3.4 (0.134)	31667-23X00
	3.6 (0.142)	31667-23X01
	3.8 (0.150)	31667-23X02
	4.0 (0.157)	31667-23X03
	4.2 (0.165)	31667-23X04
	4.4 (0.173)	31667-23X05
	4.6 (0.181)	31667-23X06
	4.8 (0.189)	31667-23X07
	5.0 (0.197)	31667-23X08
<b>Brake band</b>		
Brake band piston size mm (in)	75 (2.95)	
Big dia.	43 (1.69)	
Small dia.		

### PLANETARY CARRIER AND OIL PUMP

<b>Planetary carrier</b> mm (in)		
Clearance between pinion washer and planetary carrier	0.15 - 0.70 (0.0059 - 0.0276)	
Front carrier	0.80 (0.0315)	
Standard		
Allowable limit		
Rear carrier	0.20 - 0.70 (0.0079 - 0.0276)	
Standard	0.80 (0.0315)	
Allowable limit		
<b>Oil pump</b>		
Oil pump clearance mm (in)	0.010 - 0.024 (0.0004 - 0.0009)	
Cam ring - oil pump cover	0.034 (0.0013)	
Standard		
Allowable limit		
Rotor - oil pump cover	0.017 - 0.031 (0.0007 - 0.0012)	
Standard	0.034 (0.0013)	
Allowable limit		
Vane - oil pump cover	0.017 - 0.031 (0.0007 - 0.0012)	
Standard	0.034 (0.0013)	
Allowable limit		
Seal ring clearance mm (in)	0.10 - 0.25 (0.0039 - 0.0098)	
Standard	0.25 (0.0098)	
Allowable limit		

### CLUTCH PACK END PLAY

0.4 - 0.8 mm (0.016 - 0.031 in)

### CLUTCH PACK THRUST WASHER

Thickness mm (in)	Part number
0.7 (0.028)	31528-21X00
0.9 (0.035)	31528-21X01
1.1 (0.043)	31528-21X02
1.3 (0.051)	31528-21X03
1.5 (0.059)	31528-21X04
1.7 (0.067)	31528-21X05
1.9 (0.075)	31528-21X06

### TOTAL END PLAY

0.25 - 0.55 mm (0.0098 - 0.0217 in)

### OIL PUMP HOUSING BEARING RACE (For total end play)

Thickness mm (in)	Part number
0.8 (0.031)	31429-21X00
1.0 (0.039)	31429-21X01
1.2 (0.047)	31429-21X02
1.4 (0.055)	31429-21X03
1.6 (0.063)	31429-21X04
1.8 (0.071)	31429-21X05
2.0 (0.079)	31429-21X06

### Differential side bearing preload adjusting shim

Thickness mm (in)	Part number
0.12 (0.0047)	38453-21X13
0.16 (0.0063)	38453-21X14
0.20 (0.0079)	38453-21X15
0.24 (0.0094)	38435-21X16
0.28 (0.0110)	38435-21X17
0.32 (0.0126)	38453-21X18
0.36 (0.0142)	38453-21X19
0.40 (0.0157)	38453-21X20
0.44 (0.0173)	38453-21X00
0.48 (0.0189)	38453-21X01
0.52 (0.0205)	38453-21X02
0.56 (0.0220)	38453-21X03
0.60 (0.0236)	38453-21X04
0.64 (0.0252)	38453-21X05
0.68 (0.0268)	38453-21X06
0.72 (0.0283)	38453-21X07
0.76 (0.0299)	38453-21X08
0.80 (0.0315)	38453-21X09
0.84 (0.0331)	38453-21X10
0.88 (0.0346)	38453-21X11
0.92 (0.0362)	38453-21X12