

2005 Acura TL


2006 ENGINE Engine Block - TL

2006 ENGINE


Engine Block - TL

SPECIAL TOOLS


Ref. No.	Tool Number	Description	Qty
①	070AD-RCAA100	Oil Seal Driver, 64 mm	1
②	070AD-RCAA200	Driver Attachment, 106 mm	1
③	07749-0010000	Driver	1



①

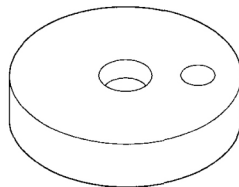

②

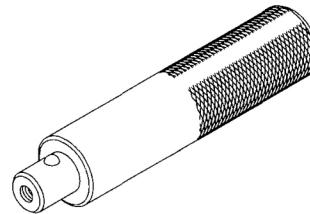


③

G03658976

Fig. 1: Identifying Special Tool


Courtesy of AMERICAN HONDA MOTOR CO., INC.

COMPONENT LOCATION INDEX

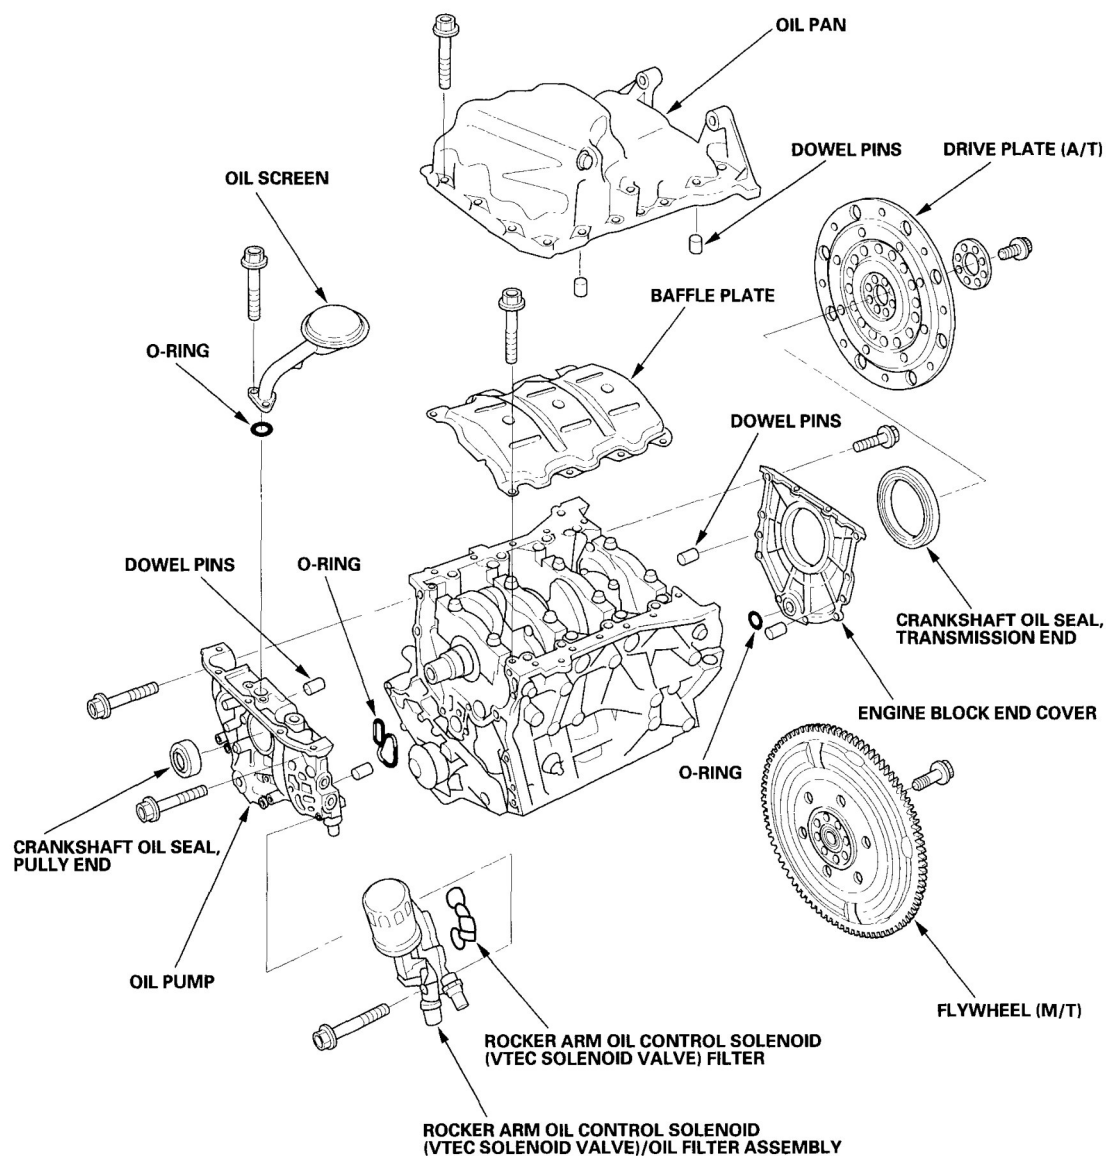


G03658977

Fig. 2: Identifying Components Location (1 Of 3)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

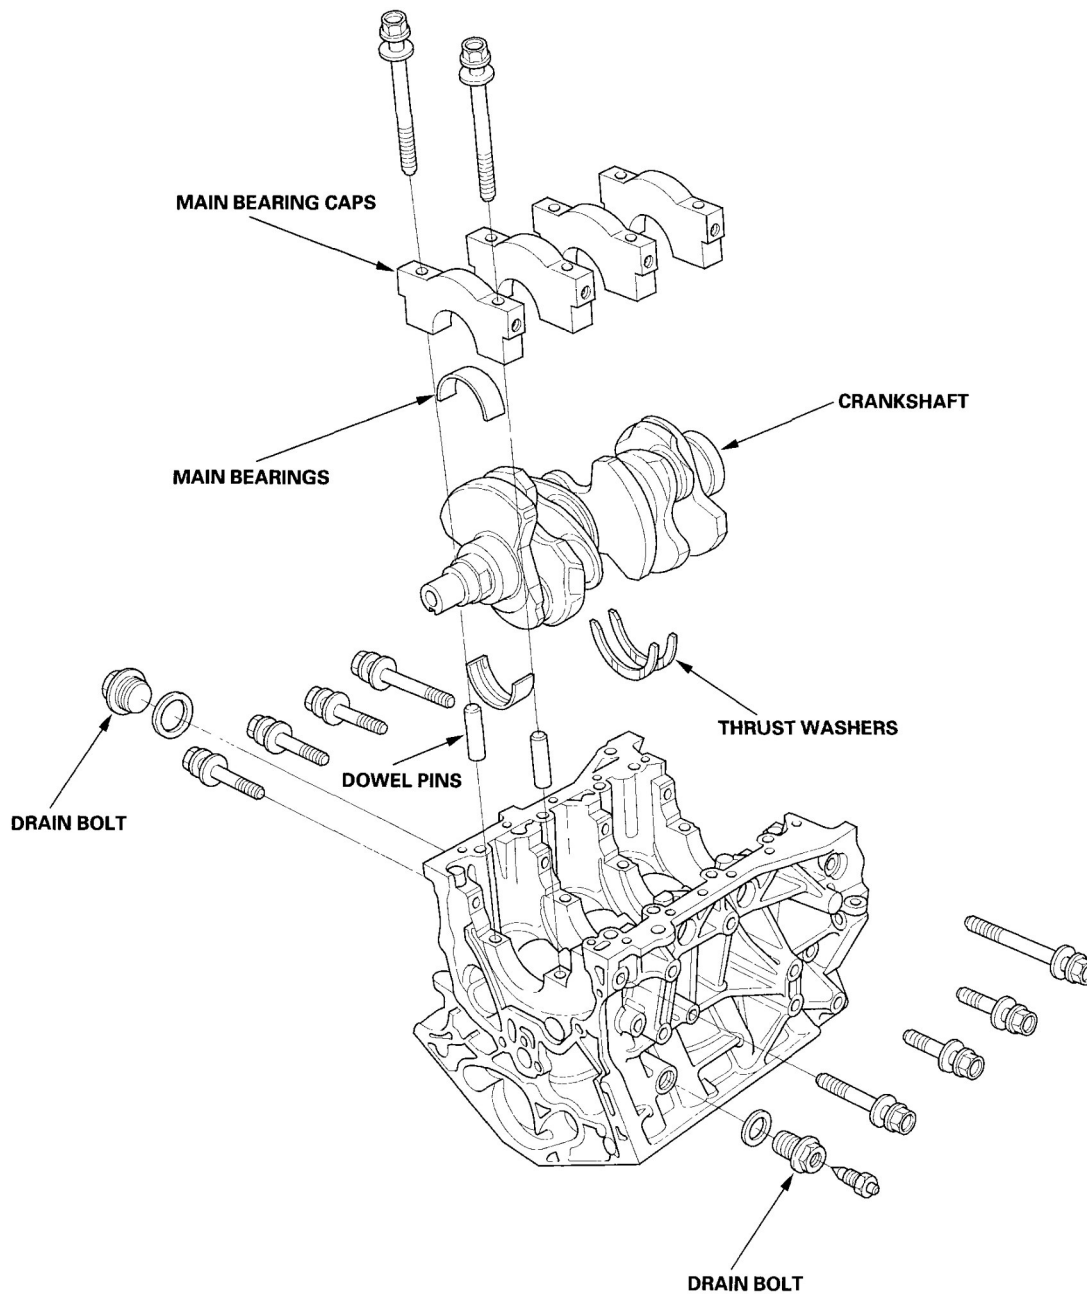

G03658978

Fig. 3: Identifying Components Location (2 Of 3)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

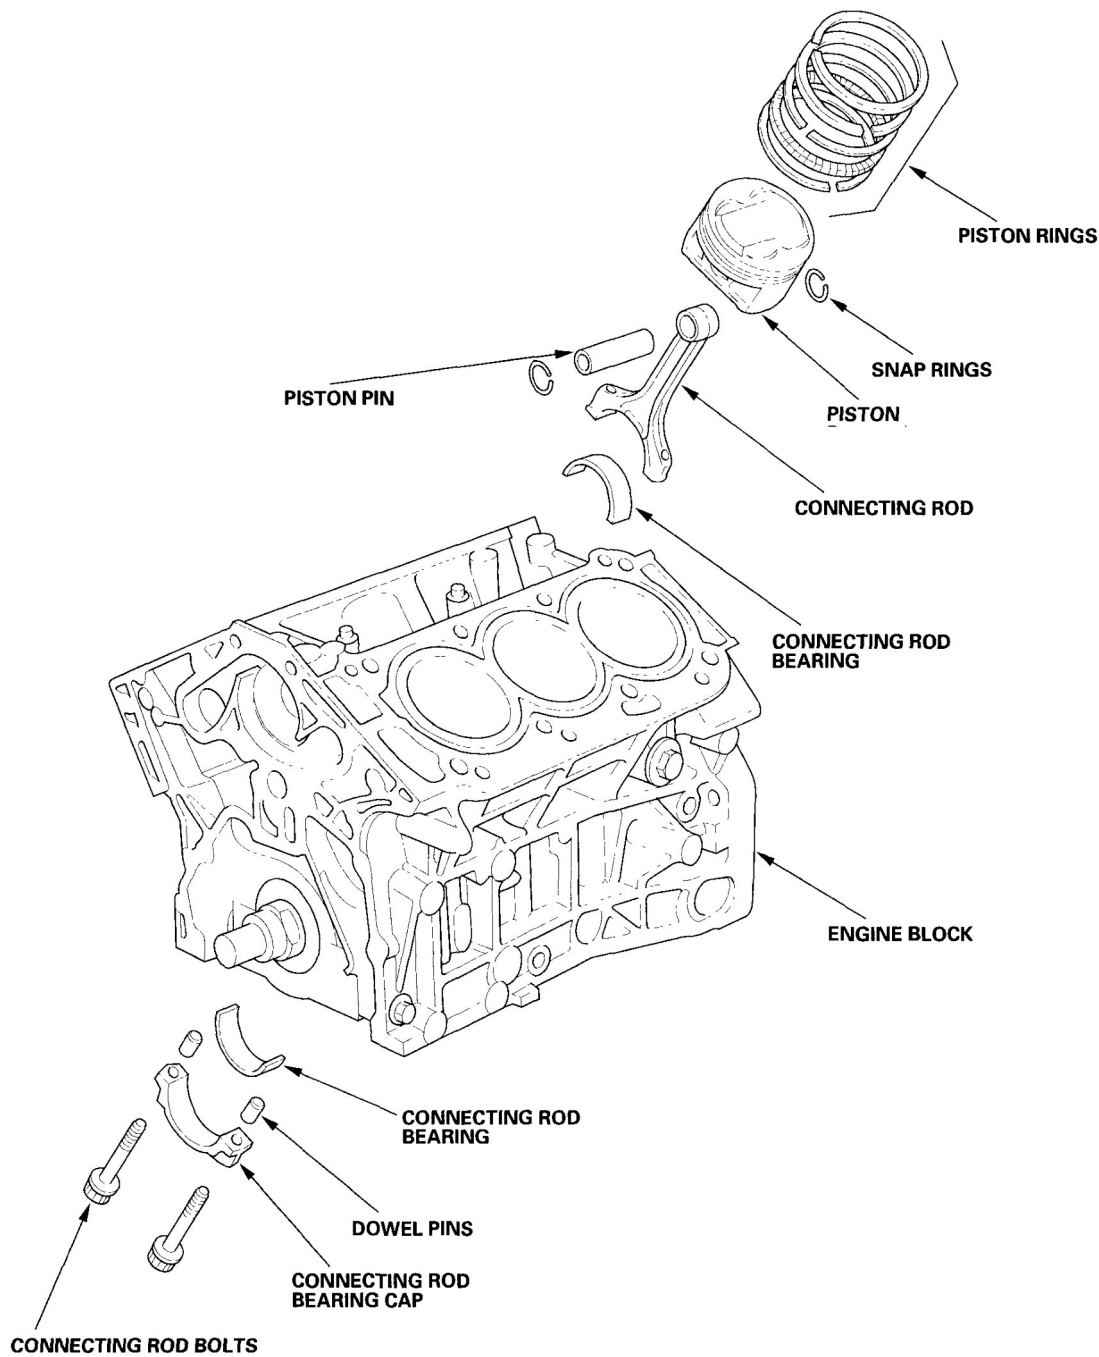

G03658979

Fig. 4: Identifying Components Location (3 Of 3)
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

CONNECTING ROD AND CRANKSHAFT END PLAY INSPECTION


1. Remove the oil pump (see **REMOVAL**).

2. Remove the baffle plate (see step 11).
3. Measure the connecting rod end play with a feeler gauge (A) between the connecting rod (B) and crankshaft (C).

Connecting Rod End Play

Standard (New): 0.15-0.35 mm (0.006-0.014 in.)

Service Limit: 0.45 mm (0.018 in.)

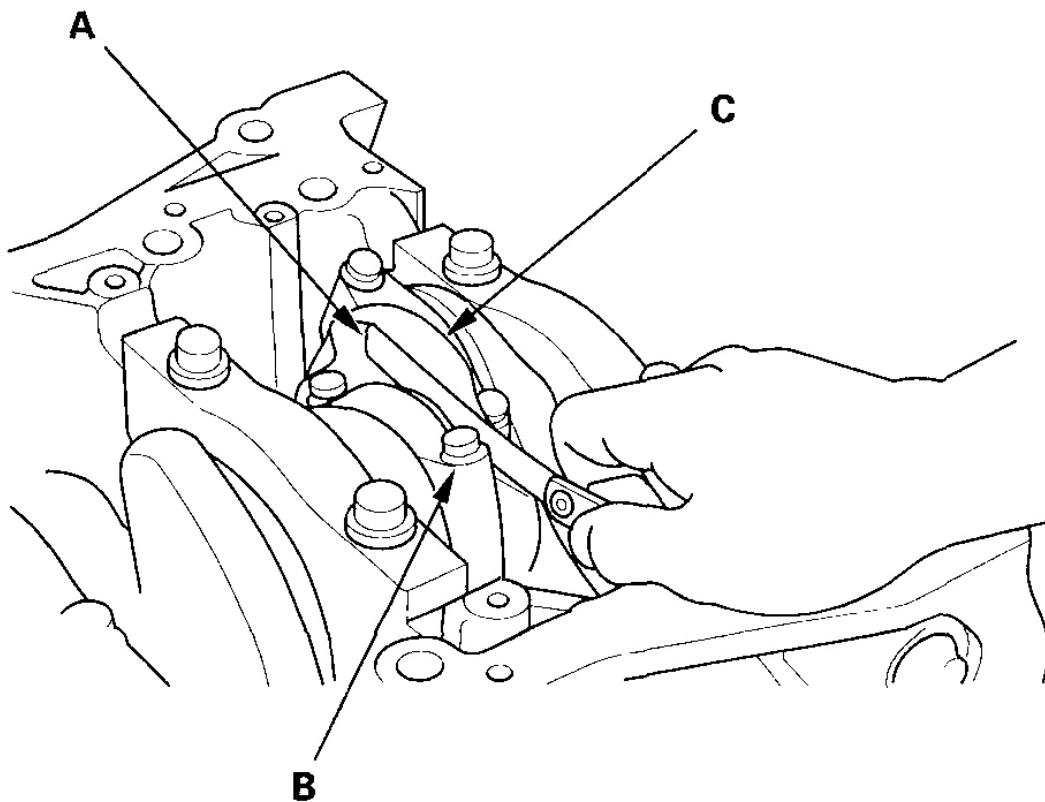

G03658980

Fig. 5: Measuring Connecting Rod End Play


Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. If the connecting rod end play is out-of-tolerance, install a new connecting rod and recheck. If it is still out-of-tolerance, replace the crankshaft (see **CRANKSHAFT AND PISTON REMOVAL**).
5. Push the crankshaft firmly away from the dial indicator, and zero the dial against the end of the crankshaft. Then pull the crankshaft firmly back toward the indicator; the dial reading should not exceed the service limit.

Crankshaft End Play

Standard (New): 0.10-0.35 mm (0.004-0.014 in.)

Service Limit: 0.45 mm (0.018 in.)

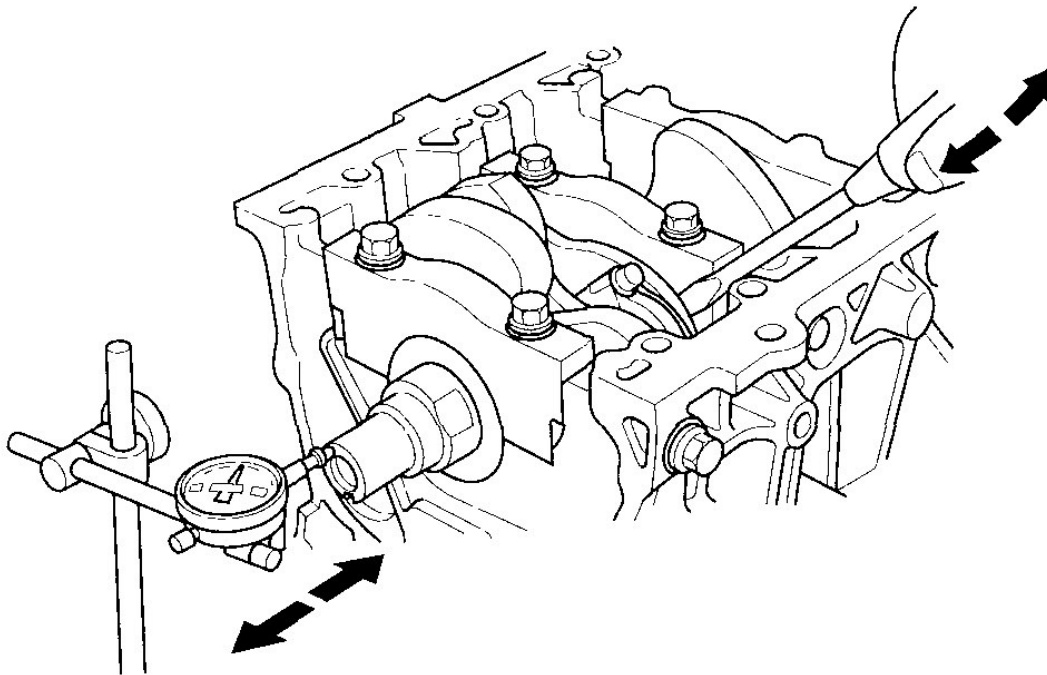

G03658981

Fig. 6: Pushing Crankshaft Away From Dial Indicator
Courtesy of AMERICAN HONDA MOTOR CO., INC.

6. If the end play is excessive, replace the thrust washers and recheck. If it is still out-of-tolerance, replace the crankshaft (see **CRANKSHAFT AND PISTON REMOVAL**).

CRANKSHAFT MAIN BEARING REPLACEMENT

MAIN BEARING CLEARANCE INSPECTION

1. Remove the main bearing caps and bearing halves (see **CRANKSHAFT AND PISTON REMOVAL**).
2. Clean each main journal and bearing half with a clean shop towel.
3. Place one strip of plastigage across each main journal.

NOTE: If the engine is still in the vehicle when you bolt the main cap down to check the clearance, the weight of the crankshaft and drive plate will

flatten the plastigage further than just the torque on the cap bolt, and give you an incorrect reading. For an accurate reading, support the crank with a jack under the counterweights, and check only one bearing at a time.

4. Reinstall the bearings and caps, then torque the bearing cap bolts to 74 N.m (7.5 kgf.m, 54 lbf.ft), and the bearing cap side bolts to 49 N.m (5.0 kgf.m, 36 lbf.ft) in the proper sequence (see step 22).


NOTE: Do not rotate the crankshaft during inspection.

5. Remove the cap and bearing half, and measure the widest part of the plastigage.

Main Bearing-to-Journal Oil Clearance

Standard (New): 0.020-0.044 mm (0.0008-0.0017 in.)

Service Limit: 0.050 mm (0.0020 in.)

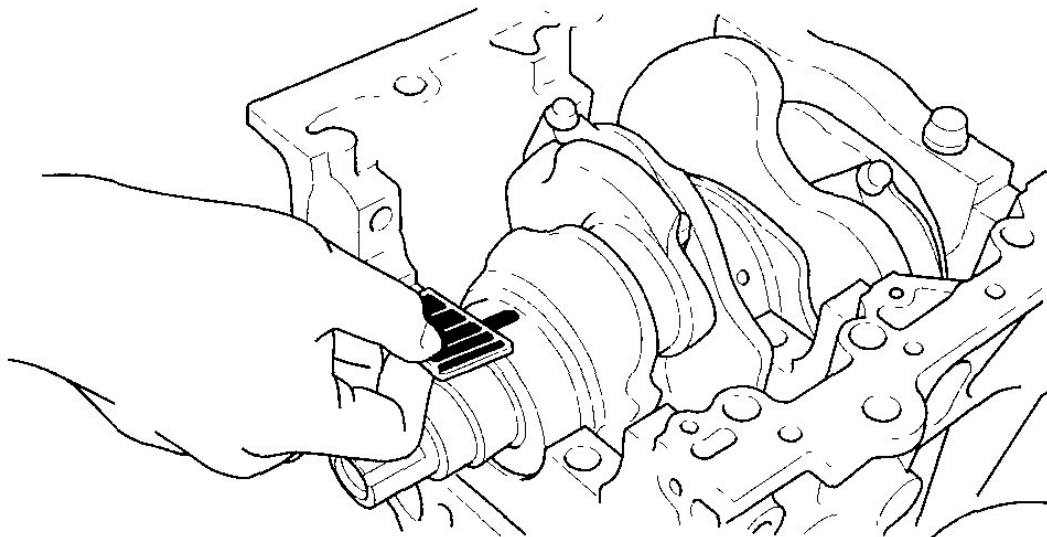

G03658982

Fig. 7: Measuring Widest Part Of Plastigage
Courtesy of AMERICAN HONDA MOTOR CO., INC.

6. If the plastigage measures too wide or too narrow, remove the crankshaft, and remove the upper half of the bearing. Install a new, complete bearing with the same color code, and recheck the clearance. Do not file, shim, or scrape the bearings or the caps to adjust clearance.
7. If the plastigage shows the clearance is still incorrect, try the next larger or smaller bearing (the color listed above or below that one), and check again. If the proper clearance cannot be obtained by using the appropriate larger or smaller bearings, replace the crankshaft (see **CRANKSHAFT AND PISTON**


REMOVAL) and start over.

MAIN BEARING SELECTION

Crankshaft Bore Code Location

Letters or bars have been stamped on the end of the block as a code for the size of each of the four main journal bores.

Use them, and the numbers stamped on the crankshaft (codes for main journal size), to choose the correct bearings. If the codes are indecipherable because of an accumulation of dirt and dust, do not scrub them with a wire brush or scraper. Clean them only with solvent or detergent.

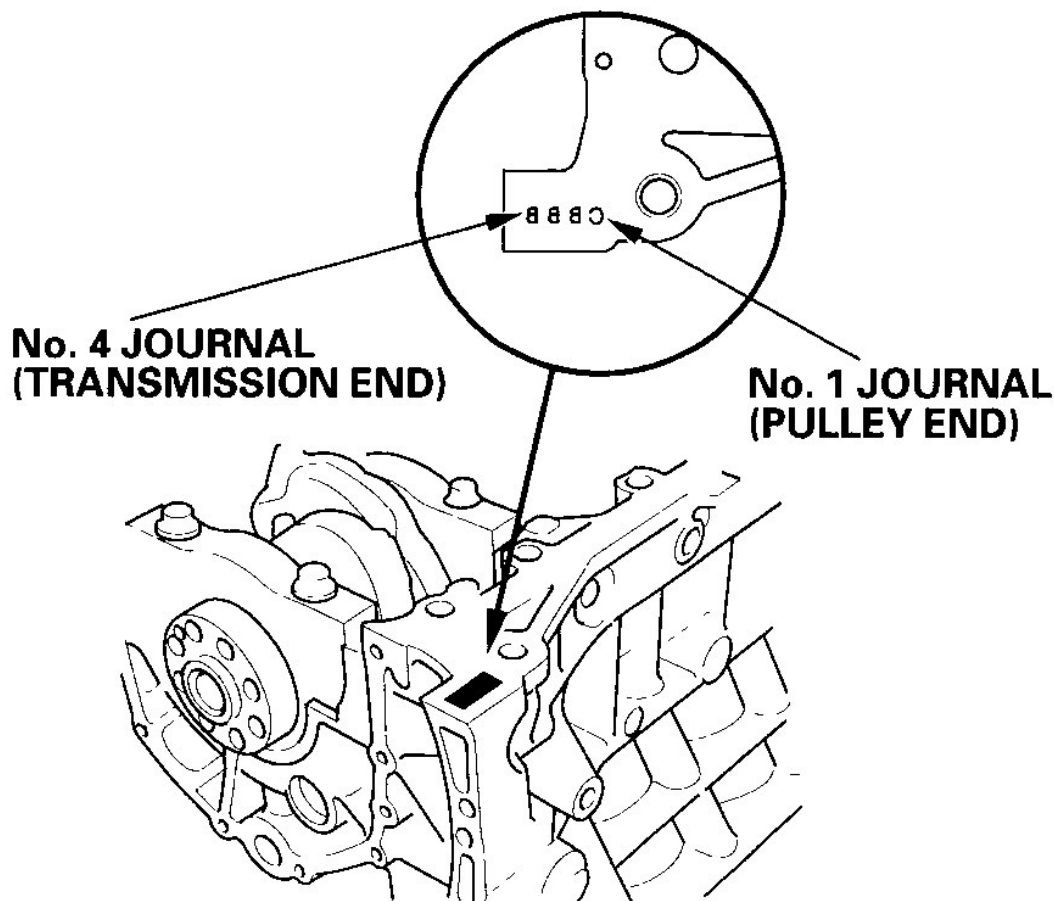

G03658983

Fig. 8: Locating Crankshaft Bore Code Location
Courtesy of AMERICAN HONDA MOTOR CO., INC.

Bearing Identification

Color code is on the edge of the bearing

→ Larger crank bore

A or I	B or II	C or III	D or IIII
--------	---------	----------	-----------

→ Smaller bearing (Thicker)

1 or I
2 or II
3 or III
4 or IIII
5 or IIIII
6 or IIIIII

Red/ Pink	Pink	Pink/ Yellow	Yellow
Pink	Pink/ Yellow	Yellow	Yellow/ Green
Pink/ Yellow	Yellow	Yellow/ Green	Green
Yellow	Yellow/ Green	Green	Green/ Brown
Yellow/ Green	Green	Green/ Brown	Brown
Green	Green/ Brown	Brown	Brown/ Black

Smaller
main
journal

Smaller
bearing
(Thicker)

NOTE: When using bearing halves of different colors, it does not matter which color is used in the top or bottom.

G03658984

Fig. 9: Bearing Identification & Color Code Reference Chart
Courtesy of AMERICAN HONDA MOTOR CO., INC.

Main Journal Code Locations (Numbers or Bars)

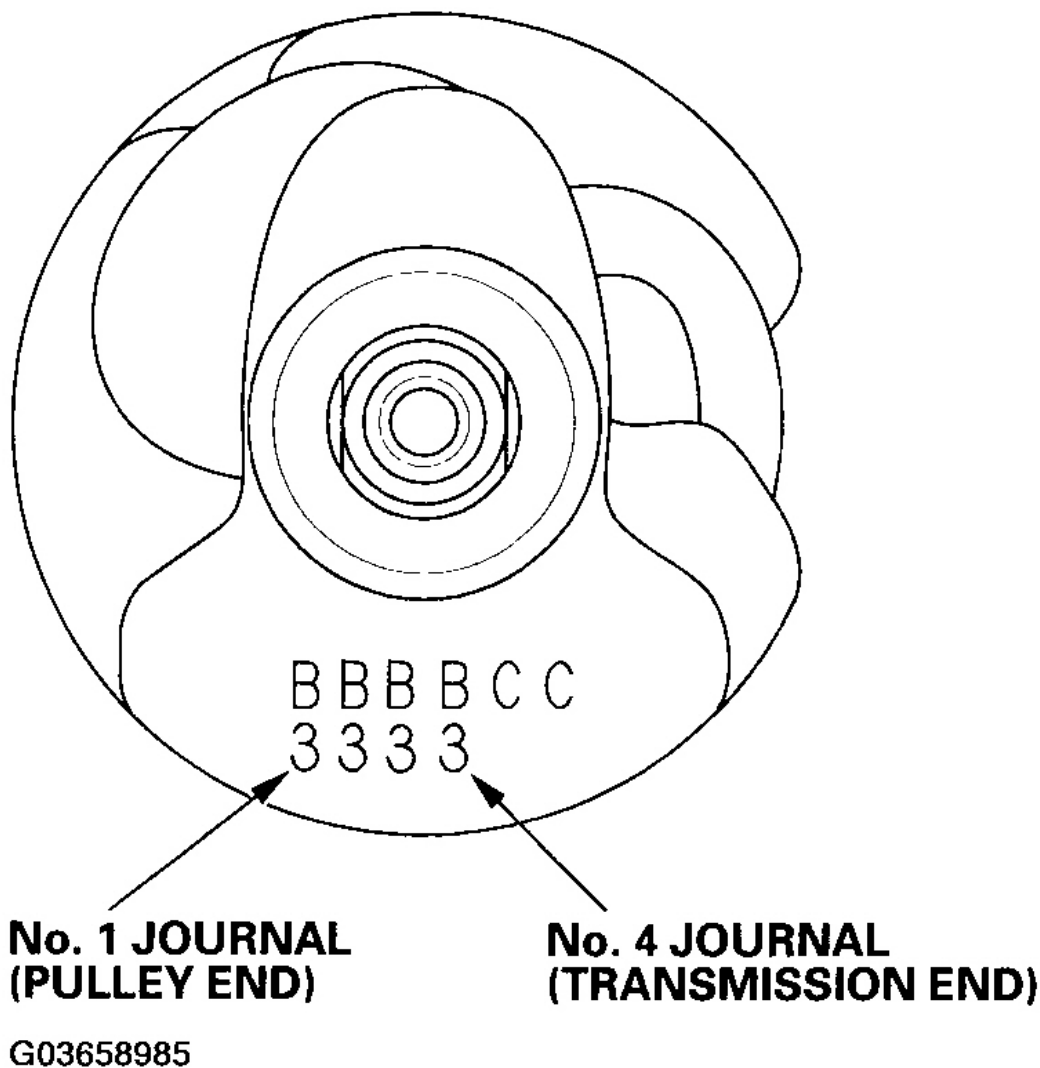


Fig. 10: Locating Main Journal Code
Courtesy of AMERICAN HONDA MOTOR CO., INC.

CONNECTING ROD BEARING REPLACEMENT

ROD BEARING CLEARANCE INSPECTION

1. Remove the connecting rod cap and bearing half (see CRANKSHAFT AND PISTON REMOVAL).
2. Clean the crankshaft rod journal and bearing half with a clean shop towel.
3. Place a strip of plastigage across the rod journal.
4. Reinstall the bearing half and cap, and torque the bolts.

NOTE:

- Apply new engine oil to the bolt threads and flanges.
- Do not rotate the crankshaft during inspection.

Tightening Torque:


20 N.m (2.0 kgf.m, 14 lbf.ft) +90°

5. Remove the rod cap and bearing half and measure the widest part of the plastigage.

Connecting Rod Bearing-to-Journal Oil Clearance

Standard (New): 0.020-0.044 mm (0.0008-0.0017 in.)

Service Limit: 0.050 mm (0.0020 in.)

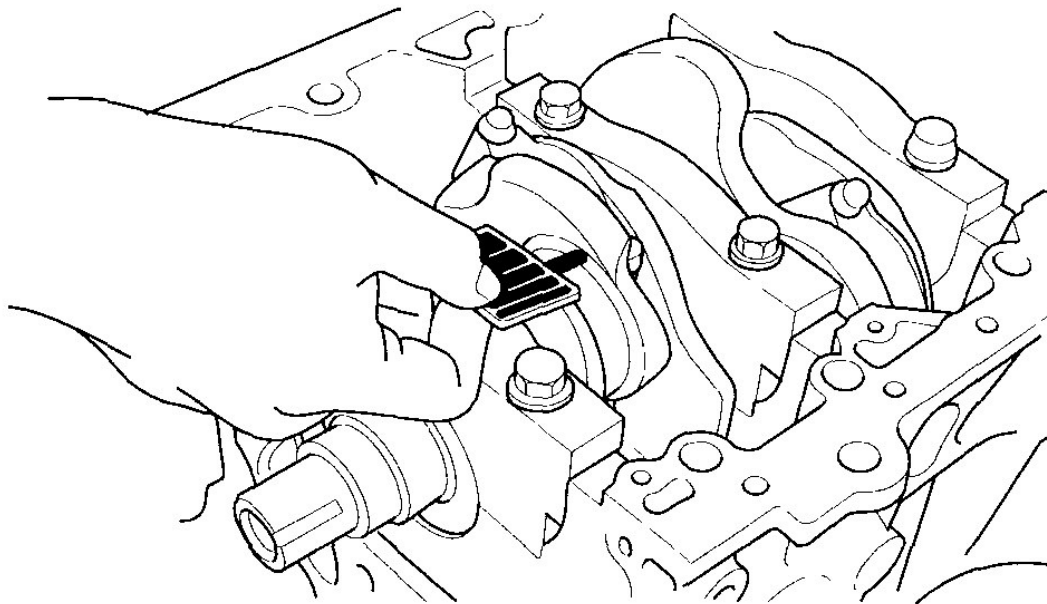

G03658986

Fig. 11: Measuring Widest Part Of Plastigage
Courtesy of AMERICAN HONDA MOTOR CO., INC.

6. If the plastigage measures too wide or too narrow, remove the upper half of the bearing, then install a new, complete bearing with the same color code, and recheck the clearance. Do not file, shim, or scrape the bearings or the caps to adjust clearance.
7. If the plastigage shows the clearance is still incorrect, try the next larger or smaller bearing (the color listed above or below that one), and check clearance again. If the proper clearance cannot be obtained by

using the appropriate larger or smaller bearings, replace the crankshaft (see **CRANKSHAFT AND PISTON REMOVAL**) and start over.

ROD BEARING SELECTION

Each rod falls into one of four tolerance ranges (from 0 to 0.024 mm (0.0009 in.), in 0.006 mm (0.0002 in.) increments) depending on the size of its big end bore. It's then stamped with a number or bar (1, 2, 3, or 4/I, II, III, or IIII) indicating the range. You may find any combination of 1, 2, 3, or 4/I, II, III, or IIII in any engine.


Normal Bore Size: 58.0 mm (2.28 in.)

Inspect the connecting rod for cracks and heat damage.

Connecting Rod Bore Code Locations

Numbers or bars have been stamped on the side of each connecting rod as a code for the size of the big end. Use them, and the letters or bars stamped on the crank (codes for rod journal size), to choose the correct bearings. If the codes are indecipherable because of an accumulation of dirt and dust, do not scrub them with a wire brush or scraper. Clean them only with solvent or detergent.

Half of number or bar
is stamped on bearing cap
and the other half is
stamped on rod.

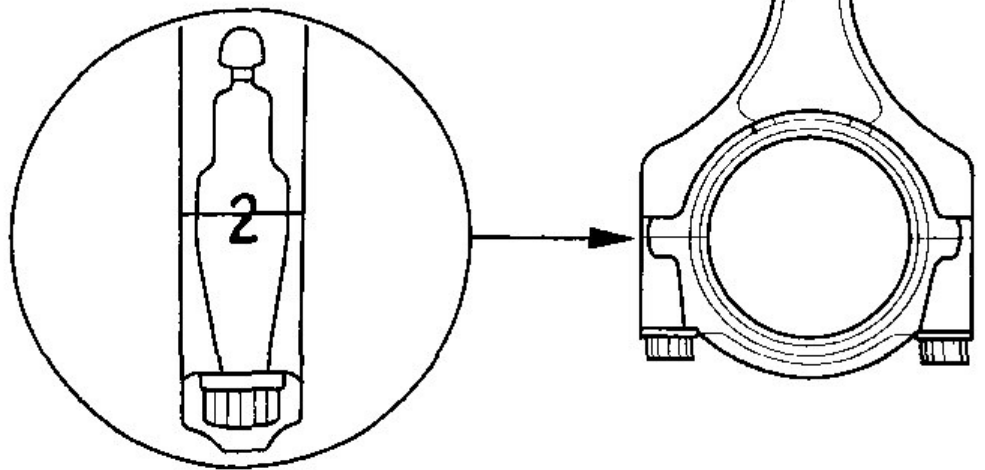

G03658987

Fig. 12: Locating Connecting Rod Bore Code Locations
Courtesy of AMERICAN HONDA MOTOR CO., INC.

Bearing Identification

Color code is on the edge of the bearing

→ **Larger big end bore**

1 or I	2 or II	3 or III	4 or IIII
--------	---------	----------	-----------

→ **Smaller bearing (Thicker)**

↓	A or I	↓
	B or II	
	C or III	
	D or IIII	
	E or IIIII	
	F or IIIII	
↓		↓
Smaller rod journal	Smaller bearing (Thicker)	

Pink	Pink/ Yellow	Yellow	Yellow/ Green
Pink/ Yellow	Yellow	Yellow/ Green	Green
Yellow	Yellow/ Green	Green	Green/ Brown
Yellow/ Green	Green	Green/ Brown	Brown
Green	Green/ Brown	Brown	Brown/ Black
Green/ Brown	Brown	Brown/ Black	Black

NOTE: When using bearing halves of different colors, it does not matter which color is used in the top or bottom.

G03658988

Fig. 13: Bearing & Color Code Identification Chart
Courtesy of AMERICAN HONDA MOTOR CO., INC.

Connecting Rod Journal Code Locations (Letters or Bars)


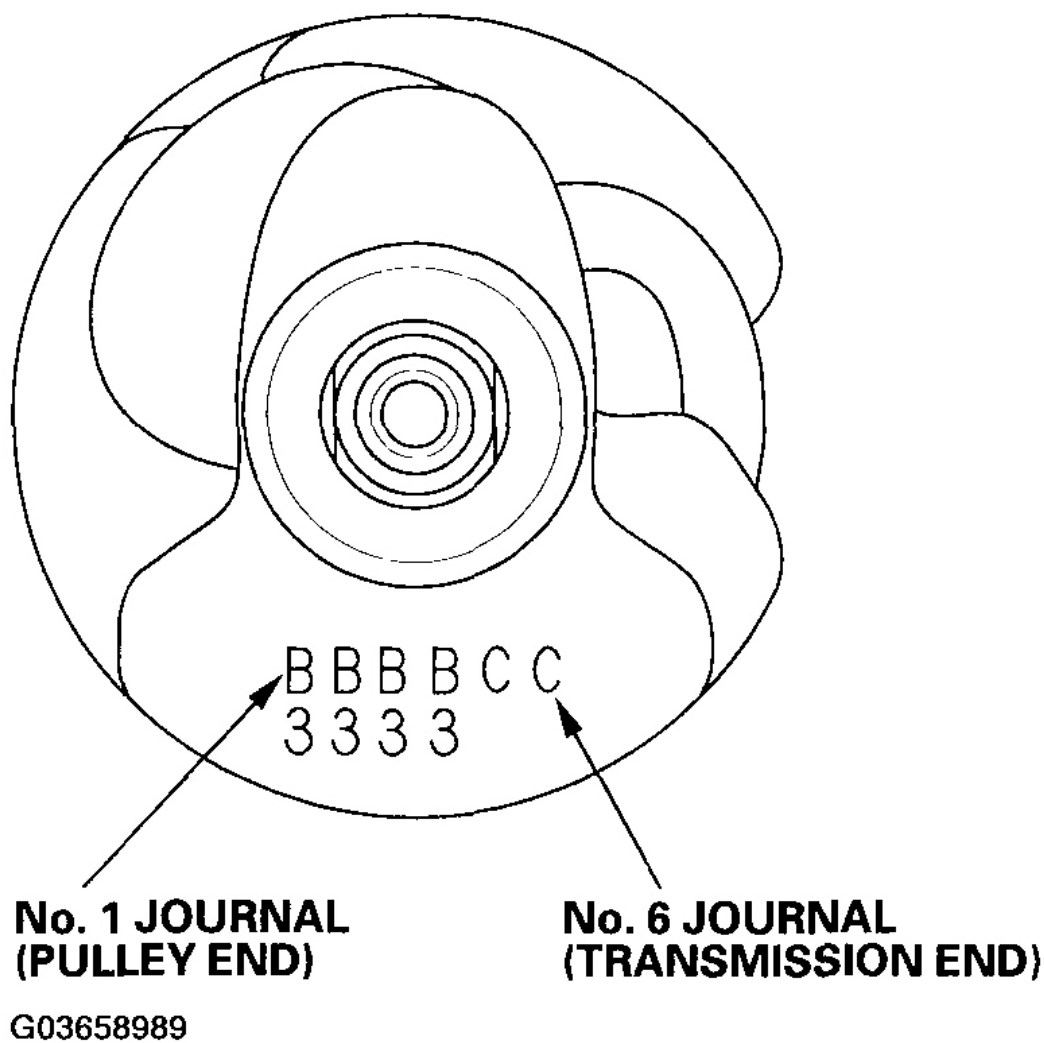


Fig. 14: Locating Connecting Rod Journal Code Locations
Courtesy of AMERICAN HONDA MOTOR CO., INC.

OIL PAN REMOVAL

1. If the engine is out of the vehicle, go to step 7.
2. Raise the vehicle on the hoist to full height.
3. Drain the engine oil (see **OIL PRESSURE TEST**).
4. Remove the splash shield (see step 35 on **ENGINE REMOVAL**).
5. Remove the under cover.

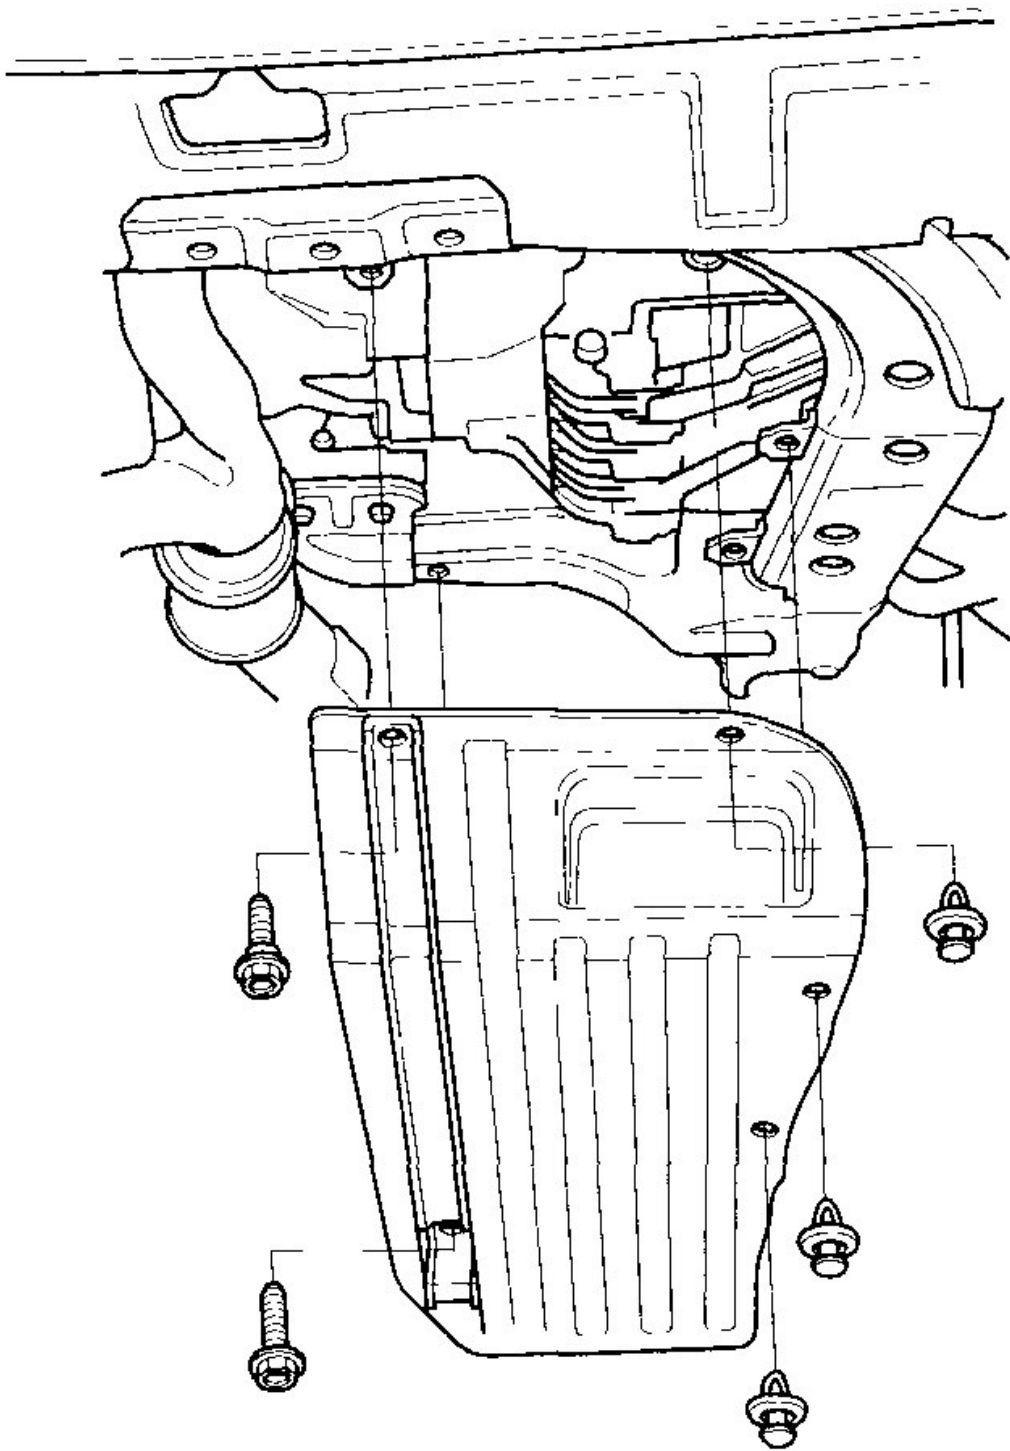


G03658990

Fig. 15: Removing Under Cover

Courtesy of AMERICAN HONDA MOTOR CO., INC.

6. Remove exhaust pipe A (see step 45 on **ENGINE REMOVAL**).
7. Remove the torque converter cover (A) and the two bolts (B) securing the transmission.

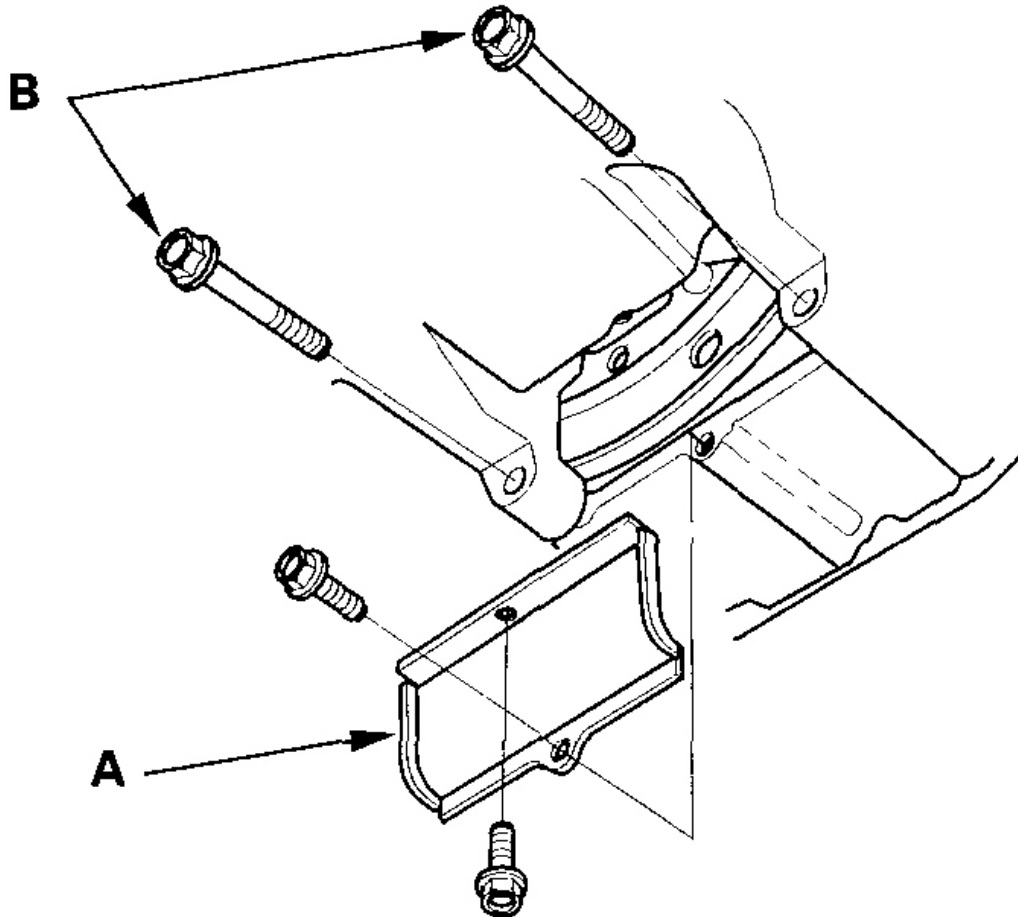


G03658991

Fig. 16: Removing Torque Converter Cover And Bolts

Courtesy of AMERICAN HONDA MOTOR CO., INC.

8. Remove the bolts securing the oil pan.
9. Using a flat blade screwdriver, separate the oil pan from the block in the places shown.

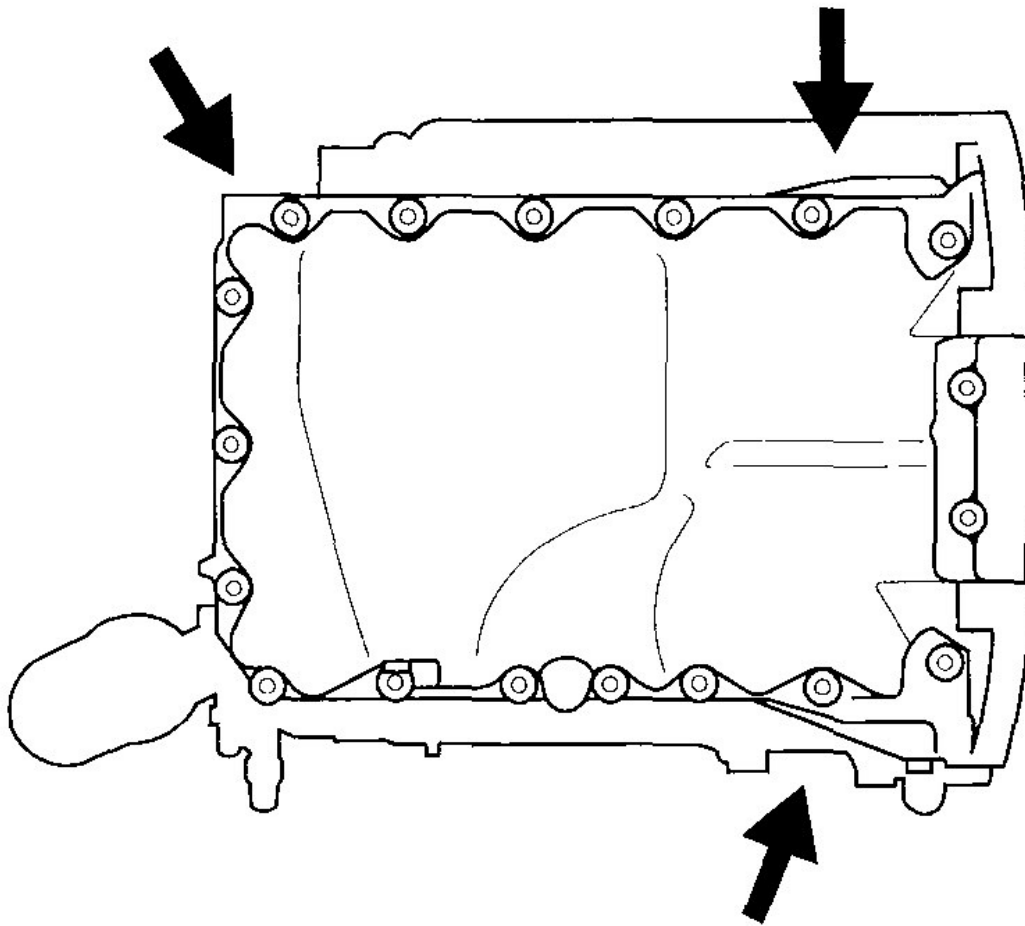

G03658992

Fig. 17: Removing Bolts Oil Pan


Courtesy of AMERICAN HONDA MOTOR CO., INC.

10. Remove the oil pan.

CRANKSHAFT AND PISTON REMOVAL

1. Remove the engine assembly (see ENGINE REMOVAL).
2. Remove the transmission:
 - Manual transmission (see TRANSMISSION REMOVAL)
 - Automatic transmission (see TRANSMISSION REMOVAL)
3. M/T model: Remove the flywheel (see FLYWHEEL AND PILOT BEARING REPLACEMENT).
4. A/T model: Remove the drive plate (see DRIVE PLATE REMOVAL AND INSTALLATION).


5. Remove the cylinder heads (see **CYLINDER HEAD REMOVAL**).
6. Remove the crankshaft position (CKP) sensor A/B (see **MAP SENSOR REPLACEMENT**).
7. Remove the timing belt drive pulley from the crankshaft.
8. Remove the oil pan (see **OIL PAN REMOVAL**).
9. Remove the engine block end cover.

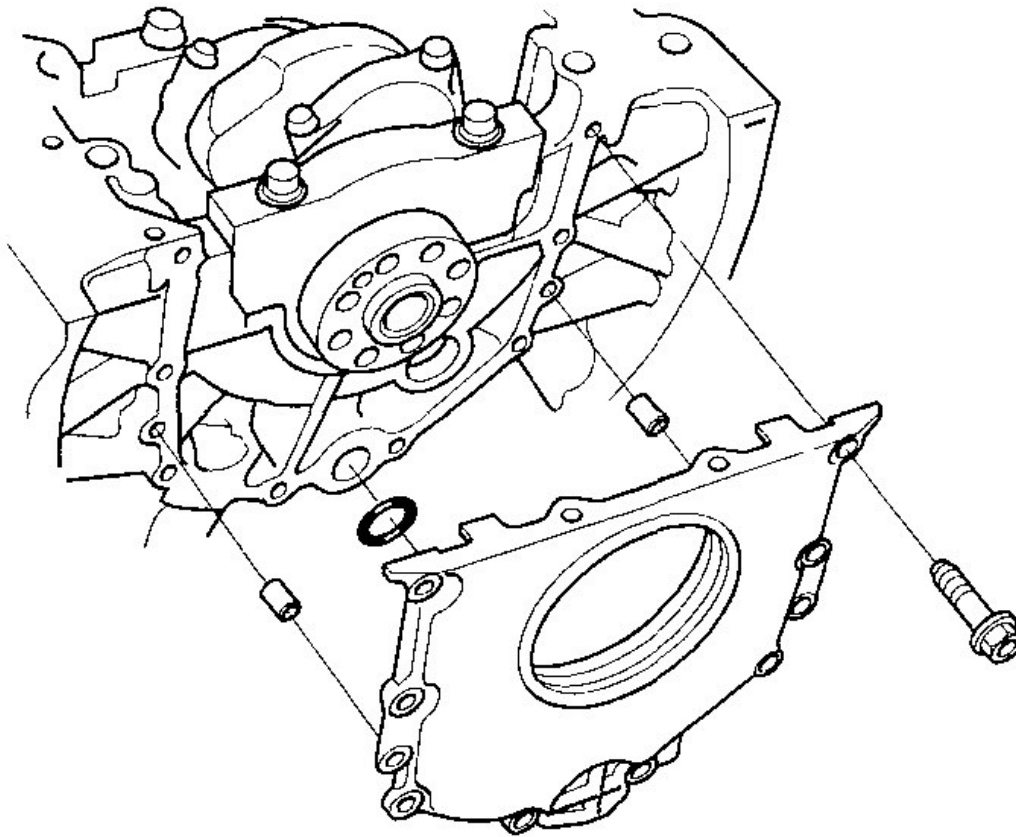

G03658993

Fig. 18: Removing Engine Block End Cover
Courtesy of AMERICAN HONDA MOTOR CO., INC.


10. Remove the rocker arm oil control solenoid (VTEC solenoid valve)/oil filter assembly.

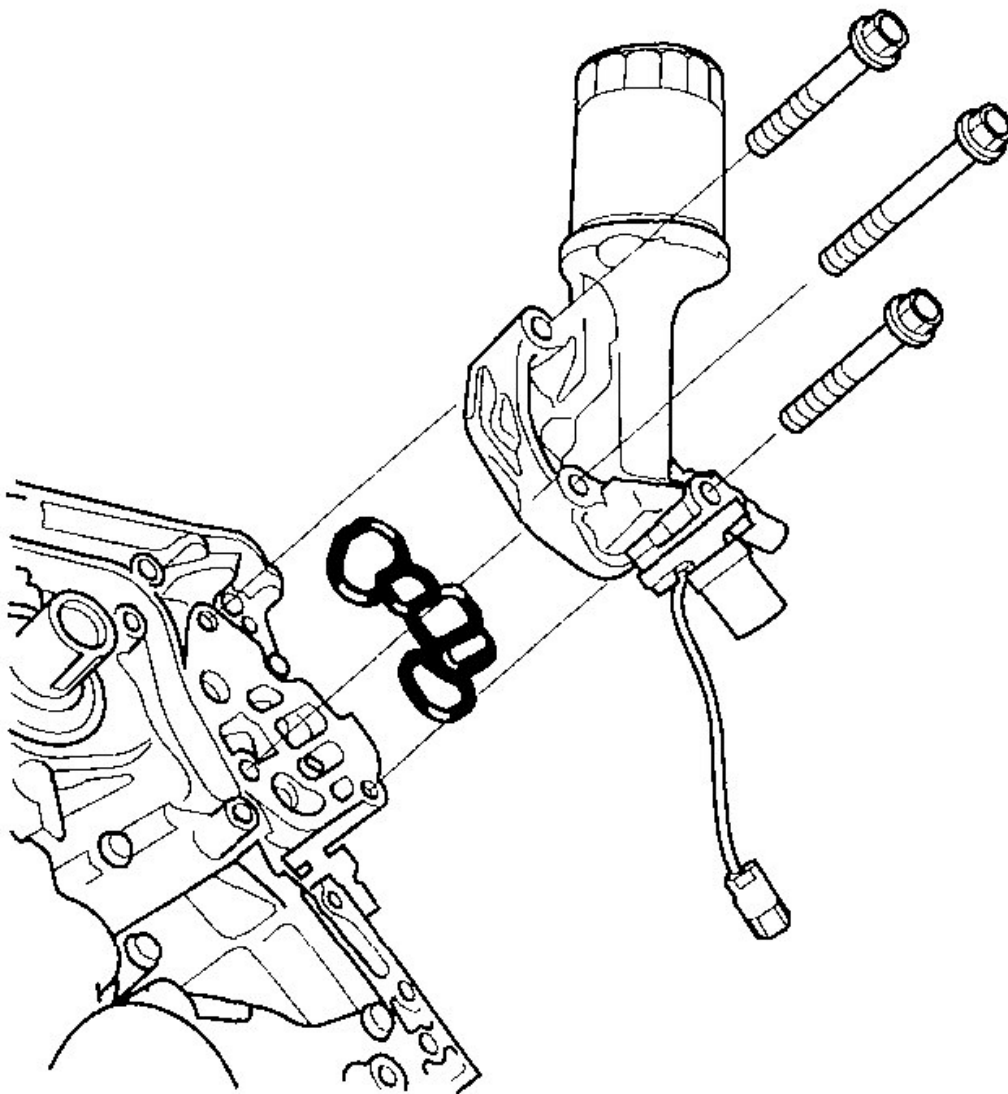

G03658994

Fig. 19: Removing Rocker Arm Oil Control Solenoid
Courtesy of AMERICAN HONDA MOTOR CO., INC.

11. Remove the oil screen (A), baffle plate (B), and oil pump (C).

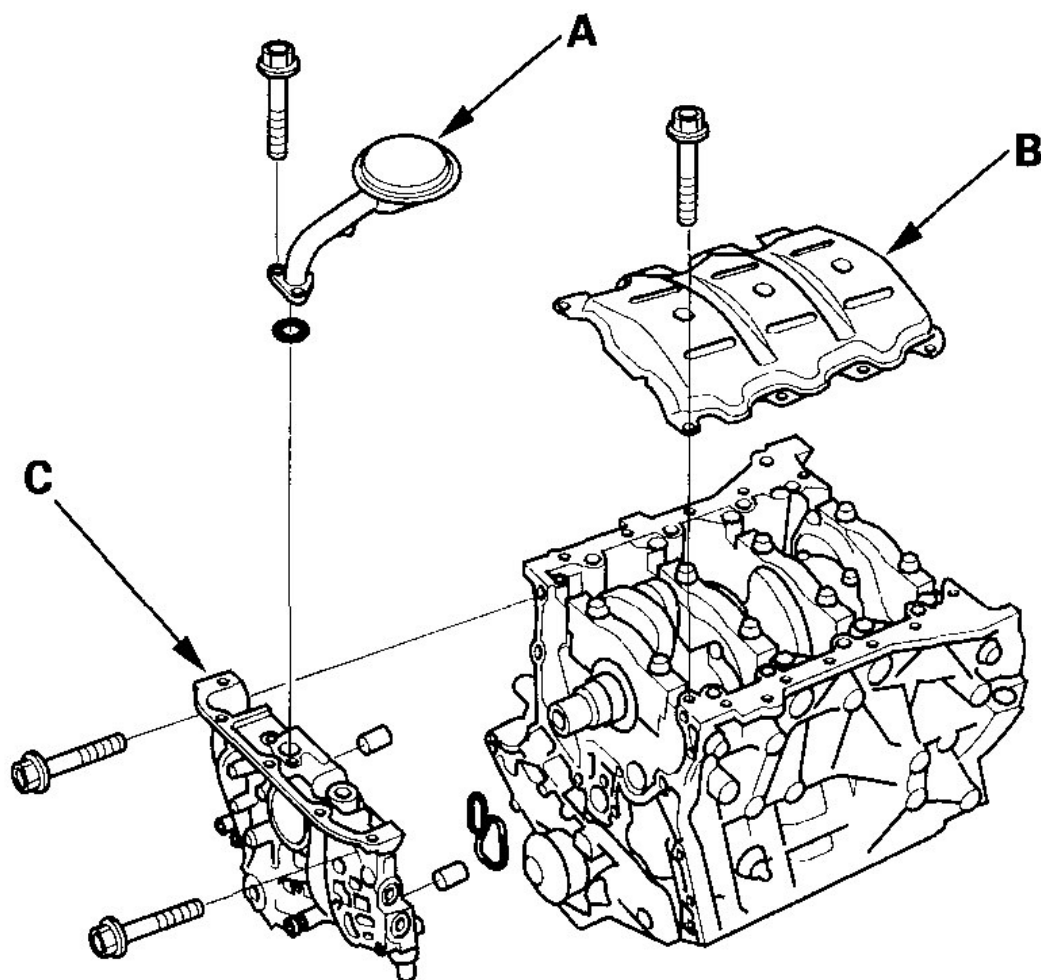

G03658995

Fig. 20: Removing Oil Screen, Baffle Plate & Oil Pump
Courtesy of AMERICAN HONDA MOTOR CO., INC.

12. If you can feel a ridge of metal or hard carbon around the top of any cylinder, remove it with a ridge reamer (A). Follow the reamer manufacturer's instructions. If the ridge is not removed, it may damage the piston as it's pushed out.

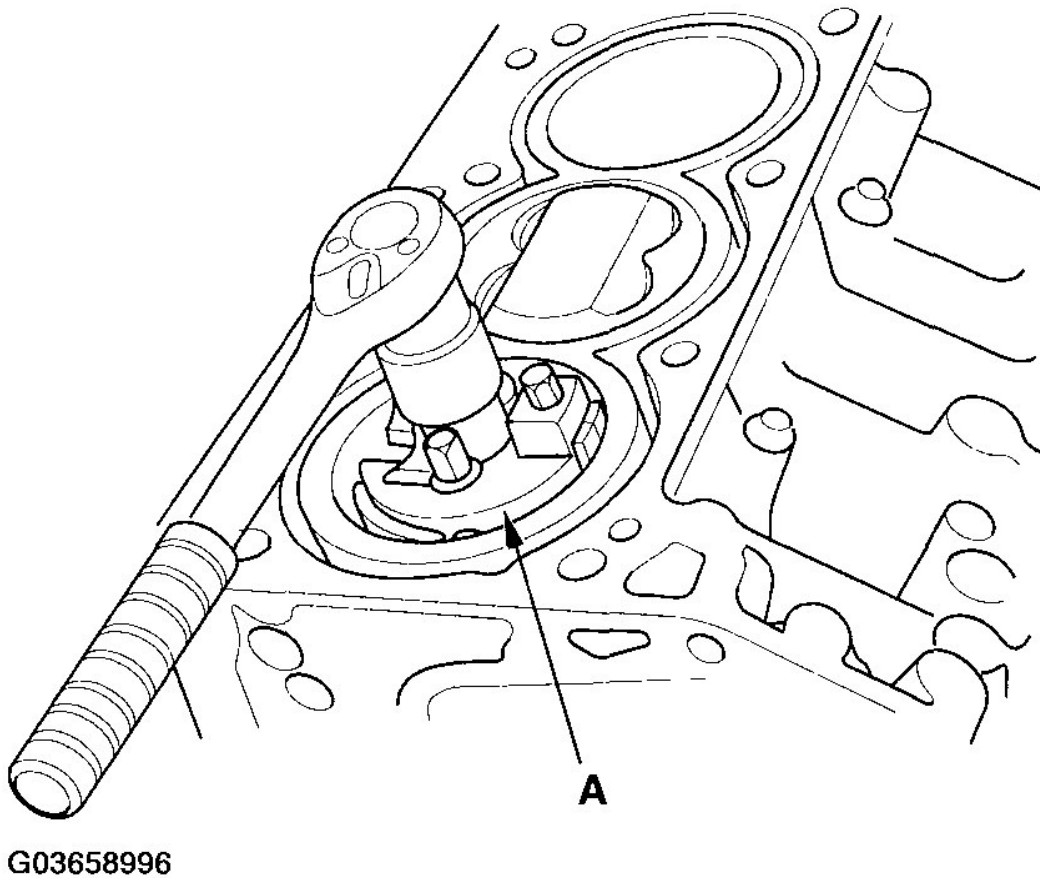
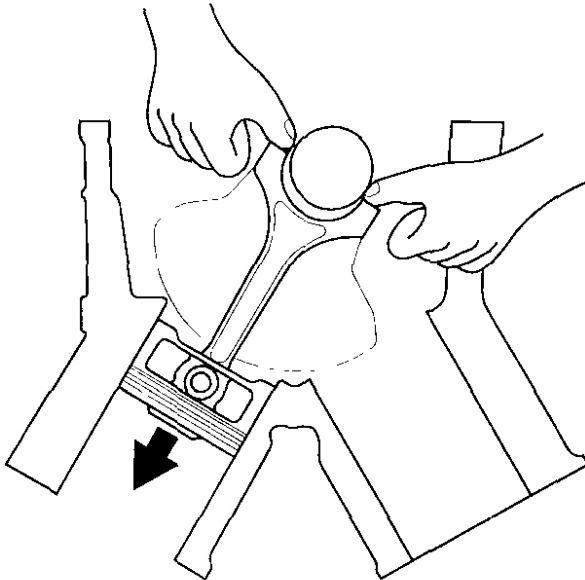
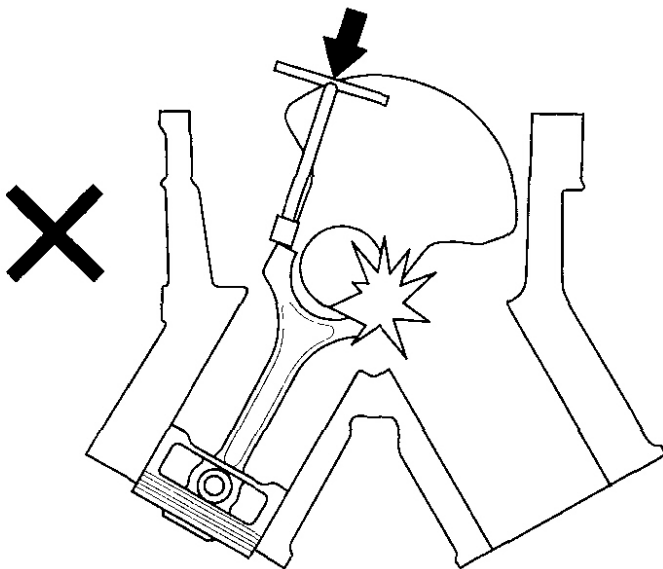


Fig. 21: Removing Ridge Of Metal Or Hard Carbon
Courtesy of AMERICAN HONDA MOTOR CO., INC.

13. Remove the connecting rod caps after setting the crank pin at bottom dead center (BDC) for each cylinder. Remove the piston/connecting rod assembly by pushing on the connecting rod. Take care not to damage the crank pin or cylinder with the connecting rod.


CORRECT**INCORRECT**

G03658997

Fig. 22: Removing Piston/Connecting Rod Assembly By Pushing - Correct Method
Courtesy of AMERICAN HONDA MOTOR CO., INC.

14. Remove the bearing from the cap. Keep all caps/bearings in order.


15. Remove the upper bearing halves from the connecting rods, and set them aside with their respective caps.
16. After removing a piston/connecting rod assembly, reinstall the cap on the rod.
17. To avoid confusion during reassembly, mark each piston/connecting rod assembly with its cylinder number.
18. Unscrew the bearing cap bolts and bearing cap side bolts in sequence 1/3 turn at a time; repeat the sequence until all bolts are loosened.

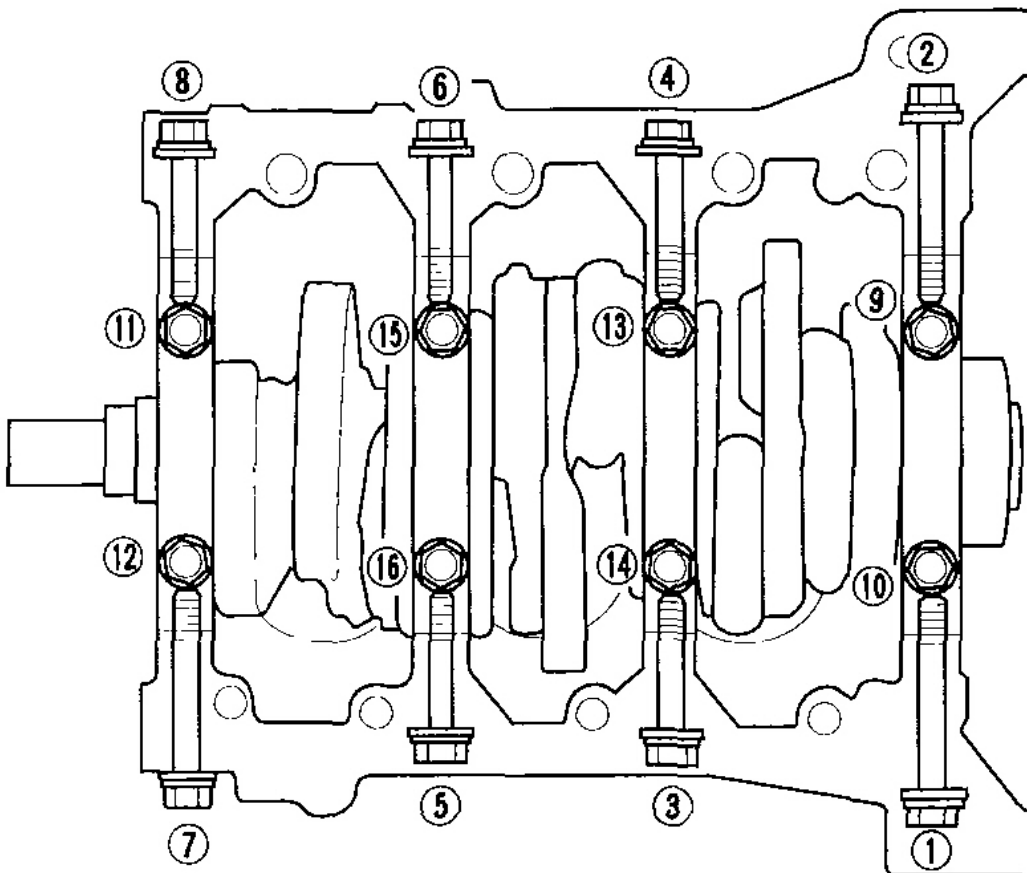

G03658998

Fig. 23: Tightening Bearing Cap Bolts & Bearing Cap Side Bolts In Sequence
Courtesy of AMERICAN HONDA MOTOR CO., INC.


19. Remove the bearing cap bolts (A) and bearing cap side bolts (B), then remove the bearing cap (C).

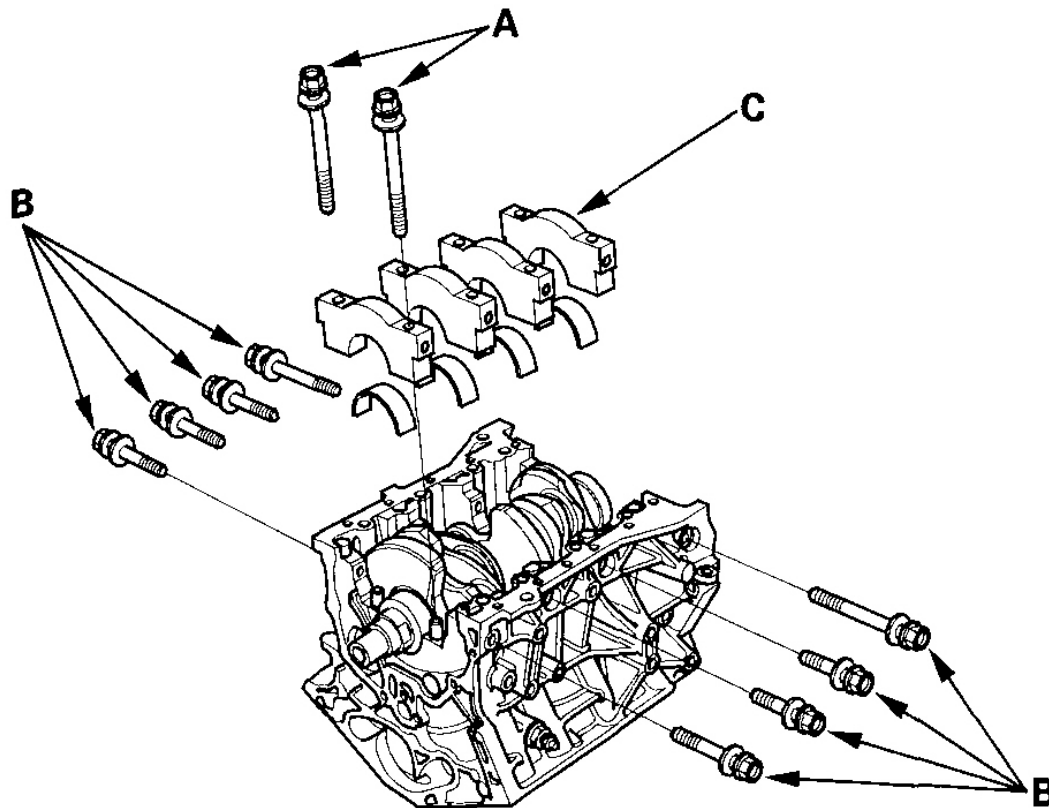

G03658999

Fig. 24: Removing Bearing Cap Bolts
Courtesy of AMERICAN HONDA MOTOR CO., INC.

20. Lift the crankshaft (A) out of the engine block, being careful not to damage the journals.

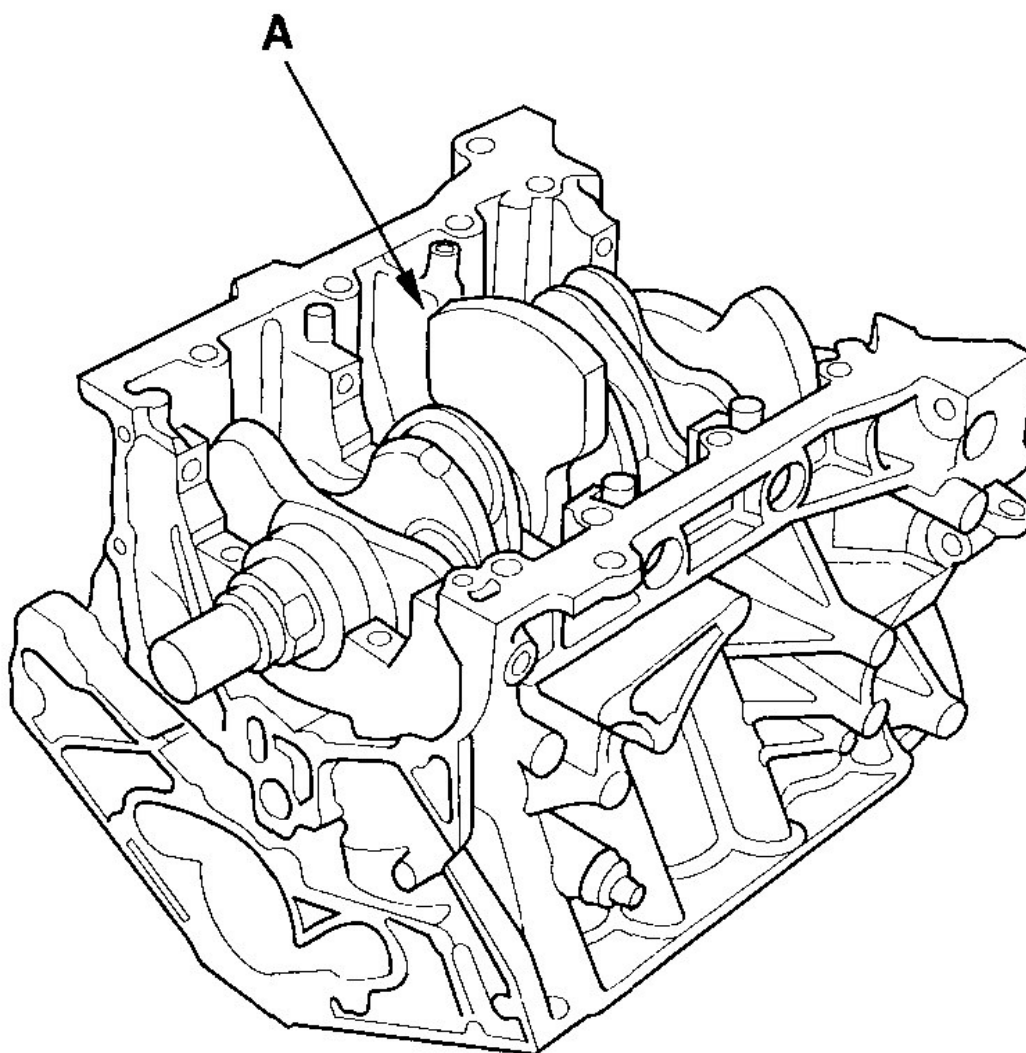

G03659000

Fig. 25: Lifting Crankshaft Out Of Engine Block
Courtesy of AMERICAN HONDA MOTOR CO., INC.

21. Reinstall the main caps and bearings on the engine block in the proper order.

CRANKSHAFT INSPECTION

Out-of-Round and Taper


1. Remove the crankshaft from the engine block (see **CRANKSHAFT AND PISTON REMOVAL**).

2. Clean the crankshaft oil passages with pipe cleaners or a suitable brush.
3. Check the keyway and threads.
4. Measure out-of-round at the middle of each rod and main journal in two place. The difference between measurements on each journal must not be more than the service limit.

Journal Out-of-Round

Standard (New): 0.005 mm (0.0002 in.) max.

Service Limit: 0.010 mm (0.0004 in.)

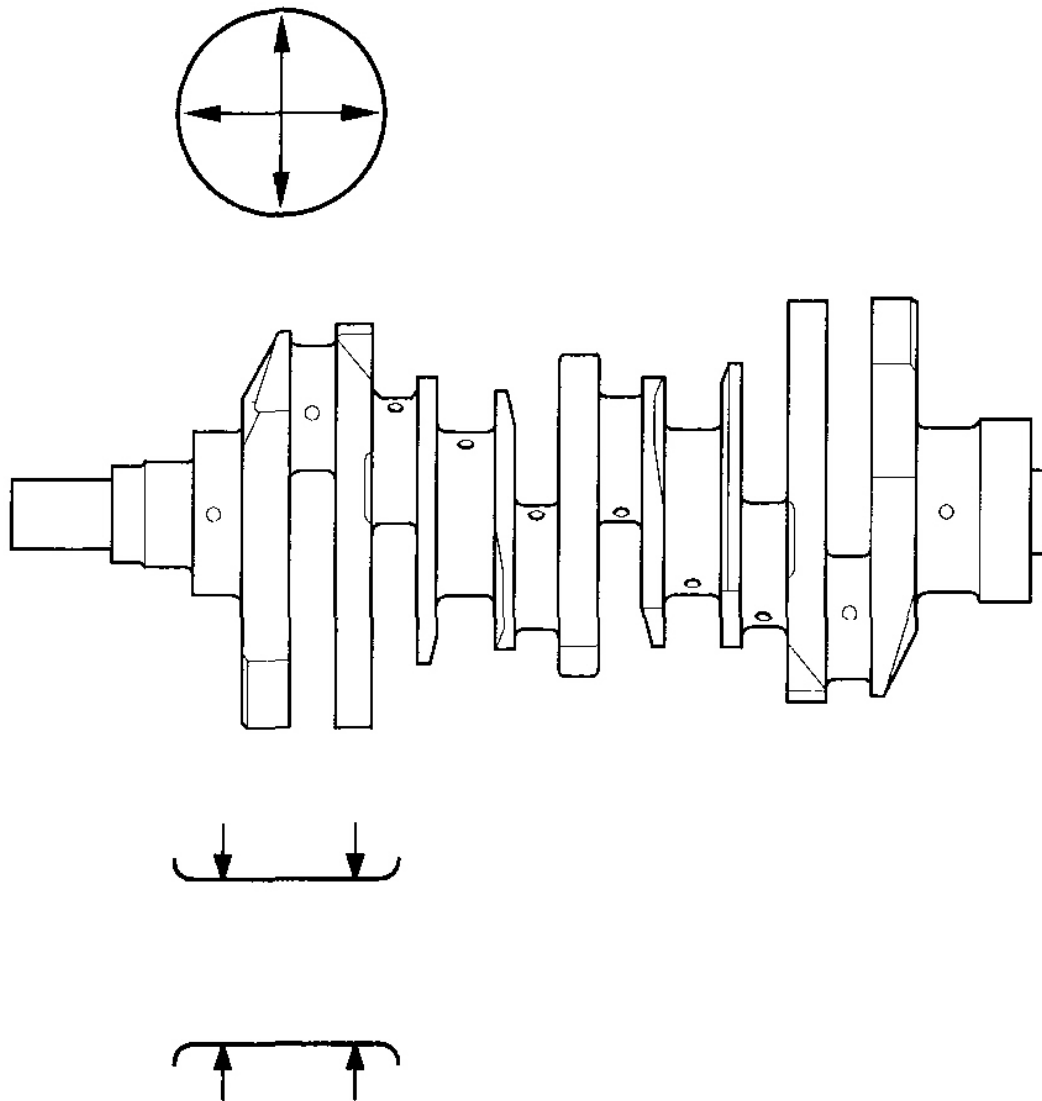

G03659001

Fig. 26: Measuring Out-Of-Round At Middle Of Each Rod & Main Journal
Courtesy of AMERICAN HONDA MOTOR CO., INC.

5. Measure taper at the edges of each rod and main journal. The difference between measurements on each journal must not be more than the service limit.

Journal Taper

Standard (New): 0.005 mm (0.0002 in.) max.

Service Limit: 0.010 mm (0.0004 in.)


Straightness

6. Place the engine block on the surface plate.
7. Clean and install the bearings on the No. 1 and No. 4 journal of the engine block.
8. Lower the crankshaft into the engine block.
9. Measure the runout on all of the main journals. Rotate the crankshaft two complete revolutions. The difference between measurements on each journal must not be more than the service limit.

Crankshaft Total Runout

Standard (New): 0.025 mm (0.0010 in.) max.

Service Limit: 0.030 mm (0.0012 in.)

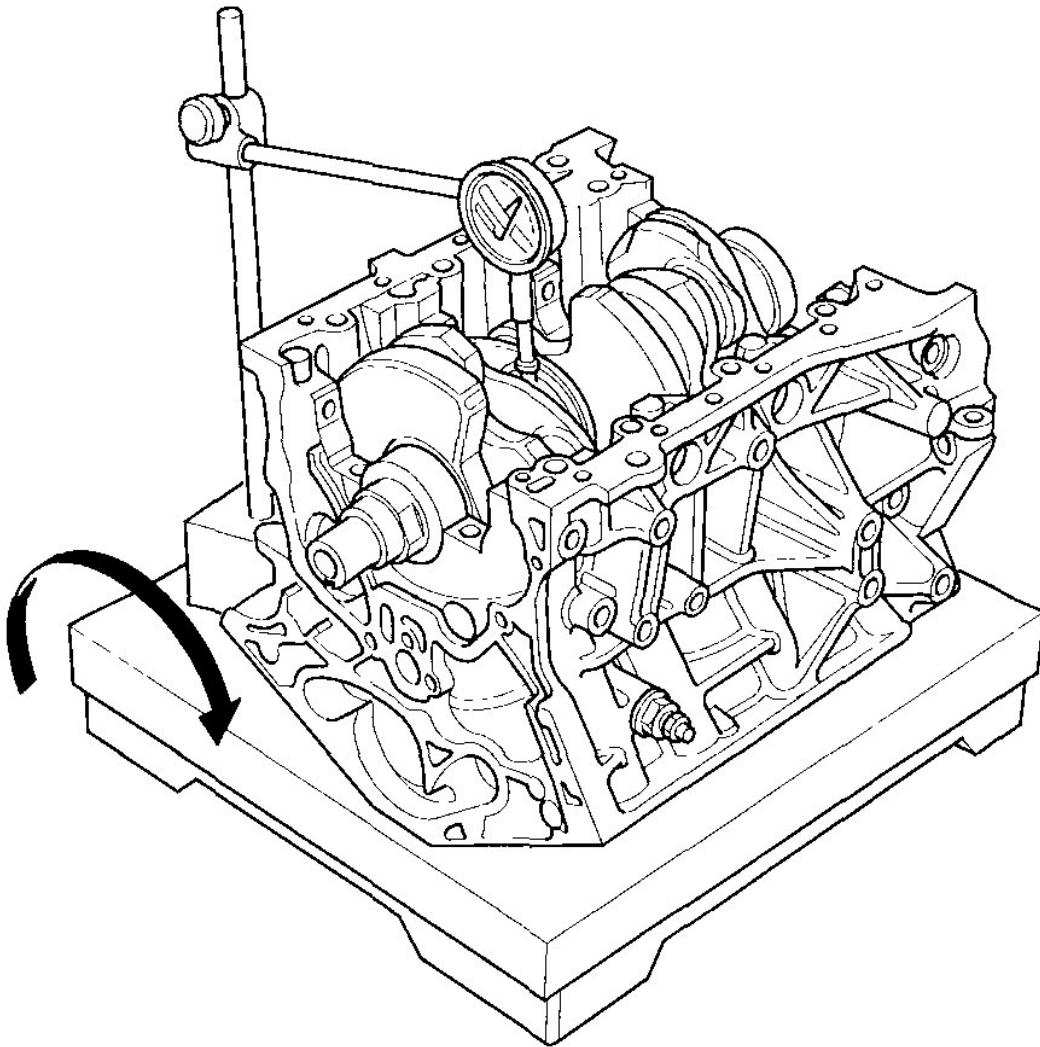

G03659002

Fig. 27: Measuring Runout On All Of Main Journals
Courtesy of AMERICAN HONDA MOTOR CO., INC.

BLOCK AND PISTON INSPECTION

1. Remove the piston from the engine block (see **CRANKSHAFT AND PISTON REMOVAL**).
2. Check the piston for distortion or cracks.
3. Measure the piston diameter at a point 16.0 mm (0.63 in.) from the bottom of the skirt.

Piston Diameter

2005 Acura TL

2006 ENGINE Engine Block - TL



Standard (New): 88.975-88.985 mm (3.5029-3.5033 in.)

Service Limit: 88.965 mm (3.5026 in.)

Oversize Piston Diameter

0.25: 89.225-89.235 mm (3.5128-3.5132 in.)

16.0 mm
(0.63 in.)

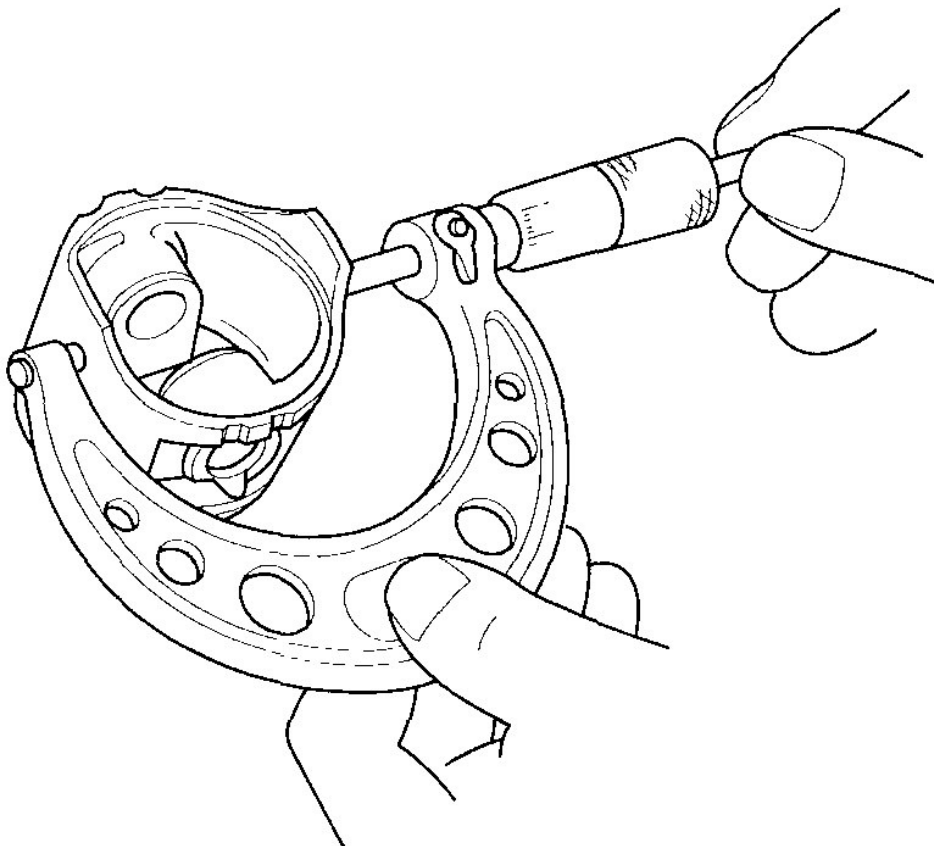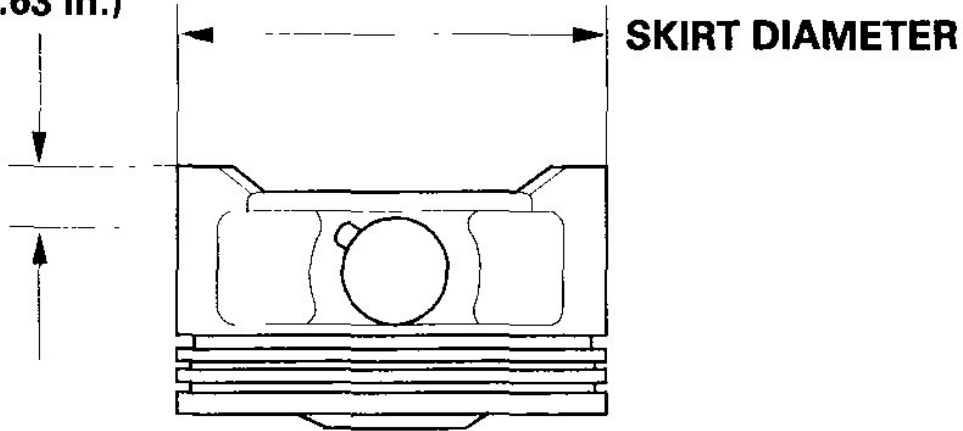

G03659003

Fig. 28: Measuring Piston Diameter At Point
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. Measure wear and taper in direction X and Y at three levels in each cylinder as shown. If measurements in any cylinder are beyond the oversize bore service limit, replace the engine block. If the engine block has to be rebored, refer to step 7 after reboring.

Cylinder Bore Size

Standard (New): 89.000-89.015 mm (3.5039-3.5045 in.)

Service Limit: 89.065 mm (3.5065 in.)


Oversize

0.25: 89.250-89.265 mm (3.5138-3.5144 in.)

Reboring Limit: 0.25 mm (0.01 in.)

Bore Taper

Limit: (Difference between first and third measurement) 0.05 mm (0.002 in.)

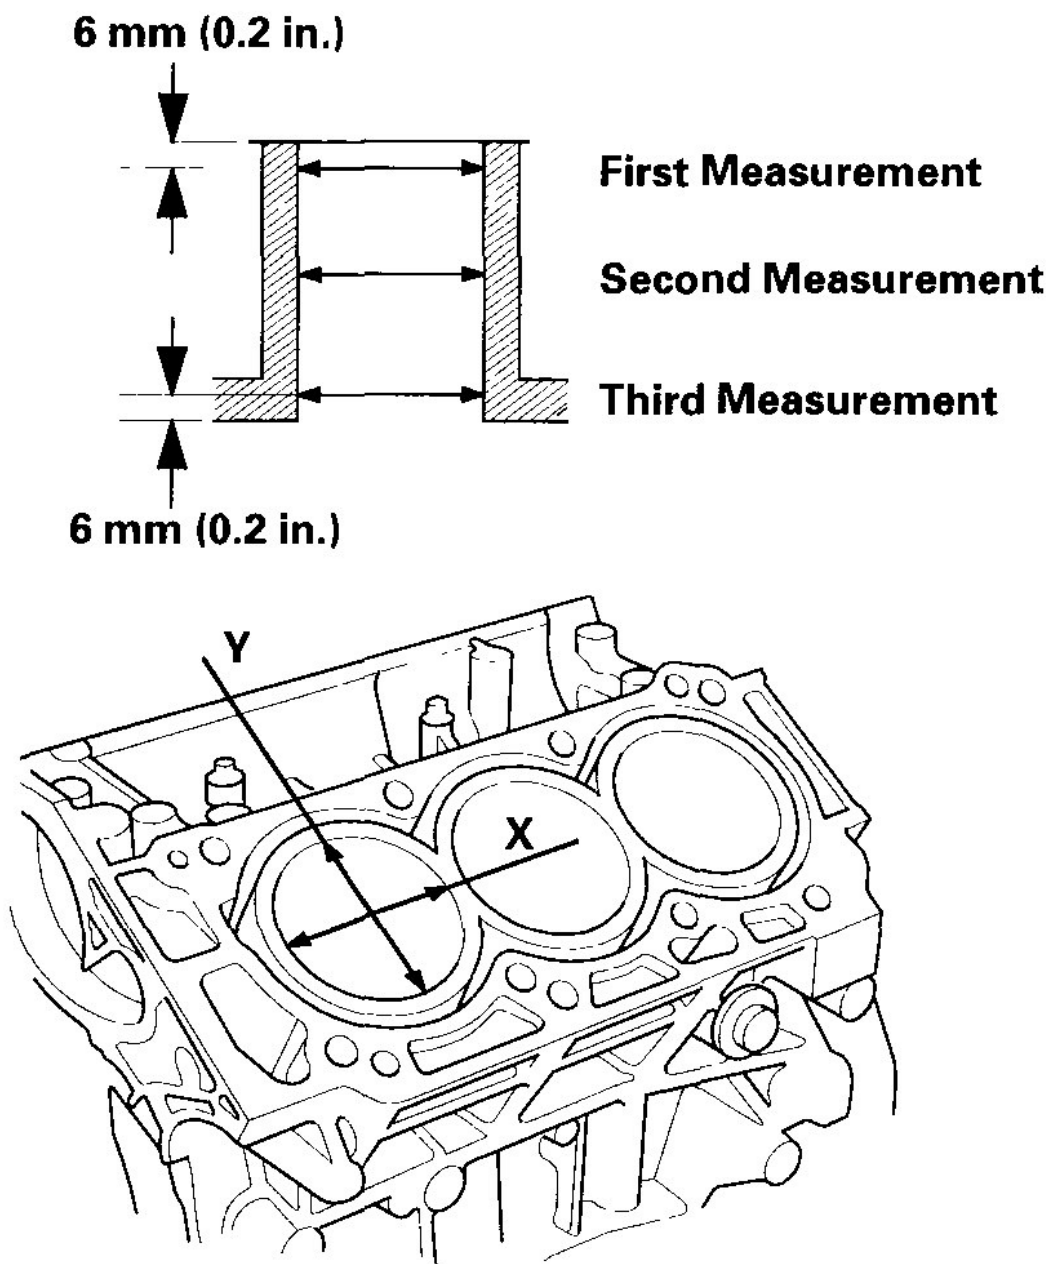


G03659004


Fig. 29: Measuring Wear & Taper In Direction
Courtesy of AMERICAN HONDA MOTOR CO., INC.

5. Scored or scratched cylinder bores must be honed (see **CYLINDER BORE HONING**).
6. Check the top of the engine block for warpage. Measure along the edges and across the center as shown.

Engine Block Warpage**Standard (New): 0.07 mm (0.003 in.) max.****Service Limit: 0.10 mm (0.004 in.)**

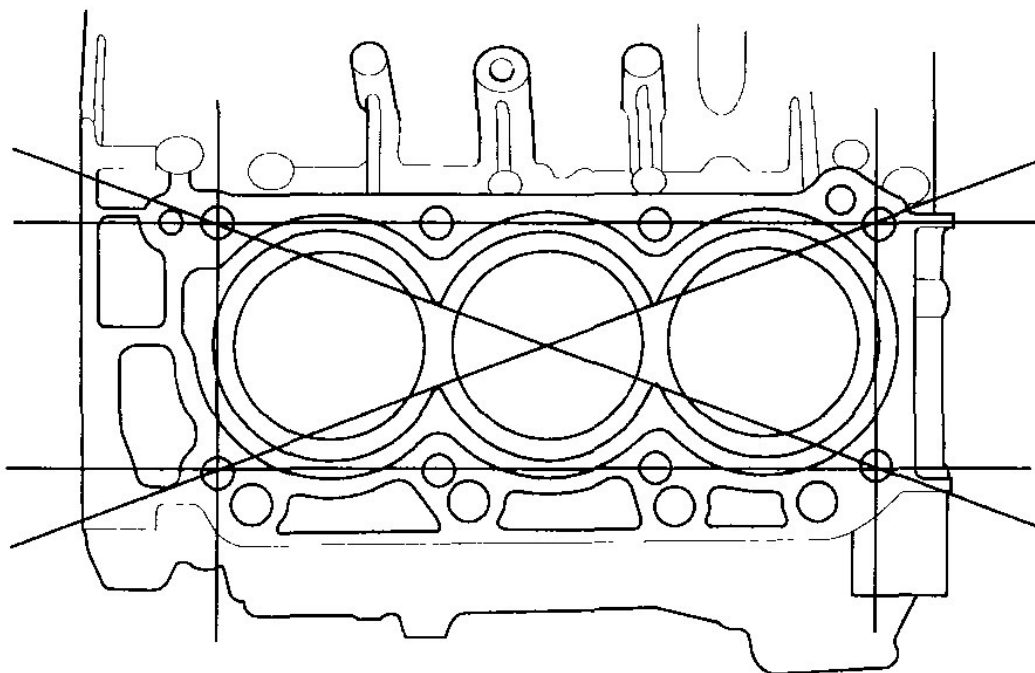

PRECISION STRAIGHT EDGE

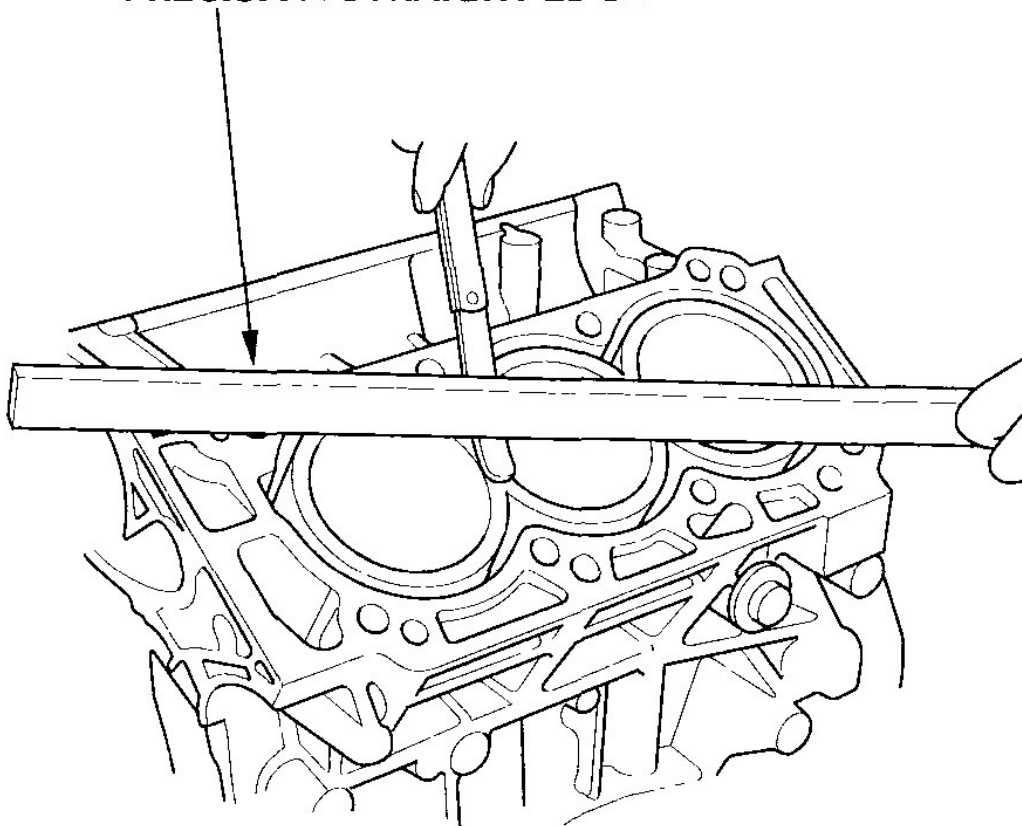

G03659005


Fig. 30: Checking Top Of Engine Block For Warpage
Courtesy of AMERICAN HONDA MOTOR CO., INC.

7. Calculate the difference between cylinder bore diameter and piston diameter. If the clearance is near or exceeds the service limit, inspect the piston and cylinder bore for excessive wear.

Piston-to-Block Clearance

Standard (New): 0.015-0.040 mm (0.0006-0.0016 in.)

Service Limit: 0.08 mm (0.003 in.)

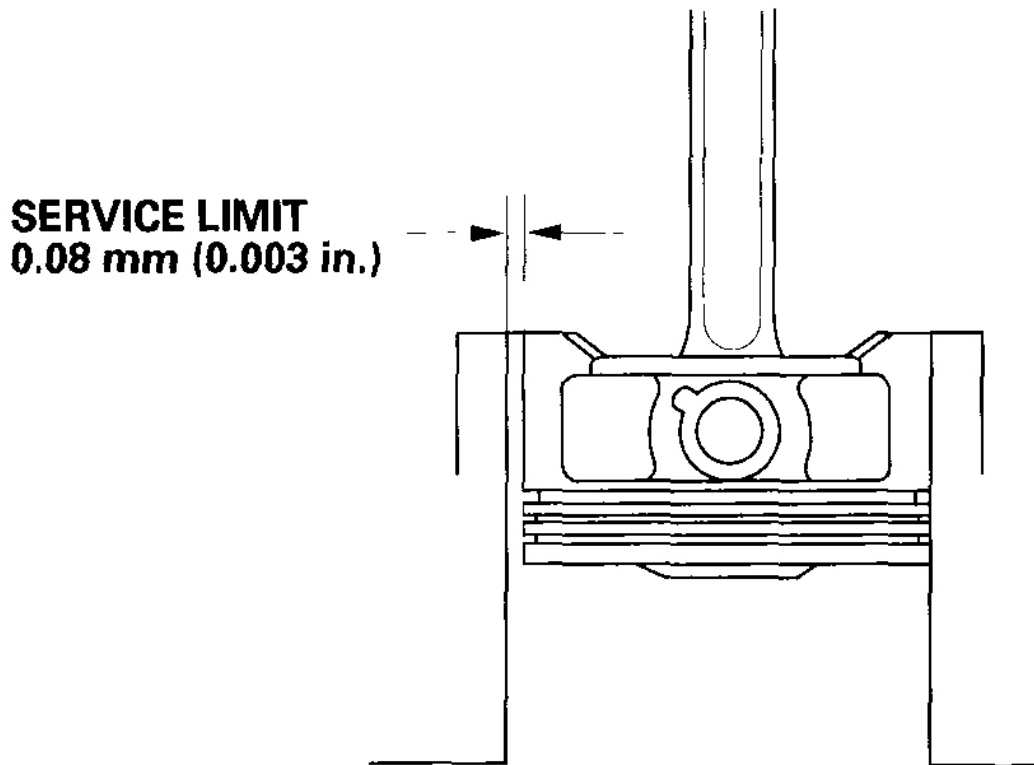

G03659006

Fig. 31: Calculating Difference Between Cylinder Bore Diameter & Piston Diameter
Courtesy of AMERICAN HONDA MOTOR CO., INC.


CYLINDER BORE HONING

1. Measure the cylinder bores (see step 4). If the engine block is to be reused, hone the cylinders and remeasure the bores. Only scored or scratched cylinder bores must be honed.

2. Hone the cylinder bores with honing oil and a fine (400 grit) stone in a 60 degree crosshatch pattern.

NOTE:

- Use only a rigid hone with 400 grit or finer stone, such as Sunnen, AMMCO, or equivalent.
- Do not use stones that are worn or broken.

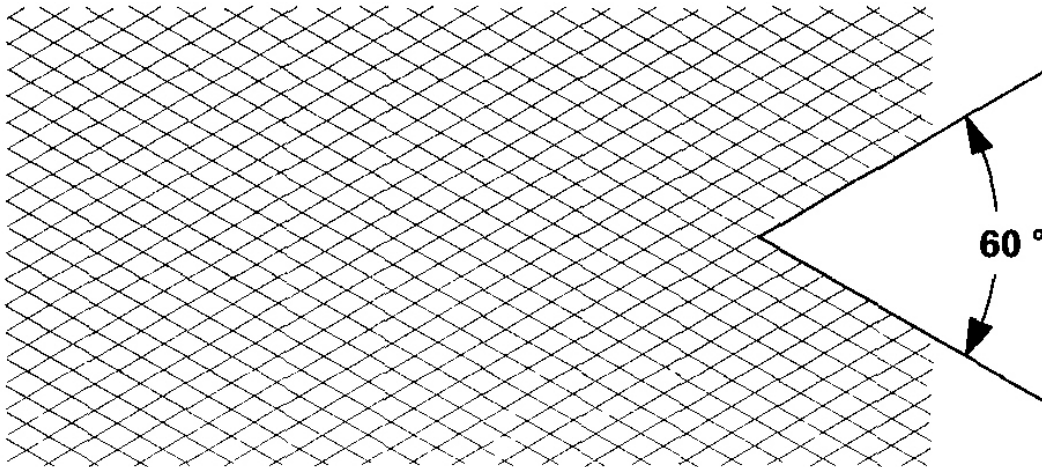

G03659007

Fig. 32: Identifying Honing Oil & Fine Stone In 60 Degree Crosshatch Pattern
Courtesy of AMERICAN HONDA MOTOR CO., INC.


3. When honing is complete, thoroughly clean the engine block of all metal particles. Wash the cylinder bores with hot soapy water, then dry and oil them immediately to prevent rusting. Never use solvent, it will only redistribute the grit on the cylinder walls.
4. If scoring or scratches are still present in the cylinder bores after honing to the service limit, rebore the engine block. Some light vertical scoring and scratching is acceptable if it is not deep enough to catch your fingernail and does not run the full length of the bore.

PISTON, PIN, AND CONNECTING ROD REPLACEMENT

DISASSEMBLY

1. Remove the piston from the engine block (see **CRANKSHAFT AND PISTON REMOVAL**).
2. Apply new engine oil to the piston pin snap rings (A) and turn them in the ring grooves until the end gaps are lined up with the cutouts in the piston pin bores (B).


NOTE: Take care not to damage the ring grooves.

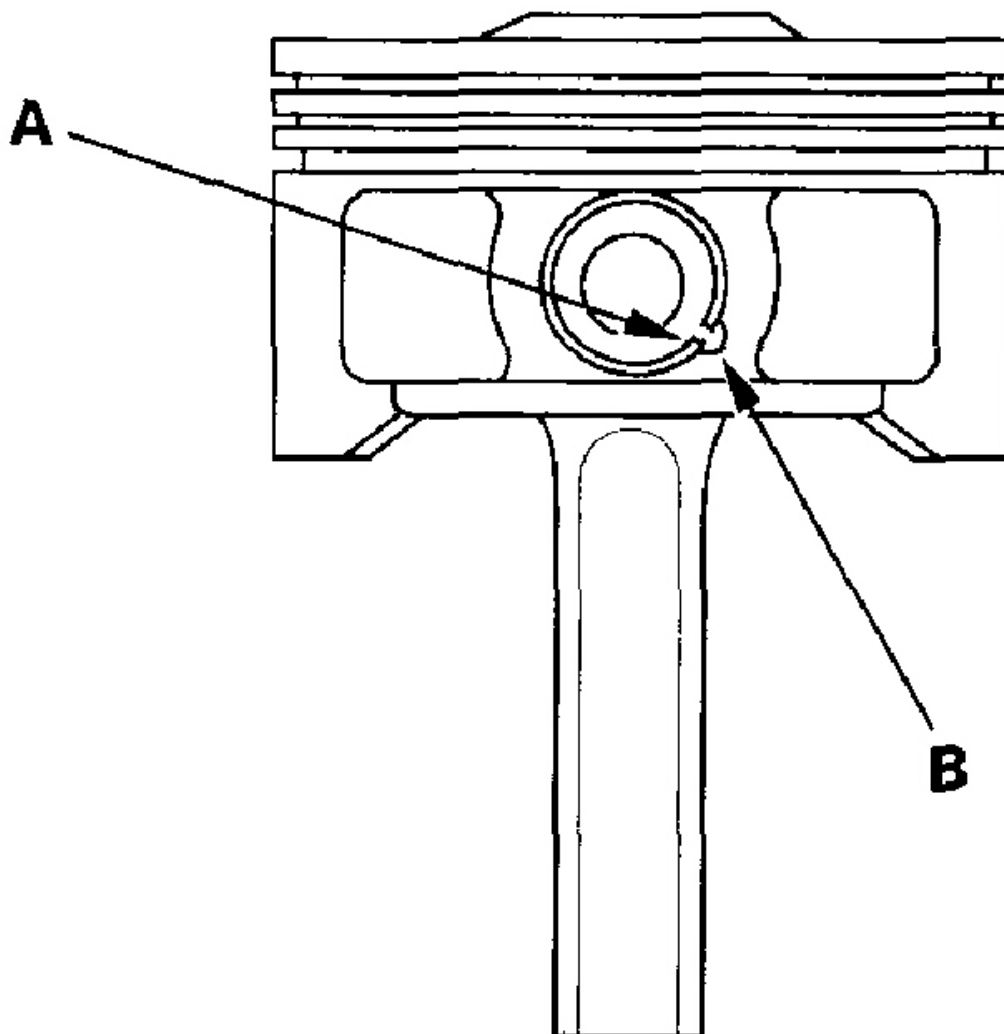

G03659008

Fig. 33: Applying Engine Oil To Piston Pin Snap Rings
Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Remove snap rings (A) from both sides of the piston. Start at the cutout in the piston pin bore. Remove the snap rings carefully so they do not go flying or get lost. Wear eye protection.

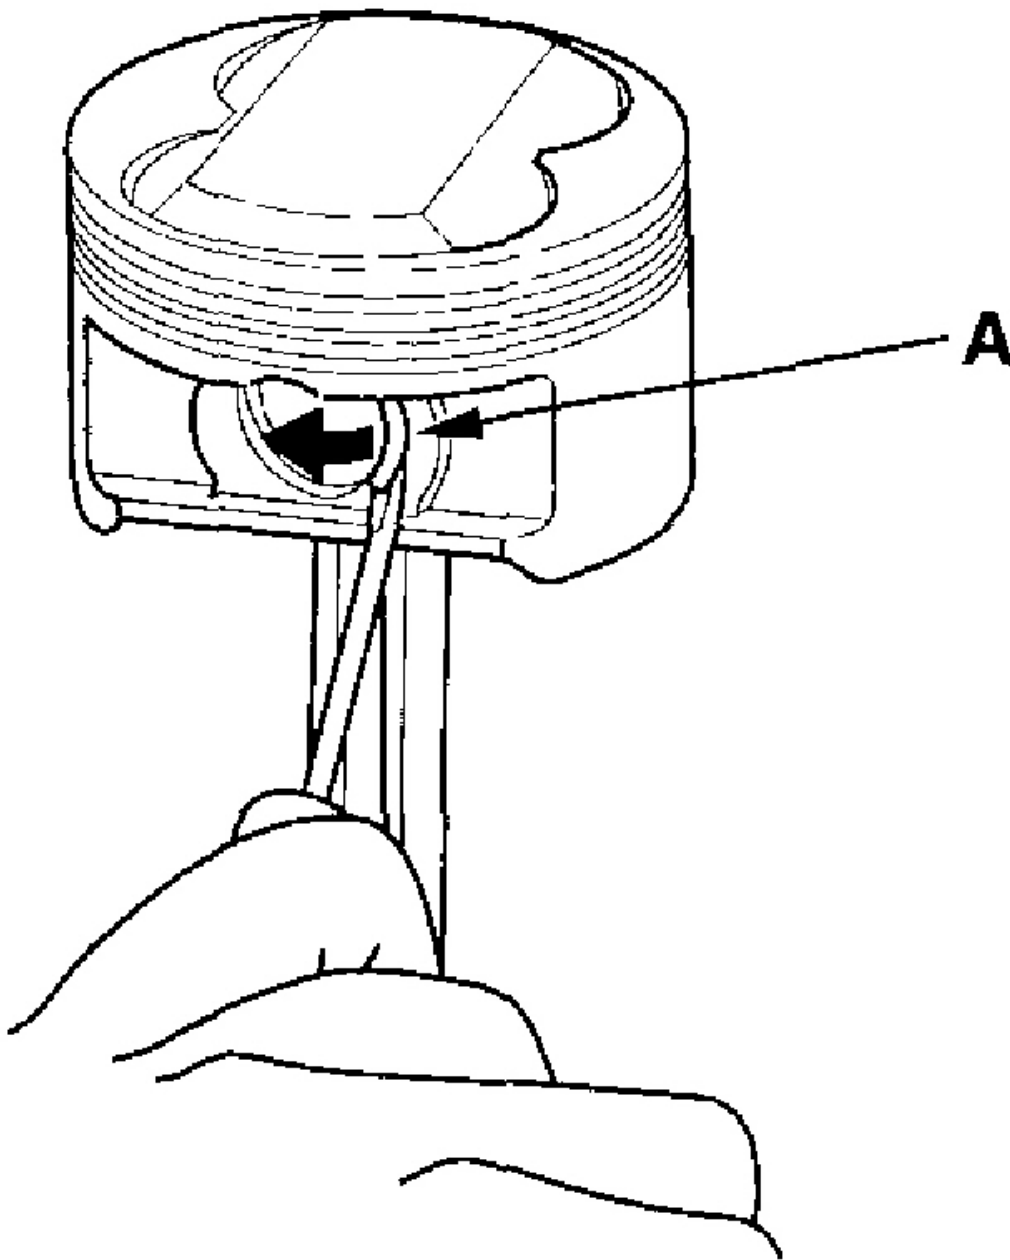


G03659009

Fig. 34: Removing Snap Rings

Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. Heat the piston and connecting rod assembly to about 158°F (70°C), then remove the piston pin.

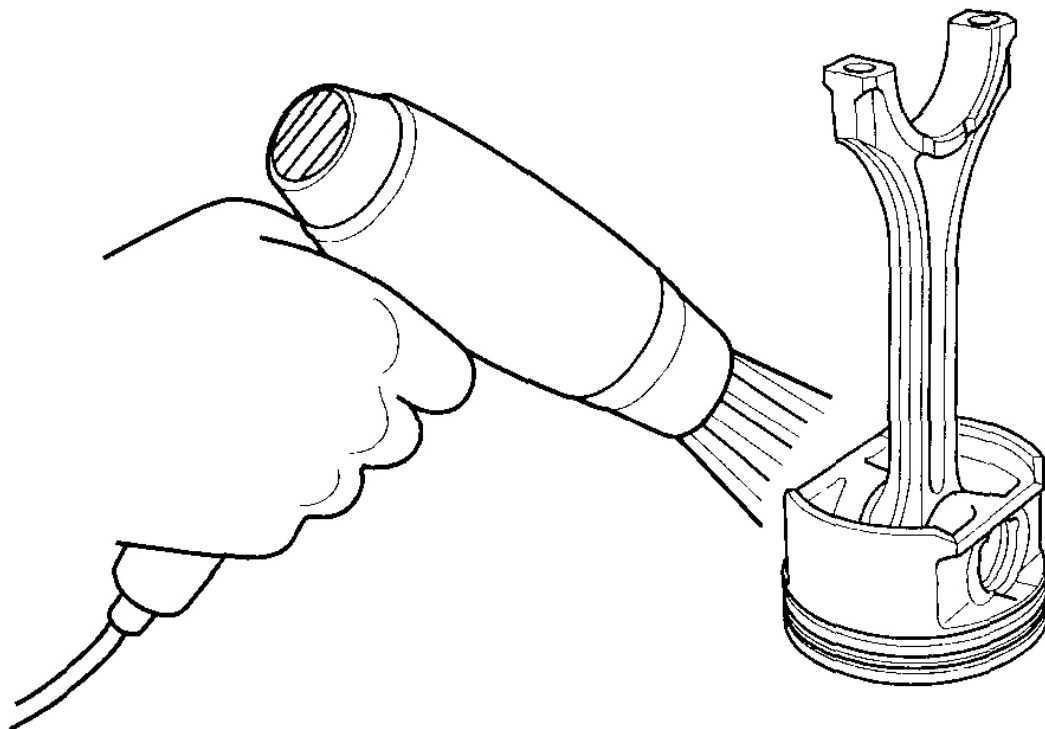

G03659010

Fig. 35: Heating Piston & Connecting Rod Assembly
Courtesy of AMERICAN HONDA MOTOR CO., INC.

INSPECTION


NOTE: Inspect the piston, piston pin, and connecting rod when they are at room temperature.

1. Measure the diameter of the piston pin.

Piston Pin Diameter

Standard (New): 21.962-21.965 mm (0.8646-0.8648 in.)


Service Limit: 21.954 mm (0.8643 in.)

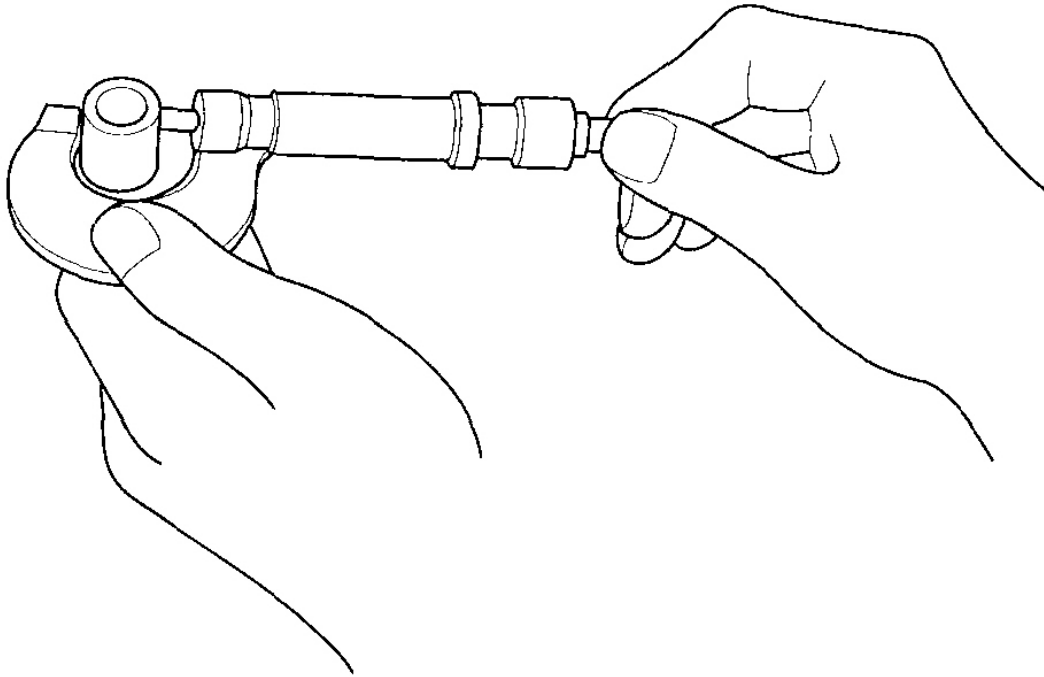

G03659011

Fig. 36: Measuring Diameter Of Piston Pin
Courtesy of AMERICAN HONDA MOTOR CO., INC.

2. Zero the dial indicator to the piston pin diameter.

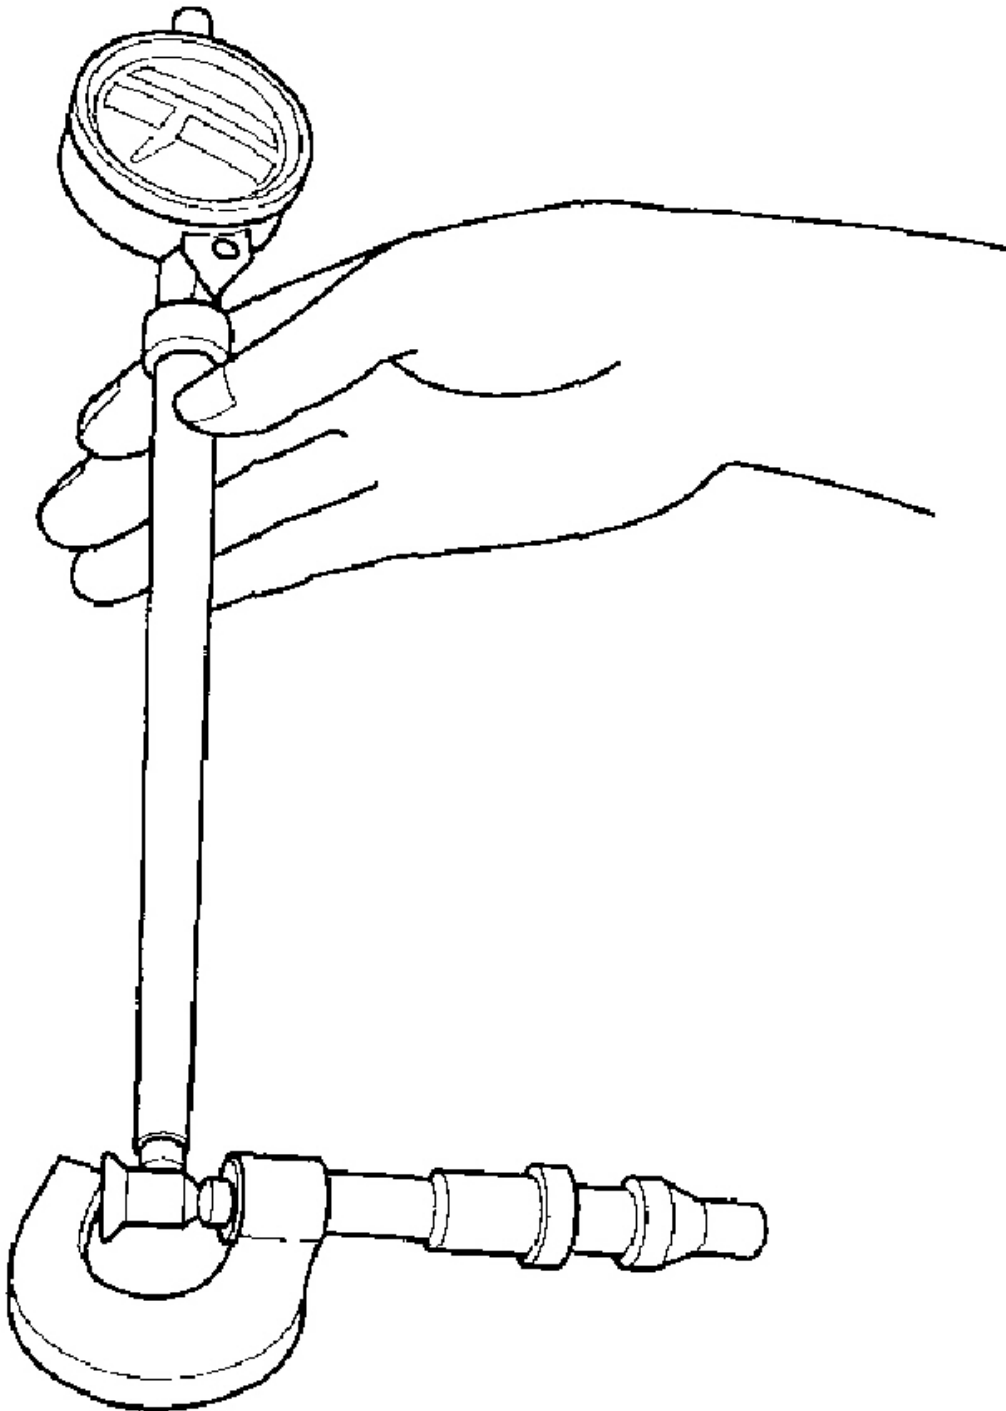

G03659012


Fig. 37: Setting Zero Dial Indicator To Piston Pin Diameter
Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Check the difference between the piston pin diameter and piston pin hole diameter on the piston.

Piston Pin-to-Piston Clearance

Standard (New): -0.0050 to +0.0010 mm (-0.00020 to +0.00004 in.)

Service Limit: 0.004 mm (0.0002 in.)

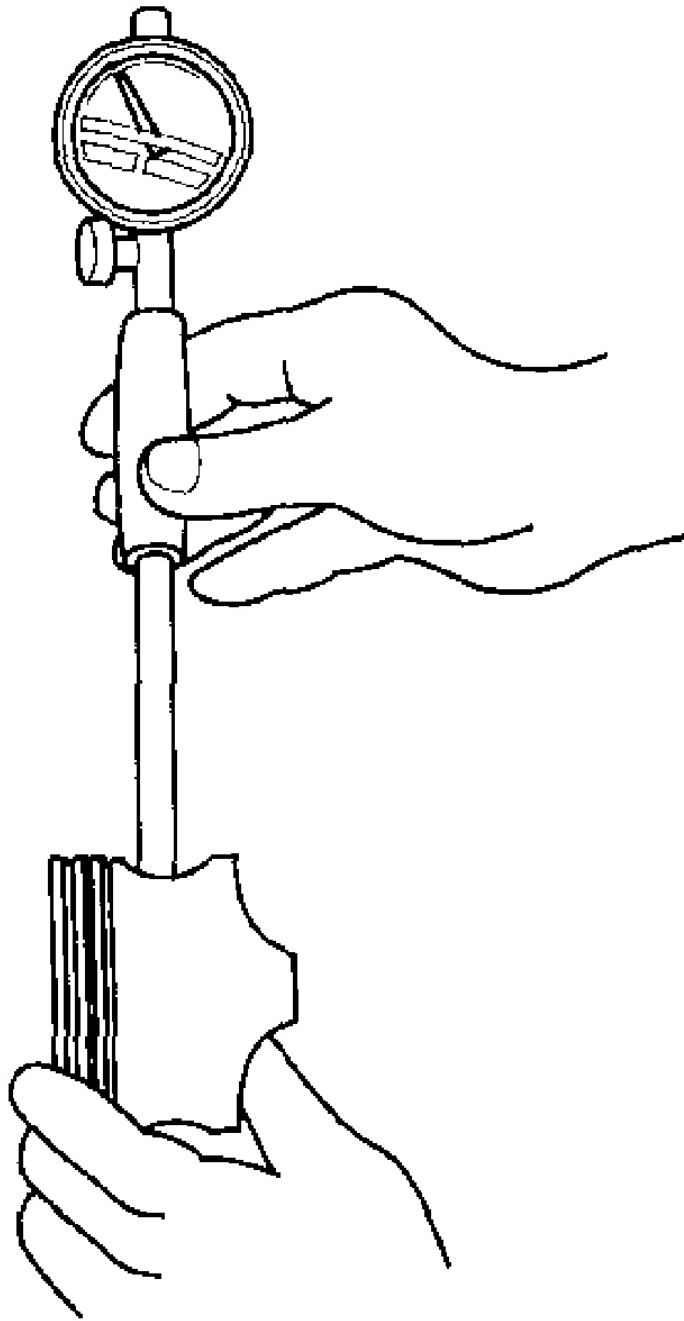

G03659013

Fig. 38: Checking Difference Between Piston Pin Diameter & Piston Pin Hole Diameter
Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. Measure the piston pin-to-connecting rod clearance.


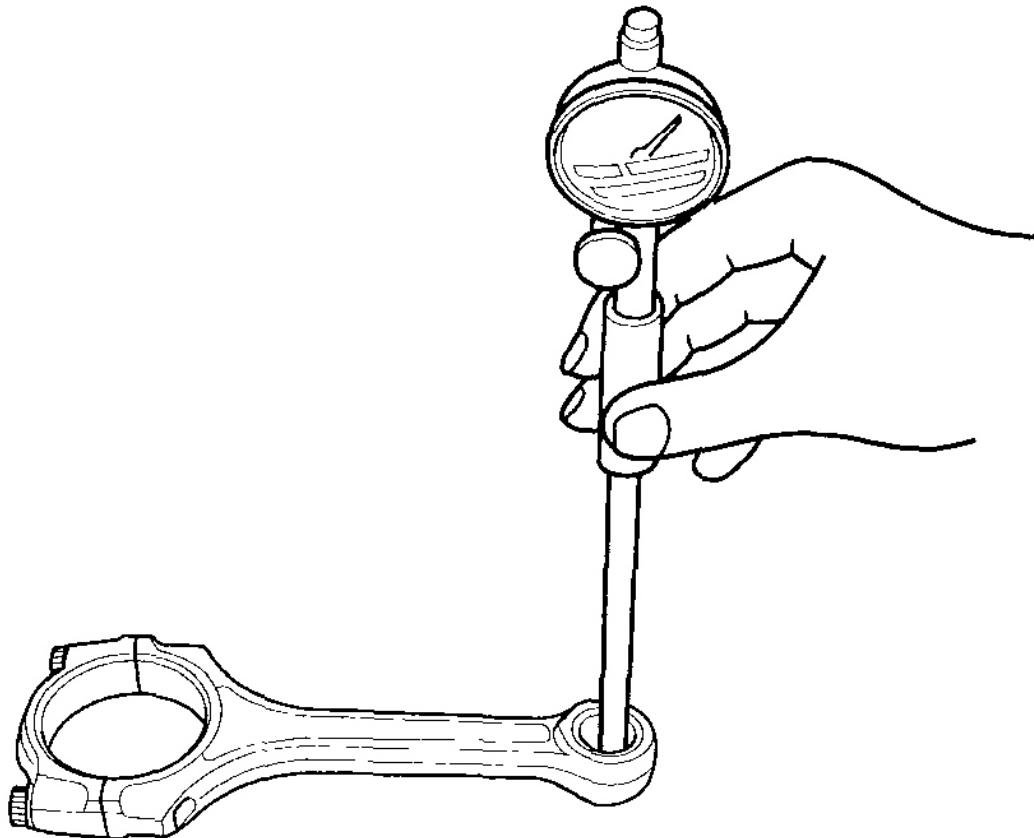
Piston Pin-to-Connecting Rod Clearance**Standard (New): 0.005-0.014 mm (0.0002-0.0006 in.)****Service Limit: 0.019 mm (0.0007 in.)****G03659014**

Fig. 39: Measuring Piston Pin-To-Connecting Rod Clearance
Courtesy of AMERICAN HONDA MOTOR CO., INC.

REASSEMBLY

1. Install a piston pin snap ring (A) only on one side.

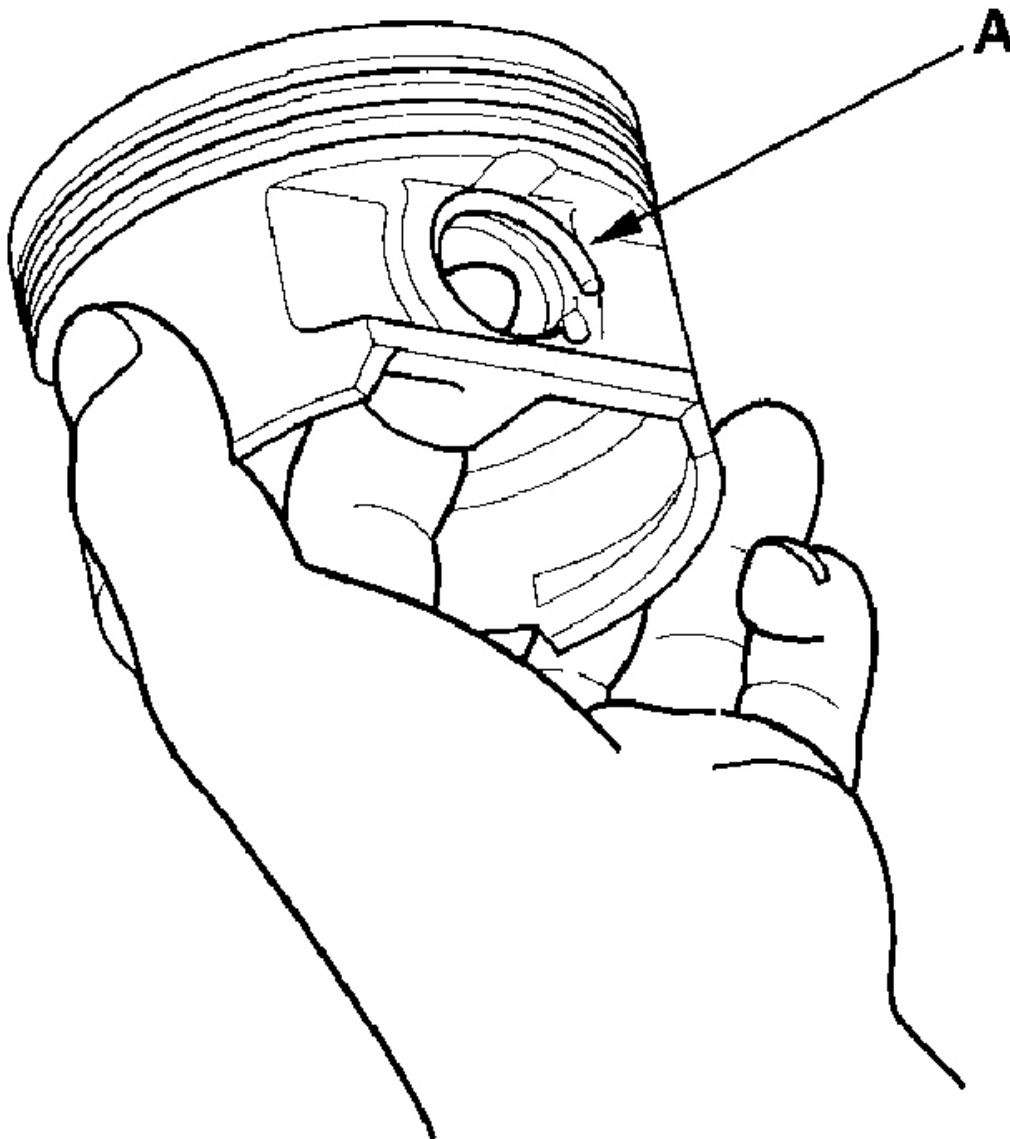


G03659015

Fig. 40: Installing Piston Pin Snap Ring

Courtesy of AMERICAN HONDA MOTOR CO., INC.

2. Coat the piston pin bore in the piston, the bore in the connecting rod, and the piston pin with new engine oil.
3. Heat the piston to about 158°F (70°C).


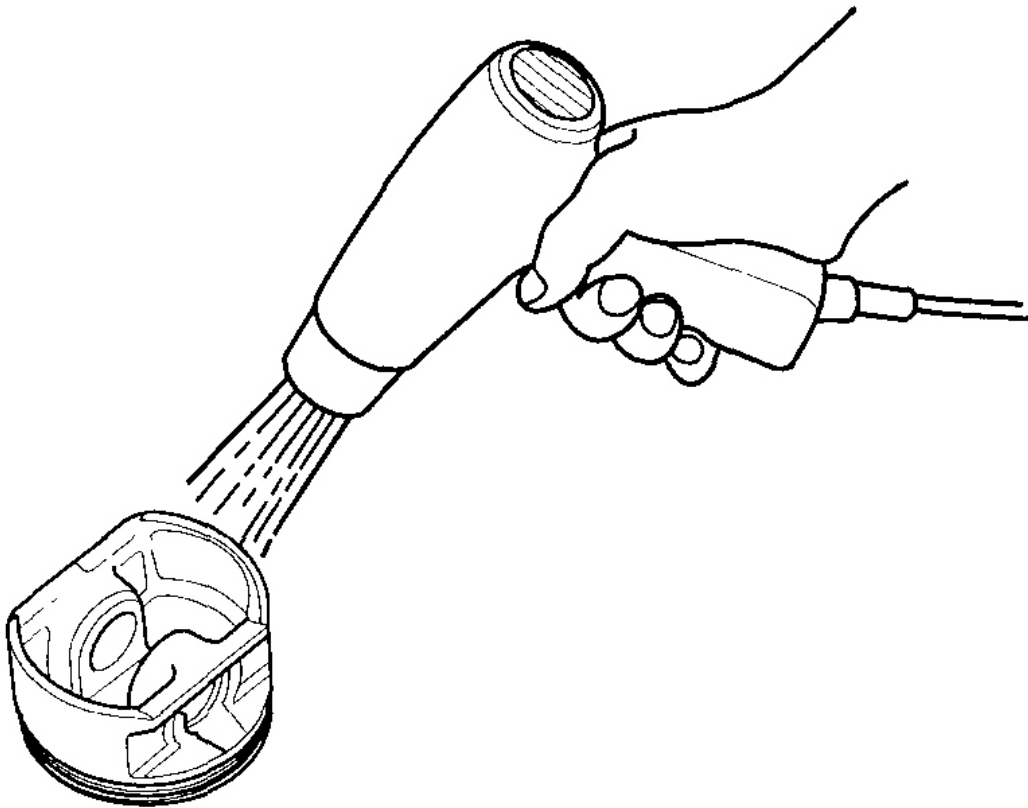


G03659016

Fig. 41: Heating Piston

Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. Assemble the piston (A) and connecting rod (B) with the embossed marks (C) on the same side. Install the piston pin (D).

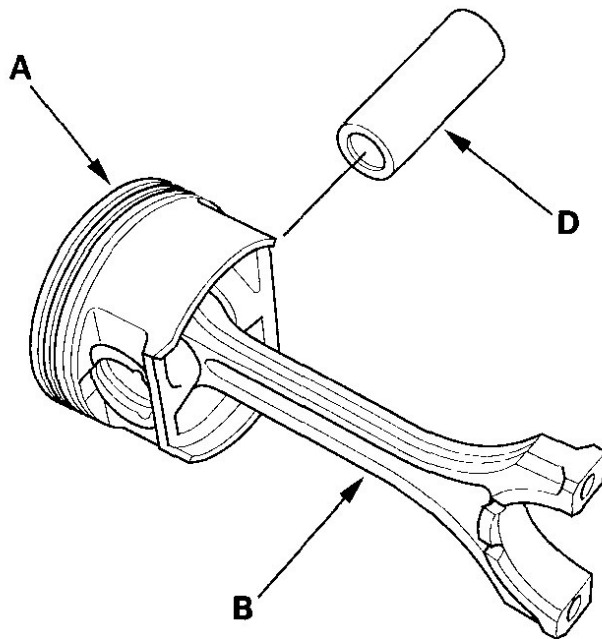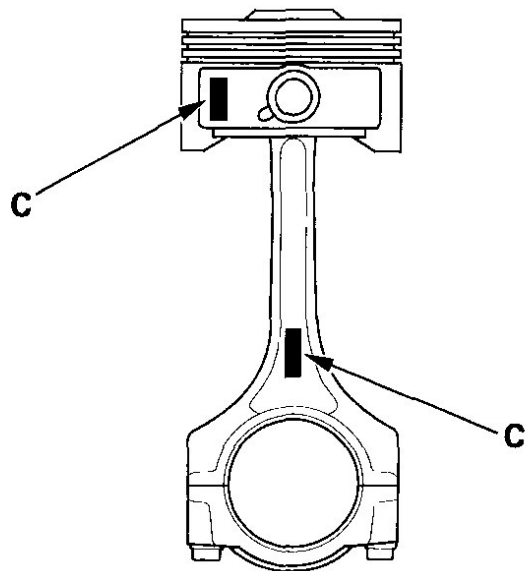


G03659017

Fig. 42: Assembling Piston & Connecting Rod
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

5. Install the remaining snap ring.

PISTON RING REPLACEMENT

1. Remove the piston from the engine block (see **CRANKSHAFT AND PISTON REMOVAL**).
2. Using a ring expander (A), remove the old piston rings (B).

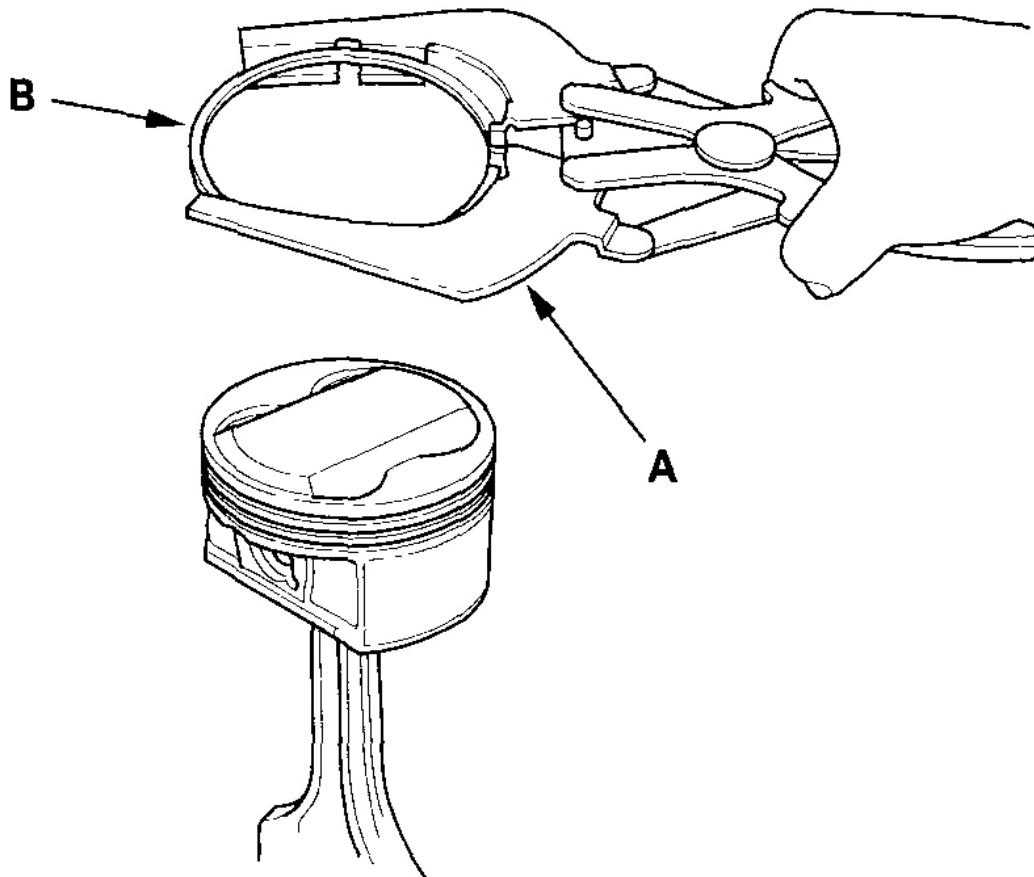

G03659018


Fig. 43: Removing Piston Rings

Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Clean all the ring grooves thoroughly with a squared-off broken ring, or a ring groove cleaner with a blade to fit the piston grooves. File down the blade, if necessary. The top ring and second ring grooves are 1.2 mm (0.05 in.) wide, and the oil ring groove is 2.8 mm (0.11 in.) wide. Do not use a wire brush to clean the ring grooves, or cut the ring grooves deeper with the cleaning tool.

NOTE: If the piston is to be separated from the connecting rod, do not install new rings yet.

4. Using a piston, push a new ring (A) into the cylinder bore 15-20 mm (0.6-0.8 in.) from the bottom.

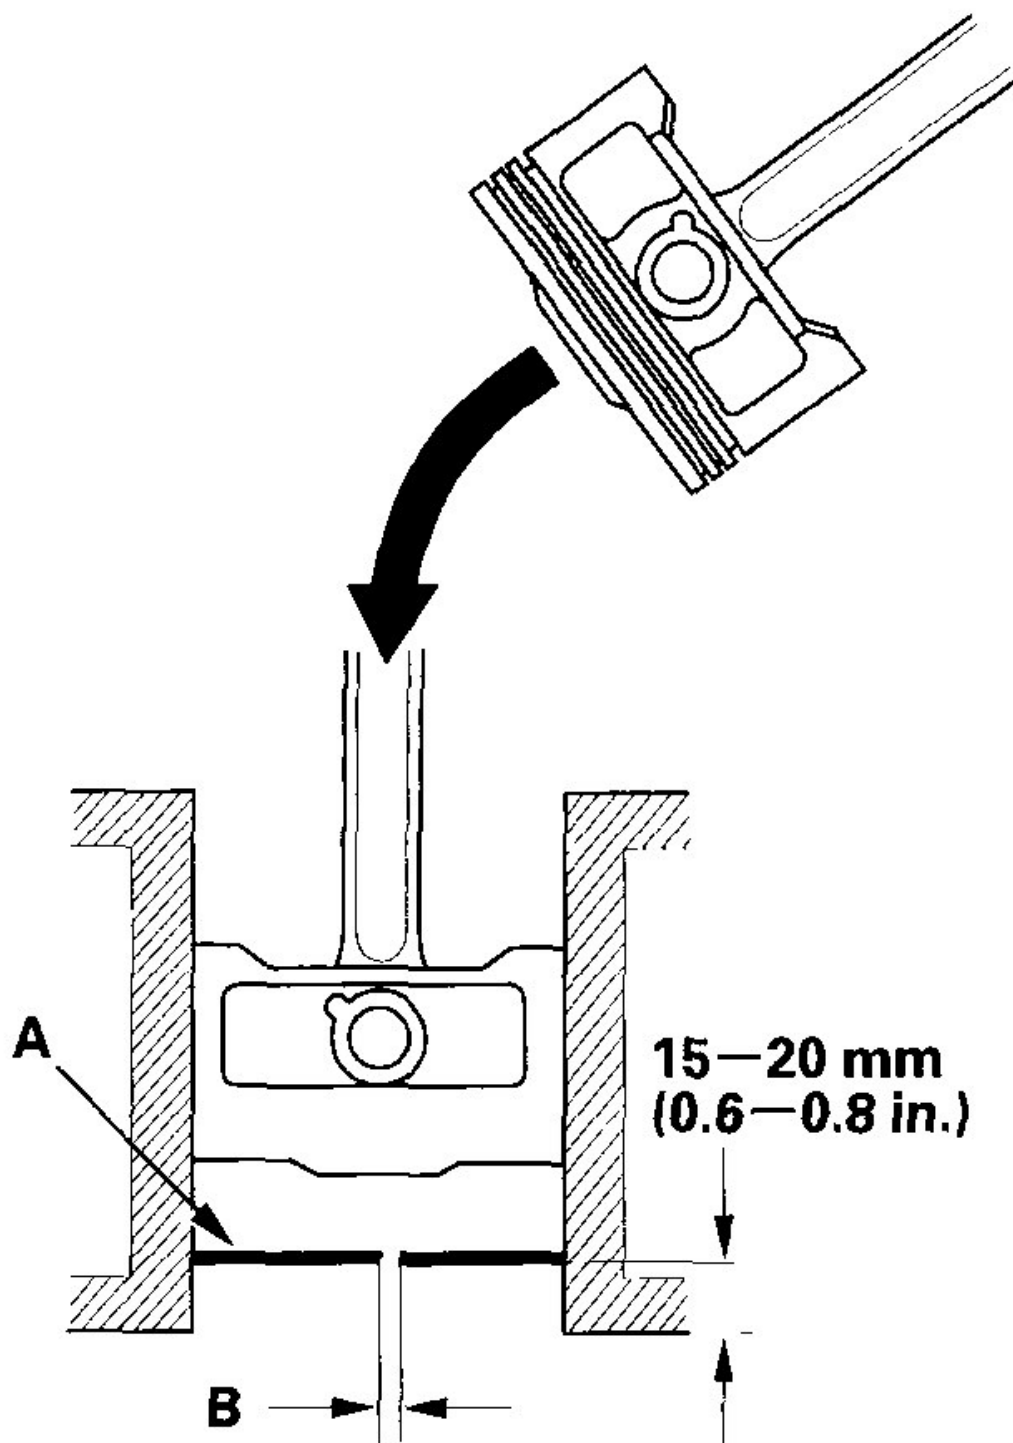


G03659019

Fig. 44: Pushing Ring Into Cylinder Bore**Courtesy of AMERICAN HONDA MOTOR CO., INC.**


5. Measure the piston ring end-gap (B) with a feeler gauge:
 - If the gap is too small, check to see if you have the proper rings for your engine.
 - If the gap is too large, recheck the cylinder bore diameter against the wear limits (see step 4). If the bore is over the service limit, the engine block must be rebored.

Piston Ring End-Gap**Top Ring:****Standard (New): 0.20-0.35 mm (0.008-0.014 in.)****Service Limit: 0.60 mm (0.024 in.)****Second Ring:****Standard (New): 0.40-0.55 mm (0.016-0.022 in.)****Service Limit: 0.70 mm (0.028 in.)****Oil Ring:****Standard (New): 0.20-0.70 mm (0.008-0.028 in.)****Service Limit: 0.80 mm (0.031 in.)**

6. Install the rings as shown. The top ring (A) has a 1D mark and the second ring (B) has a 2C mark. The manufacturing marks (C) must be facing upward.

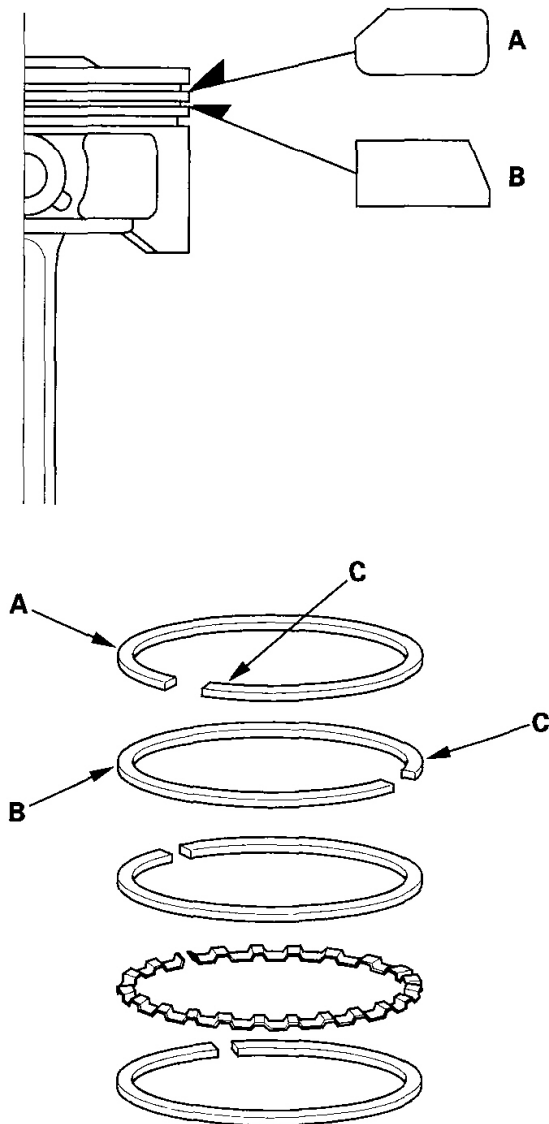

Piston Ring Dimensions:

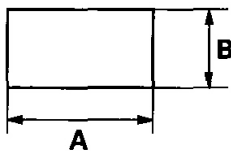

Top Ring (Standard)

A: 3.1 mm (0.12 in.)

B: 1.2 mm (0.05 in.)

Second Ring (Standard)

A: 3.4 mm (0.13 in.)

B: 1.2 mm (0.05 in.)


G03659020

Fig. 45: Installing Rings

Courtesy of AMERICAN HONDA MOTOR CO., INC.

7. After installing a new set of rings, measure the ring-to-groove clearance:


Top Ring Clearance**Standard (New): 0.055-0.080 mm (0.0022-0.0031 in.)****Service Limit: 0.15 mm (0.006 in.)****Second Ring Clearance****Standard (New): 0.030-0.055 mm (0.0012-0.0022 in.)****Service Limit: 0.13 mm (0.005 in.)**

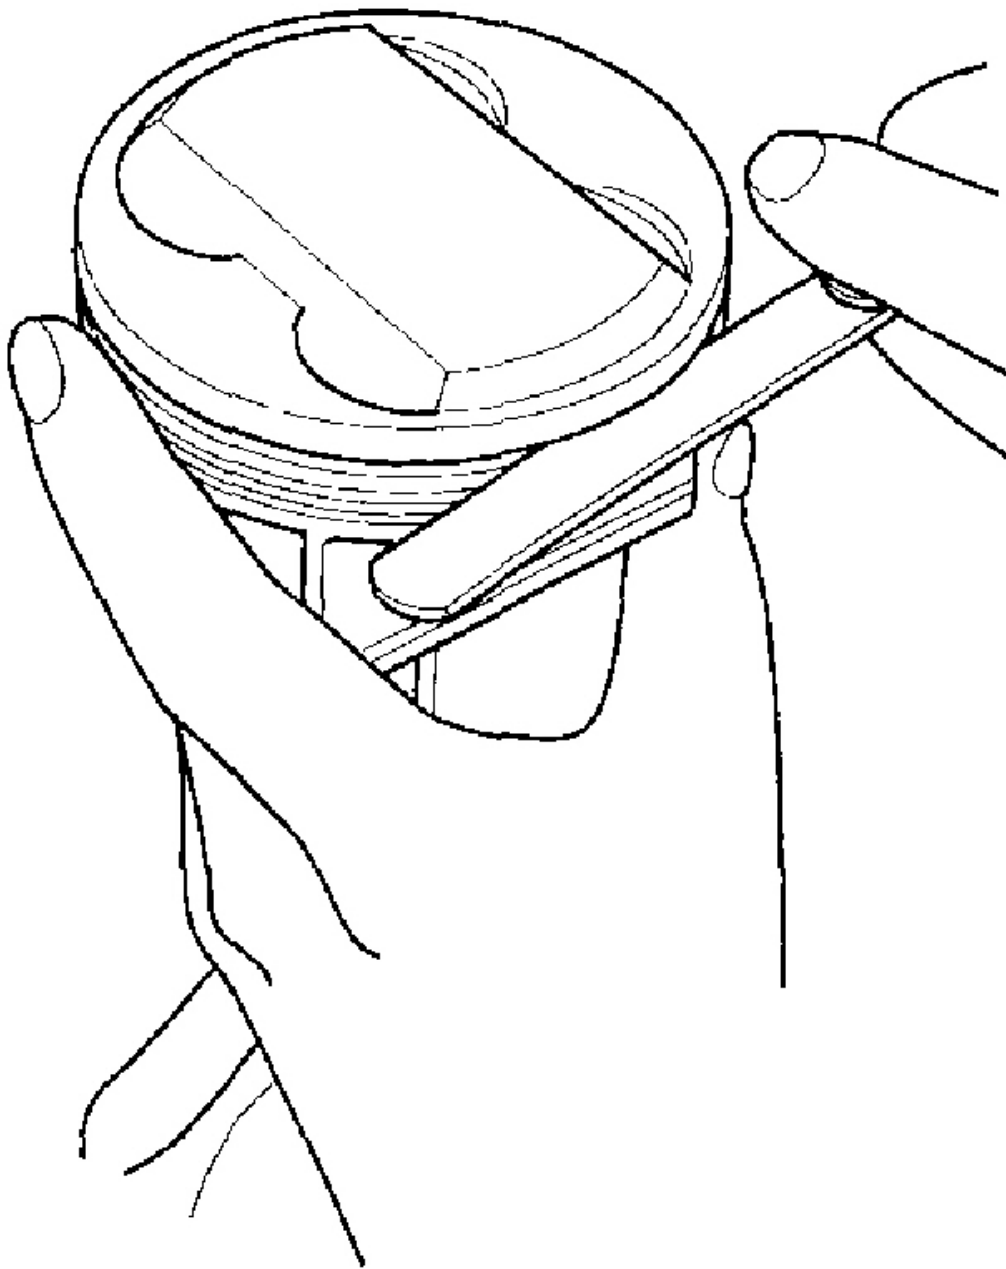

G03659021

Fig. 46: Measuring Ring-To-Groove Clearance
Courtesy of AMERICAN HONDA MOTOR CO., INC.

8. Rotate the rings in their grooves to make sure they do not bind.
9. Position the ring end gaps as shown:

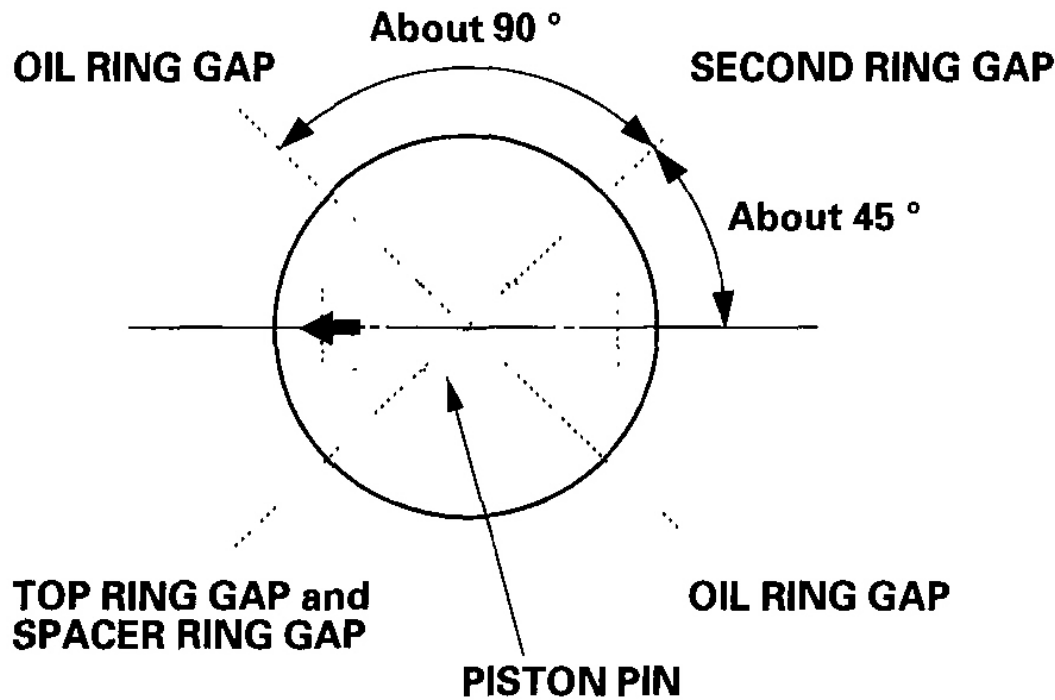

G03659022


Fig. 47: Positioning Ring End Gaps

Courtesy of AMERICAN HONDA MOTOR CO., INC.

CRANKSHAFT AND PISTON INSTALLATION

Special Tools Required


- Driver 07749-0010000
- Driver attachment, 106 mm 070AD-RCAA200
 1. Check the connecting rod bearing clearance with plastigage (see **CONNECTING ROD BEARING REPLACEMENT**).
 2. Check the main bearing clearance with plastigage (see **CRANKSHAFT MAIN BEARING REPLACEMENT**).
 3. Install the bearing halves in the engine block and connecting rods.
 4. Apply new engine oil to inside of the main bearings and rod bearings.
 5. Lower the crankshaft (A) into the engine block.

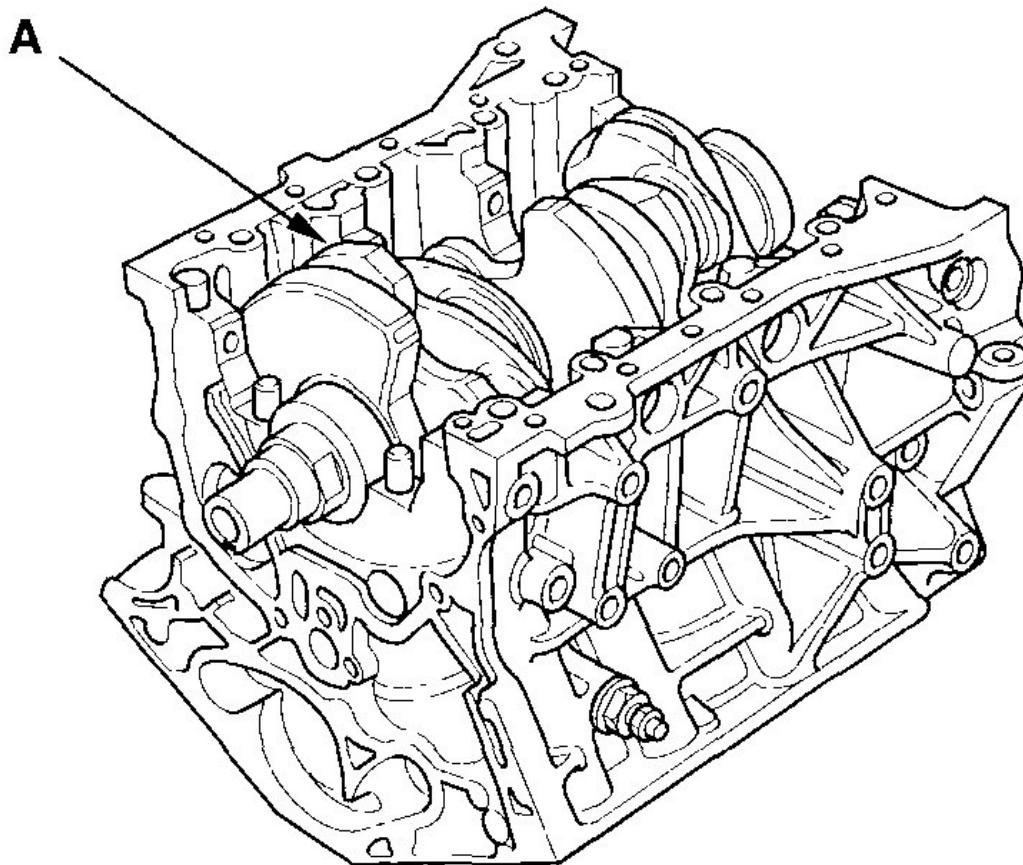

G03659023

Fig. 48: Lowering Crankshaft Into Engine Block
Courtesy of AMERICAN HONDA MOTOR CO., INC.


6. Apply new engine oil to the side with the thrust washer groove. Install the thrust washers (A) in the No. 3 journal.

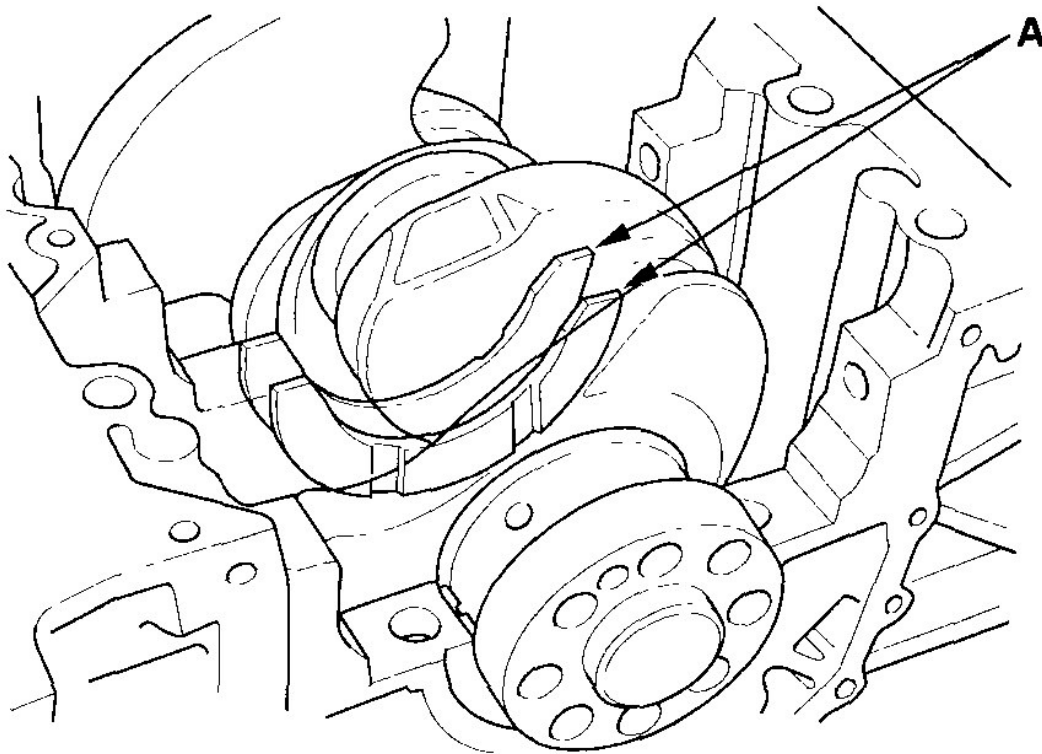

G03659024

Fig. 49: Installing Thrust Washers In No. 3 Journal
Courtesy of AMERICAN HONDA MOTOR CO., INC.

7. Install the bearings (A) and bearing caps (B) with the arrow (C) facing the timing belt end of the engine.

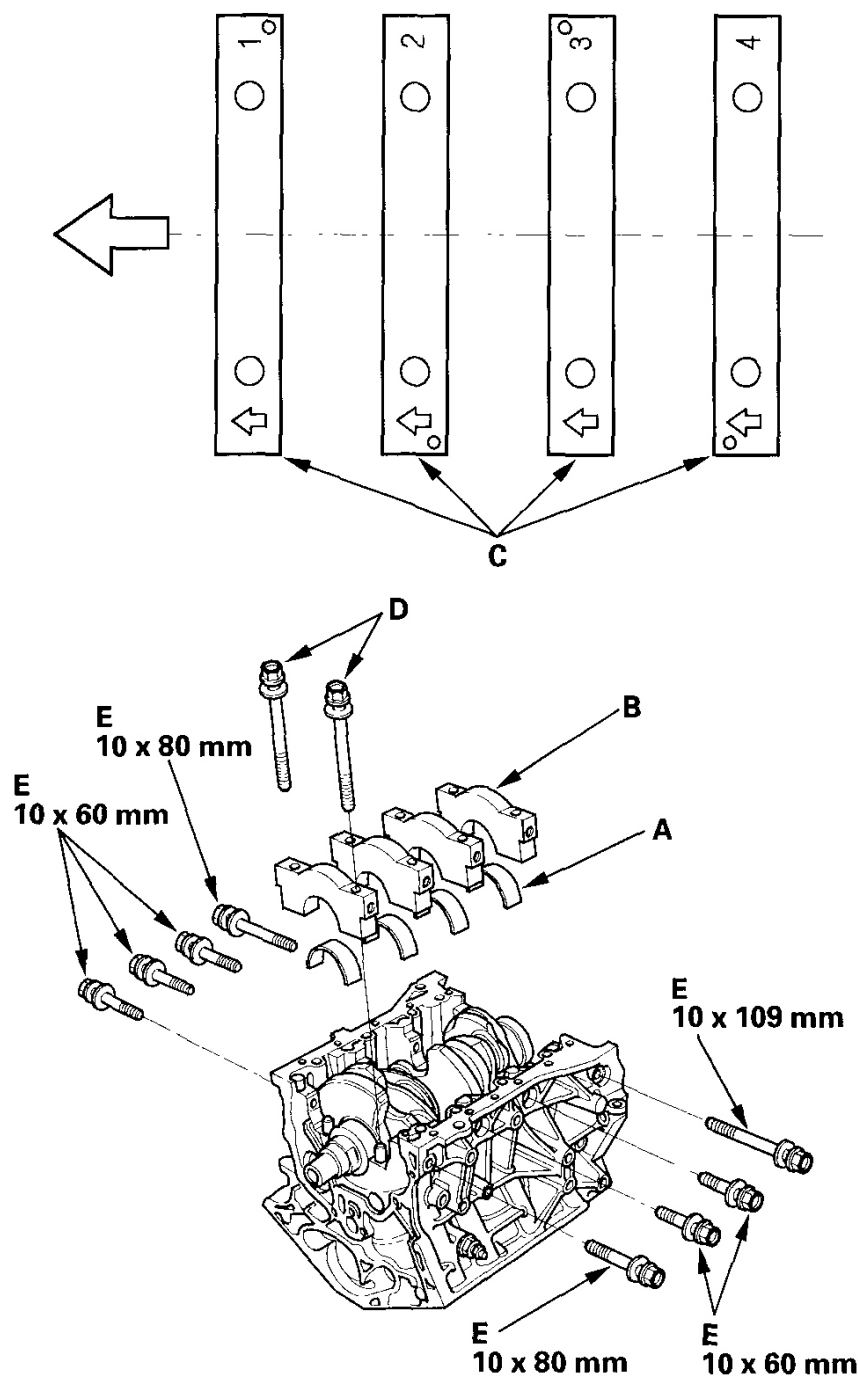


G03659025

Fig. 50: Installing Bearings & Bearing Caps

Courtesy of AMERICAN HONDA MOTOR CO., INC.

8. Apply new engine oil to the bolt threads and flanges, then loosely install the bearing cap bolts (D) and bearing cap side bolts (E).

9. Set the crankshaft to bottom dead center (BDC) for the cylinder you are installing the piston in.
10. Apply new engine oil to the piston, inside of the ring compressor, and the cylinder bore.
11. Attach the ring compressor to the piston/connecting rod assembly, and check that the bearing is securely in place.
12. Position the piston/connecting rod assembly with the arrow (A) facing the timing belt side of the engine.

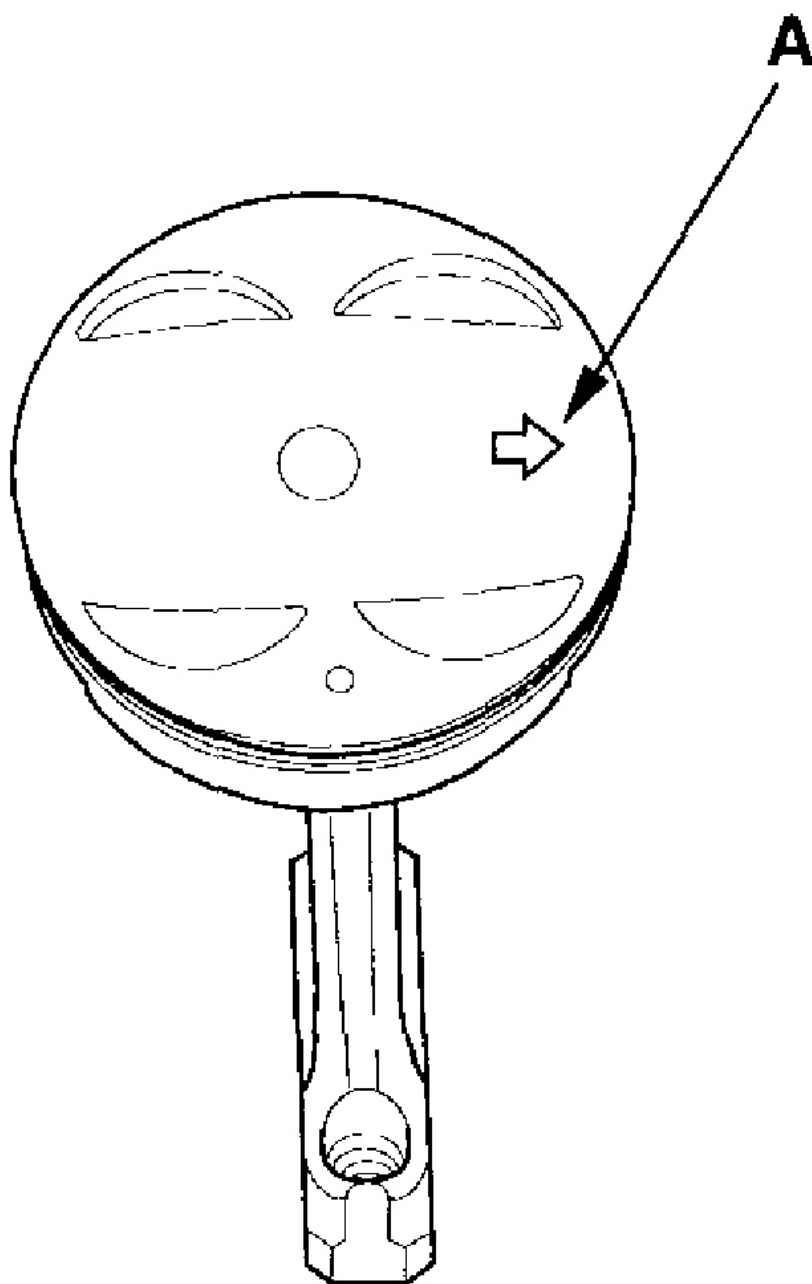


G03659026

Fig. 51: Positioning Piston/Connecting Rod Assembly
Courtesy of AMERICAN HONDA MOTOR CO., INC.

13. Position the piston/connecting rod assembly in the cylinder, and tap it in using the wooden handle of a hammer (A). Maintain downward force on the ring compressor (B) to prevent the rings from


expanding before entering the cylinder bore.

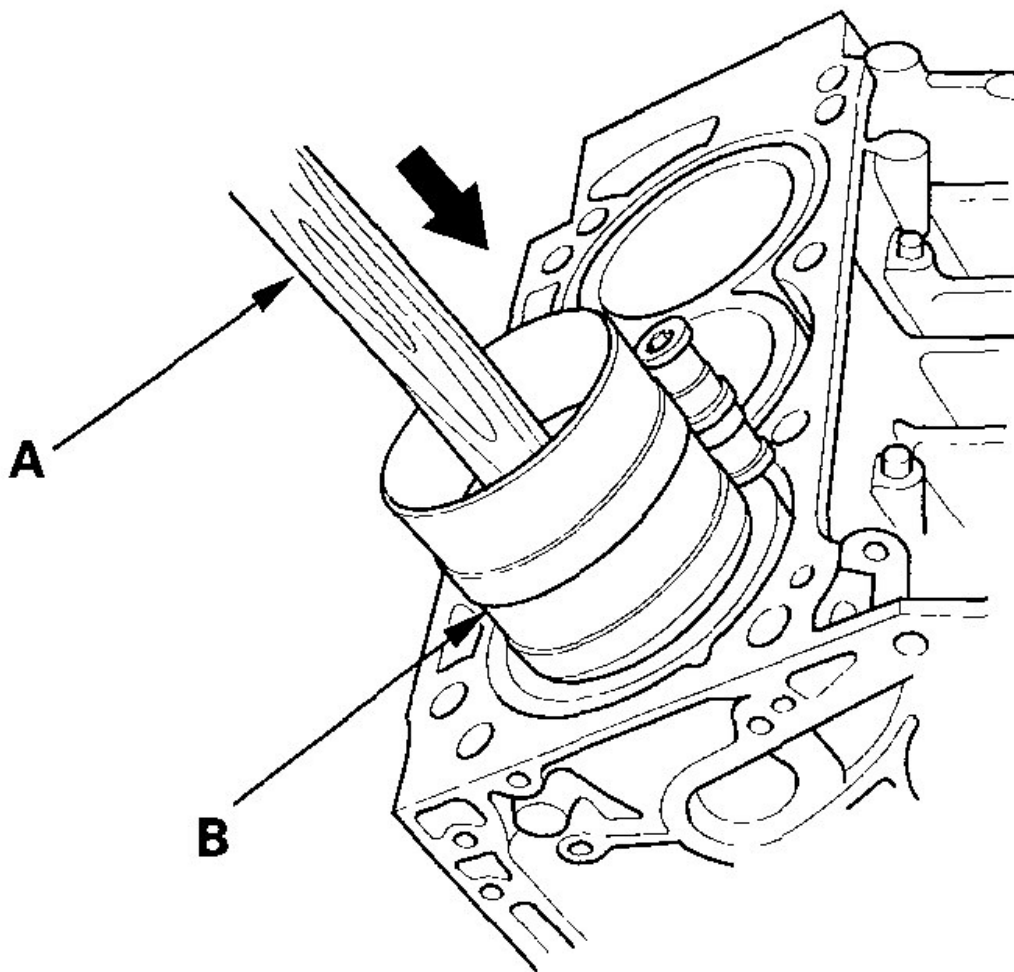

G03659027

Fig. 52: Positioning Piston/Connecting Rod Assembly In Cylinder & Tap
Courtesy of AMERICAN HONDA MOTOR CO., INC.

14. Stop after the ring compressor pops free, and check the connecting rod-to-crank journal alignment before pushing the piston into place.
15. Measure the diameter of each connecting rod bolt at point A and point B.

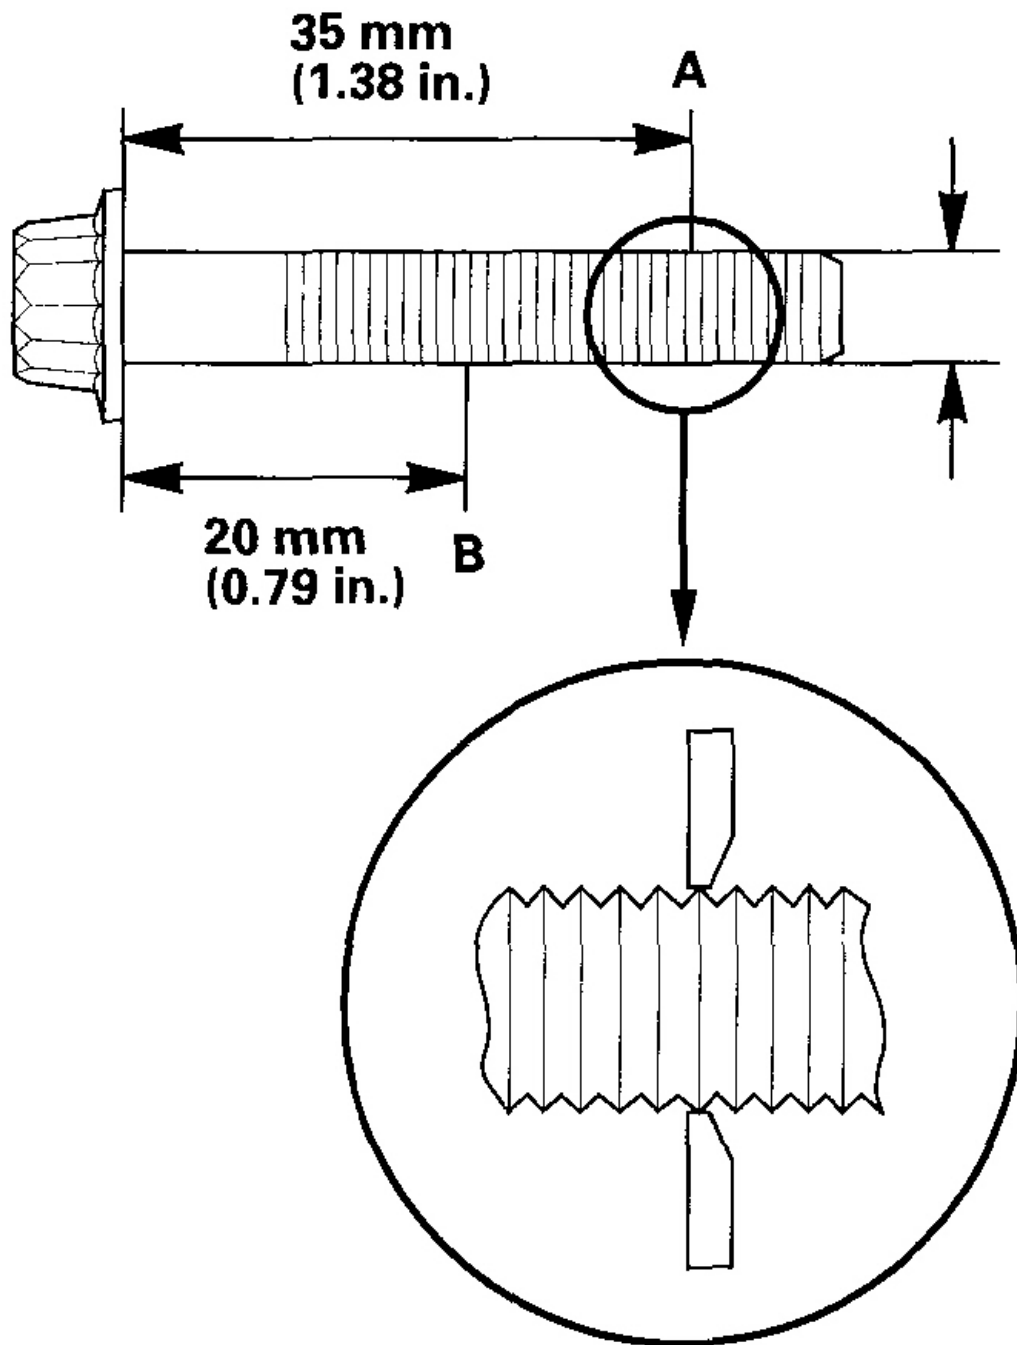

G03659028

Fig. 53: Measuring Diameter Of Each Connecting Rod Bolt
Courtesy of AMERICAN HONDA MOTOR CO., INC.


16. Calculate the difference in diameter between point A and point B.

Point A-Point B = Difference in Diameter

Difference in Diameter

Specification: 0-0.1 mm (0-0.004 in.)

17. If the difference in diameter is out of tolerance, replace the connecting rod bolt.
18. Line up the mark (A) on the connecting rod and cap, then install the cap.

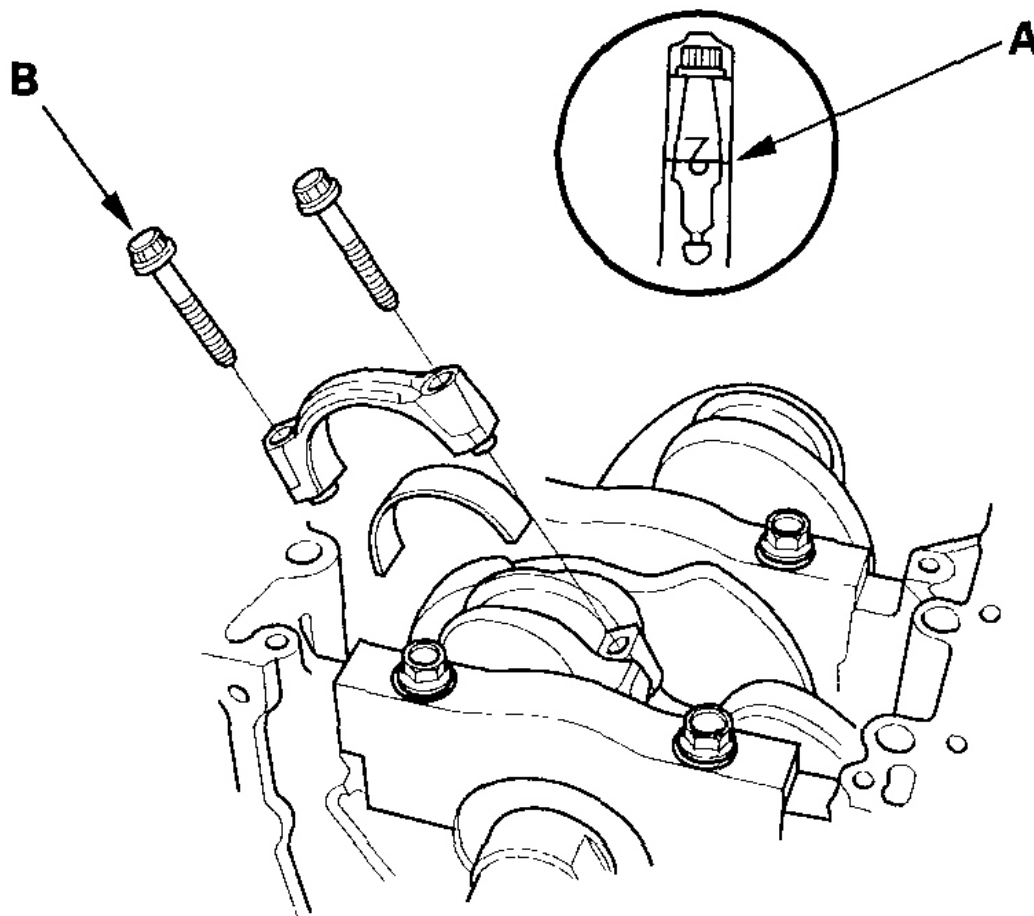

G03659029

Fig. 54: Lining Up Mark On Connecting Rod & Cap
Courtesy of AMERICAN HONDA MOTOR CO., INC.

19. Apply new engine oil to the bolt threads and flanges. Torque the bolts (B) to 20 N.m (2.0 kgf.m, 14 lbf.ft).
20. Mark the connecting rod (A) and bolt head (B) as shown.



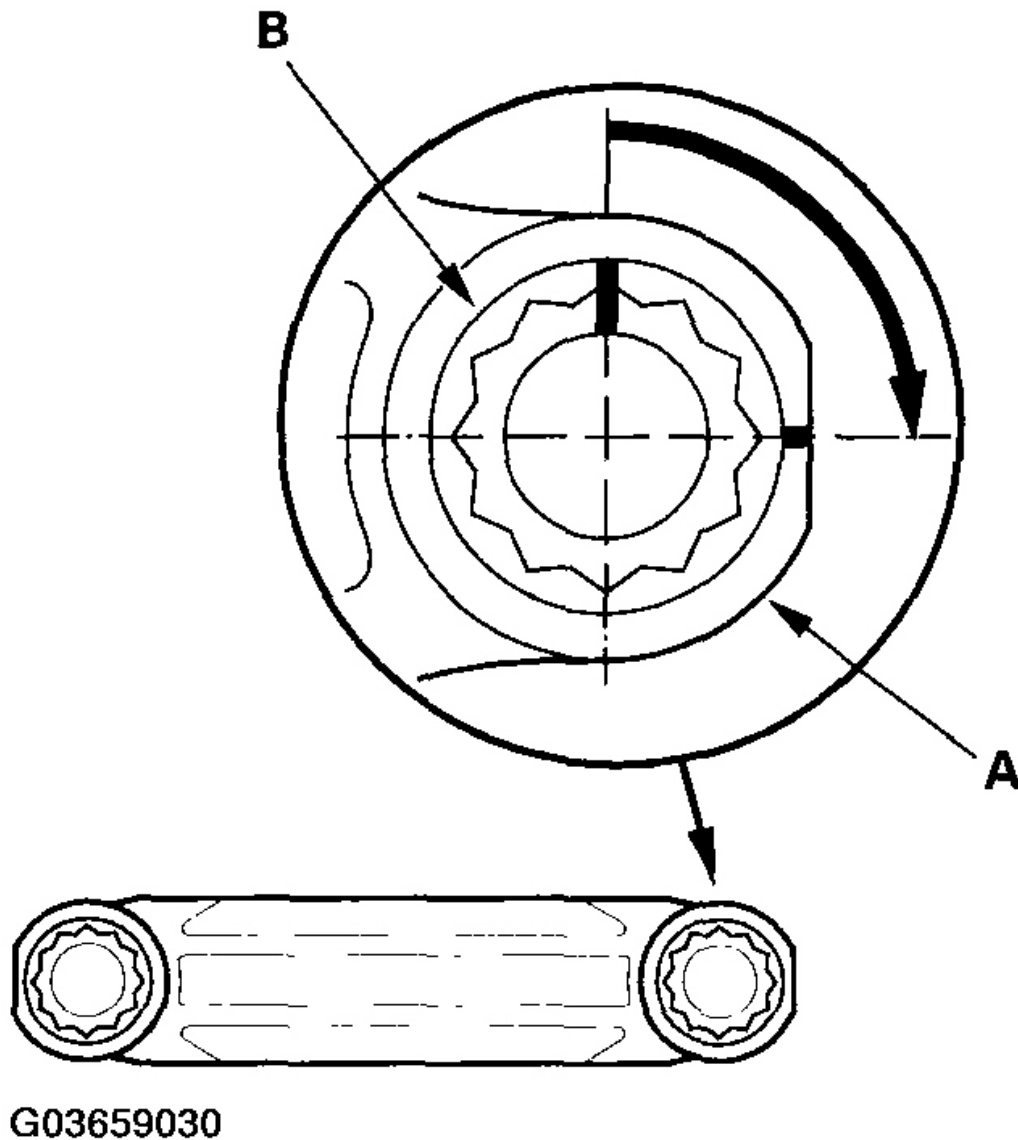


Fig. 55: Marking Connecting Rod & Bolt Head
Courtesy of AMERICAN HONDA MOTOR CO., INC.

21. Tighten the bolt until the mark on the bolt head lines up with the mark on the connecting rod (turn the bolt 90°).

NOTE: Remove the connecting rod bolt if you tightened it beyond the specified angle, and go back to step 15 of the procedure. Do not loosen it back to the specified angle.

22. Tighten the bearing cap bolts, and then the bearing cap side bolts to the specified torque in the sequence as shown. Repeat the torque sequence again to measure the bolts are properly torqued.

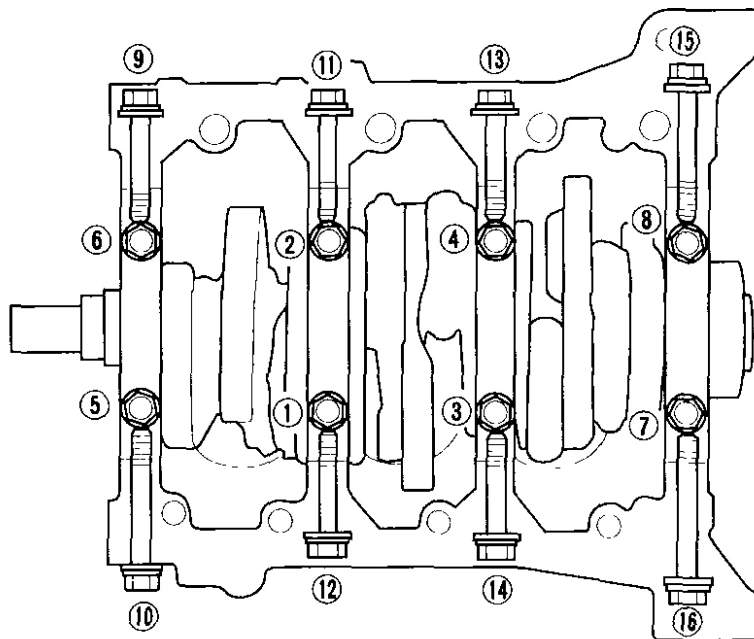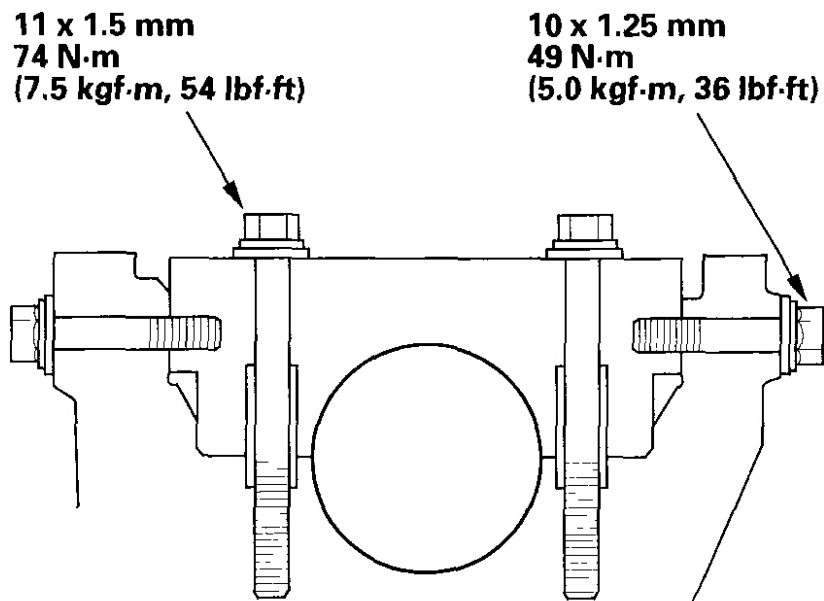


G03659031

Fig. 56: Tightening Bearing Cap Bolts With Torque Specifications
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

23. Remove any old liquid gasket from the engine block end cover mating surfaces, bolts, and bolt holes.

24. Clean and dry the engine block end cover mating surfaces.
25. The seal mating surface on the engine block end cover should be dry. Apply a light coat of multipurpose grease to the crankshaft and to the lip of the seal.
26. Drive the new crankshaft oil seal until the special tool bottoms on the engine block end cover.

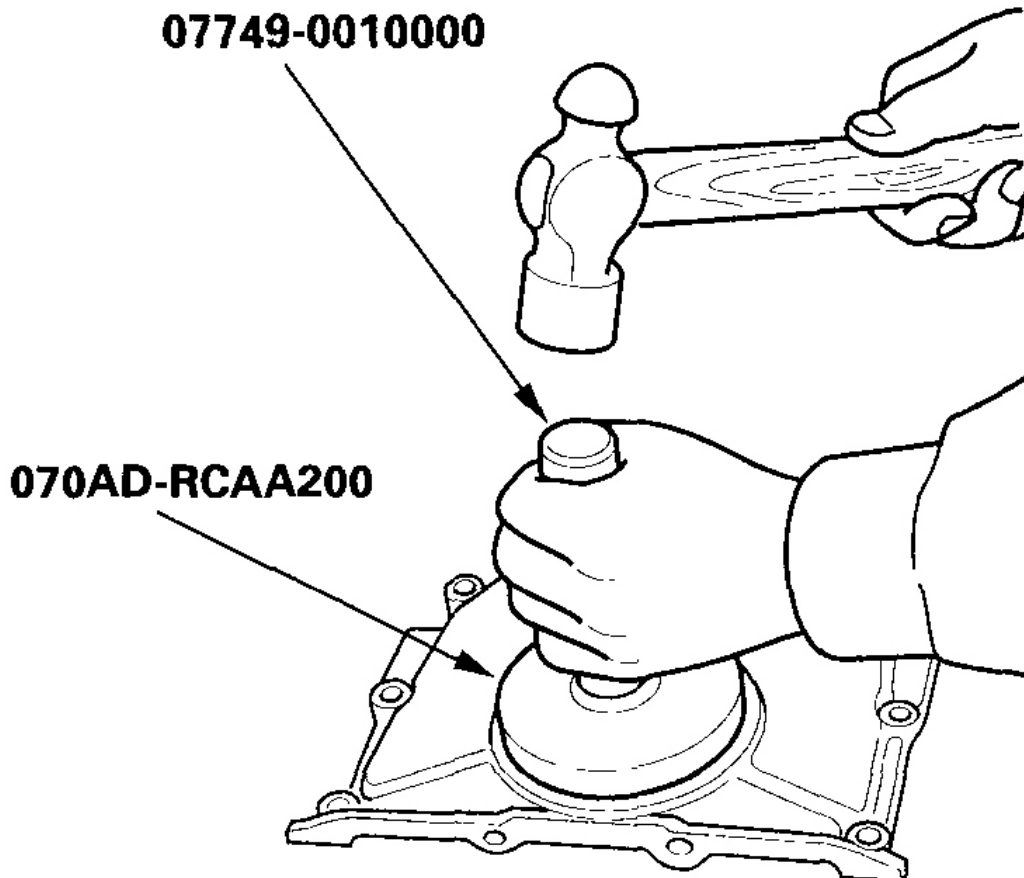


G03659032

Fig. 57: Identifying Drive Crankshaft Oil Seal
Courtesy of AMERICAN HONDA MOTOR CO., INC.

27. Apply liquid gasket, P/N 08717-0004, 08718-0001, 08718-0002, 08718-0003, or 08718-0009, evenly to the engine block mating surface of the engine block end cover.

NOTE: Do not install components if too much time has passed after applying the liquid gasket (for P/N 08718-0002, no more than 4 minutes, for all others, no more than 5 minutes). Instead, remove the old residue and

reapply the liquid gasket.

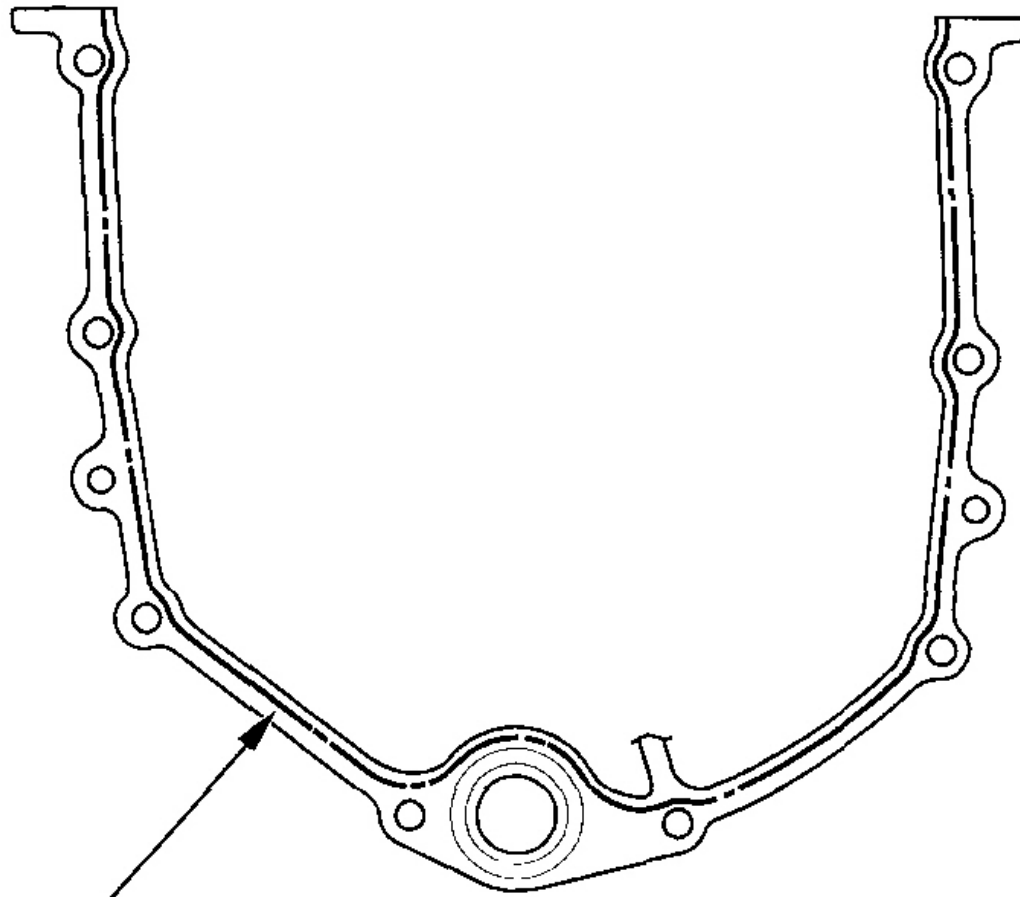


Apply liquid gasket
along the broken line.

G03659033

Fig. 58: Applying Liquid Gasket

Courtesy of AMERICAN HONDA MOTOR CO., INC.

28. Install the dowel pins (A), new O-ring (B), and the engine block end cover (C) on the engine block.

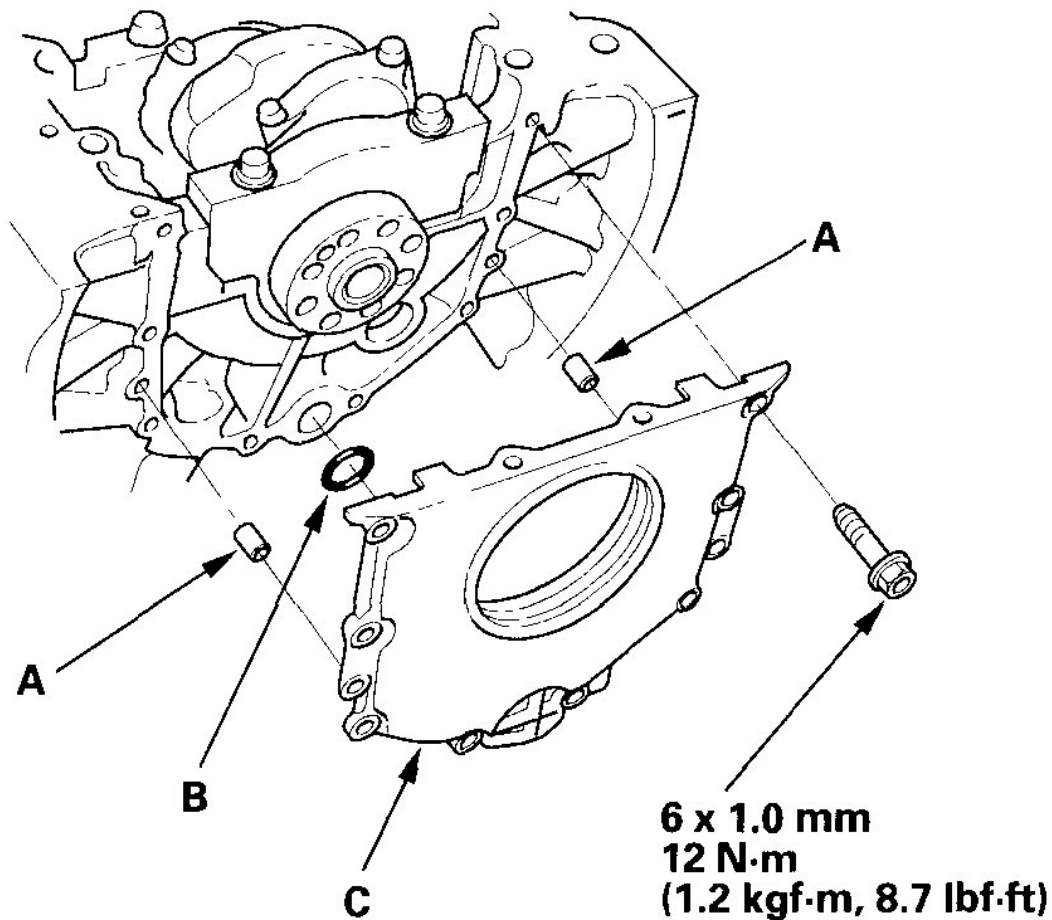

G03659034

Fig. 59: Installing Dowel Pins With Torque Specifications
Courtesy of AMERICAN HONDA MOTOR CO., INC.

29. Clean the excess grease off the crankshaft, and check the seal for distortion.
30. Install a new crankshaft oil seal in the oil pump (see step 2 on **INSTALLATION**).
31. Remove all of the old liquid gasket from the oil pump mating surfaces, bolts, and bolt holes.
32. Clean and dry the oil pump mating surfaces.
33. Apply liquid gasket, P/N 08717-0004, 08718-0001, 08718-0002, 08718-0003, or 08718-0009, evenly to the engine block mating surface of the oil pump.

NOTE: Do not install components if too much time has passed after applying the liquid gasket (for P/N 08718-0002, no more than 4 minutes, for all others, no more than 5 minutes). Instead, remove the old residue and reapply the liquid gasket.

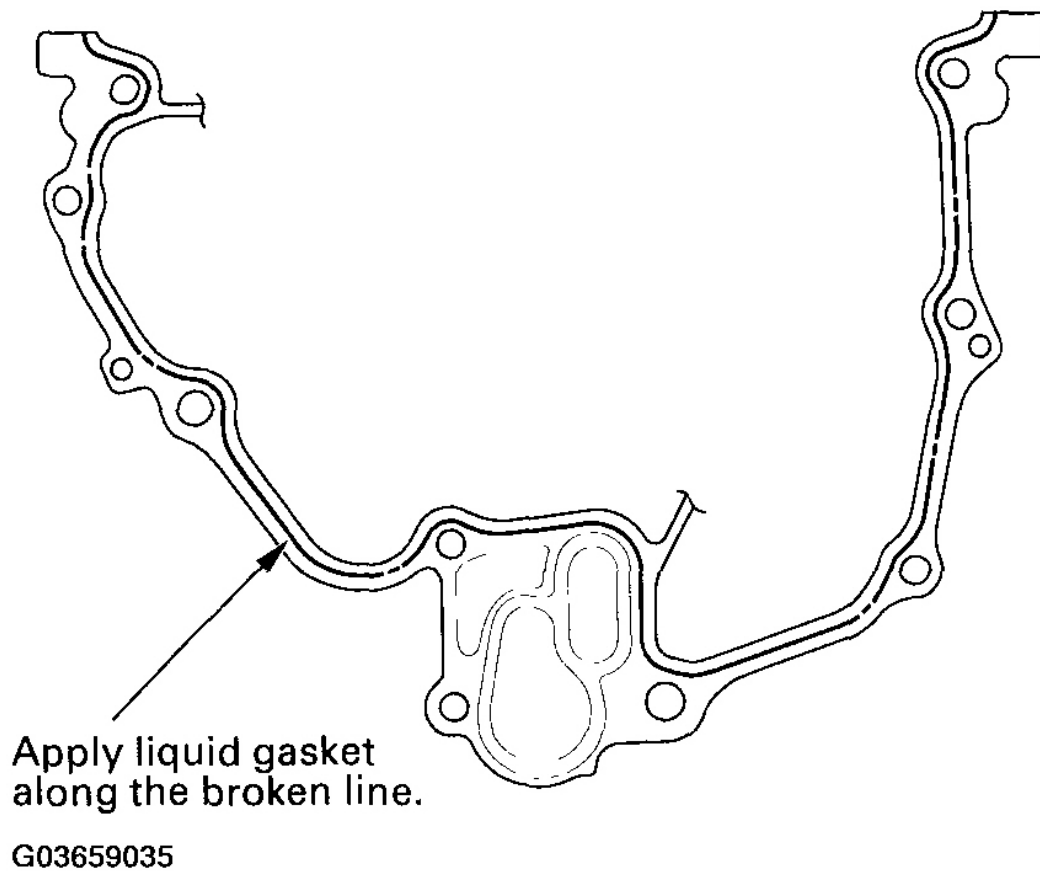


Fig. 60: Applying Liquid Gasket

Courtesy of AMERICAN HONDA MOTOR CO., INC.

34. Grease the lip of the oil seal, and apply oil to the new O-ring (A).

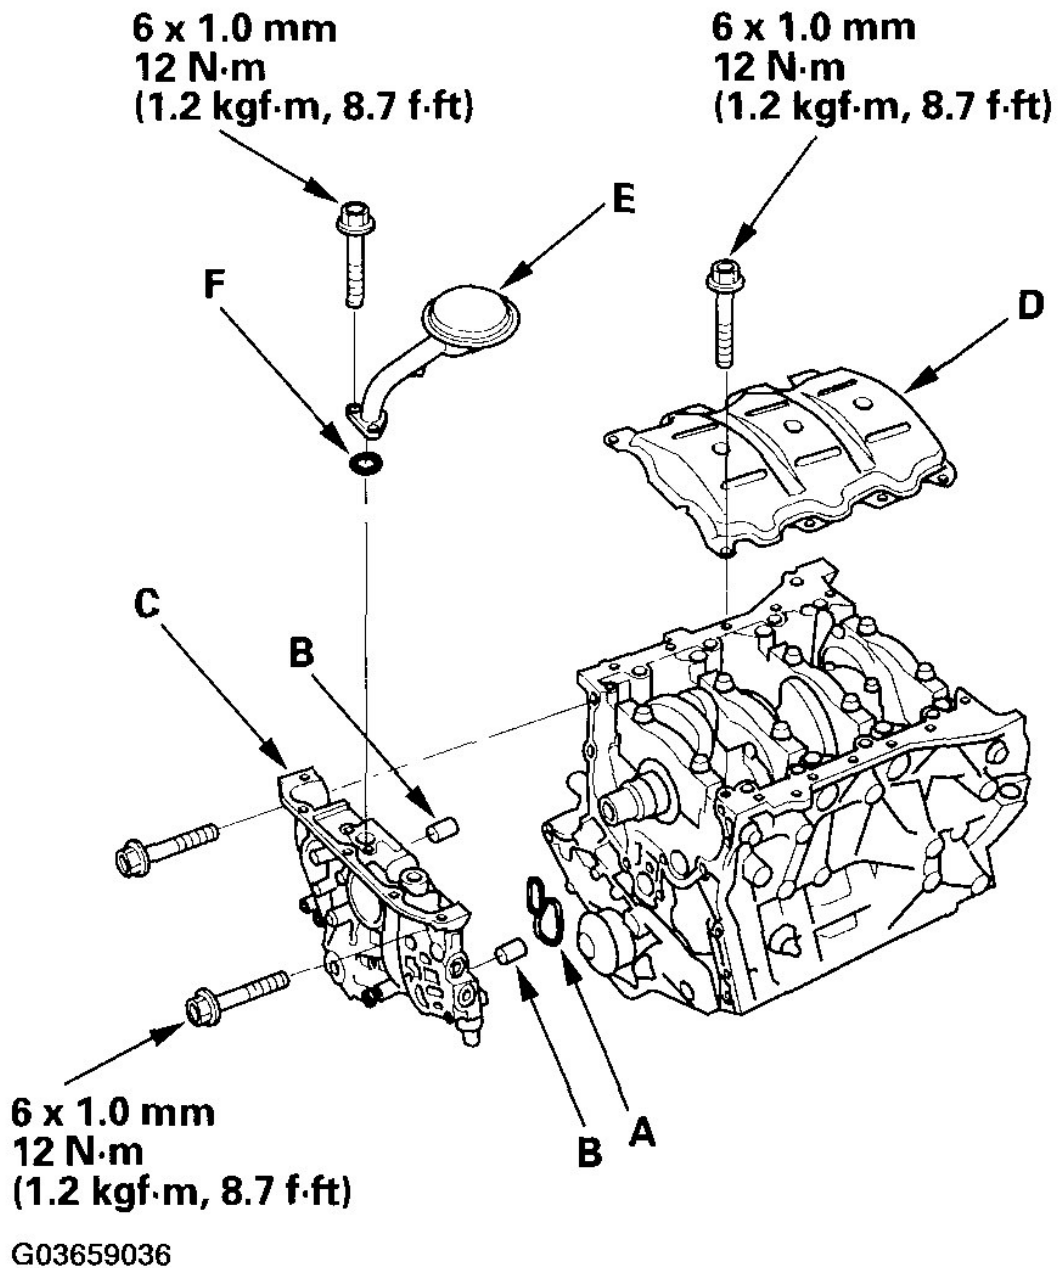


Fig. 61: Identifying Grease Lip Of Oil Seal With Torque Specifications
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

35. Install the dowel pins (B), then align the inner rotor with the crankshaft, and install the oil pump (C).
36. Clean the excess grease off the crankshaft, and check the seal for distortion.
37. Install the baffle plate (D), then install the oil screen (E) with new O-ring (F).

38. Install the rocker arm oil control solenoid (VTEC solenoid valve)/oil filter assembly (A), with a new rocker arm oil control solenoid (VTEC solenoid valve) filter (B).

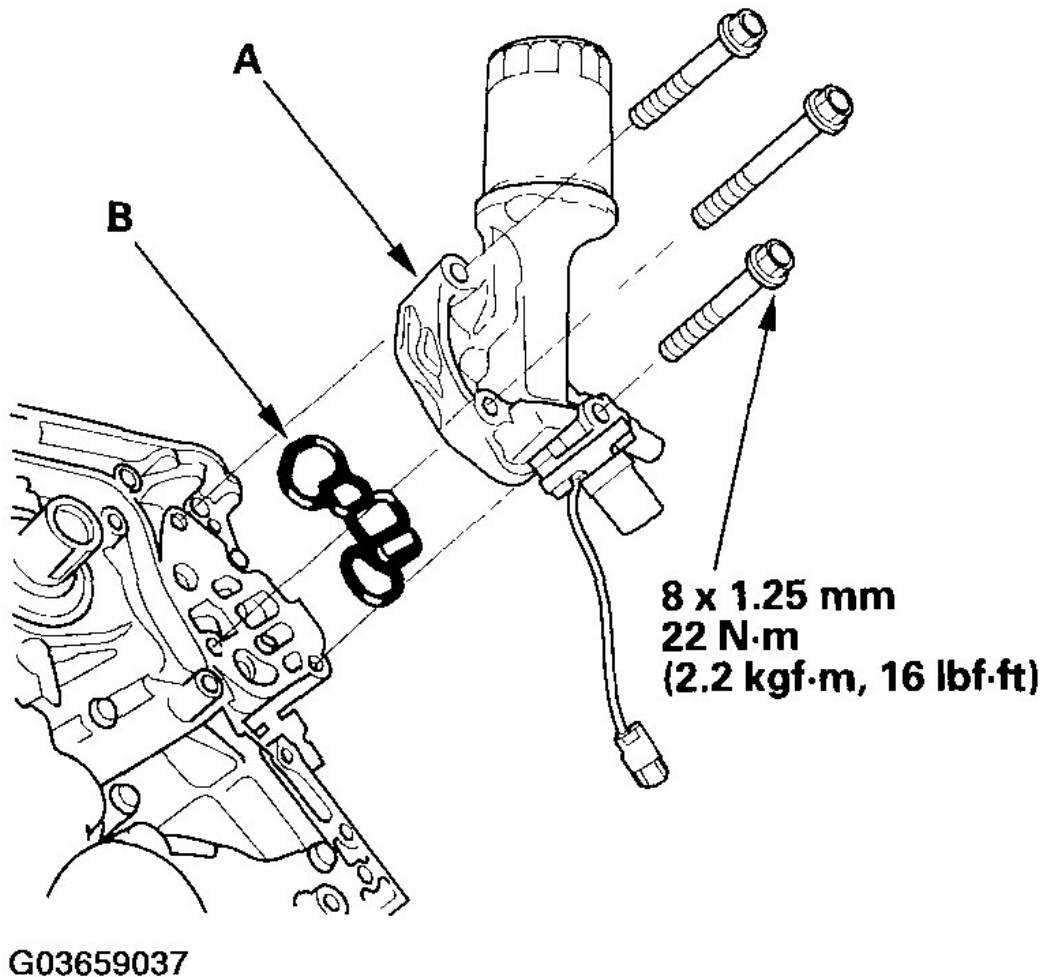


Fig. 62: Installing Rocker Arm Oil Control Solenoid With Torque Specifications
Courtesy of AMERICAN HONDA MOTOR CO., INC.

39. Install the oil pan (see **OIL PAN INSTALLATION**).
40. Install the crankshaft position (CKP) sensor (see **MAP SENSOR REPLACEMENT**).
41. Install the cylinder heads (see **CYLINDER HEAD INSTALLATION**).
42. M/T model: Install the flywheel (see **FLYWHEEL AND PILOT BEARING REPLACEMENT**).
43. A/T model: Install the drive plate (see **DRIVE PLATE REMOVAL AND INSTALLATION**).
44. Install the transmission:


- Manual Transmission (see **TRANSMISSION INSTALLATION**)
 - Automatic Transmission (see **TRANSMISSION INSTALLATION**)
45. Install the engine assembly (see **ENGINE INSTALLATION**).

NOTE: When any crankshaft or connecting rod bearing is replaced, after assembly it is necessary to run the engine at idling speed until it reaches normal operating temperature, then continue to run it for about 15 minutes.

OIL PAN INSTALLATION

1. Remove all of the old liquid gasket from the oil pan mating surfaces, bolts, and bolt holes.
2. Clean and dry the oil pan mating surfaces.
3. Apply liquid gasket, P/N 08717-0004, 08718-0001, 08718-0002, 08718-0003, or 08718-009, evenly to the oil pan mating surface of the engine block.

NOTE: Do not install components if too much time has passed after applying the liquid gasket (for P/N 08718-0002, no more than 4 minutes, for all others, no more than 5 minutes). Instead, remove the old residue and reapply the liquid gasket.

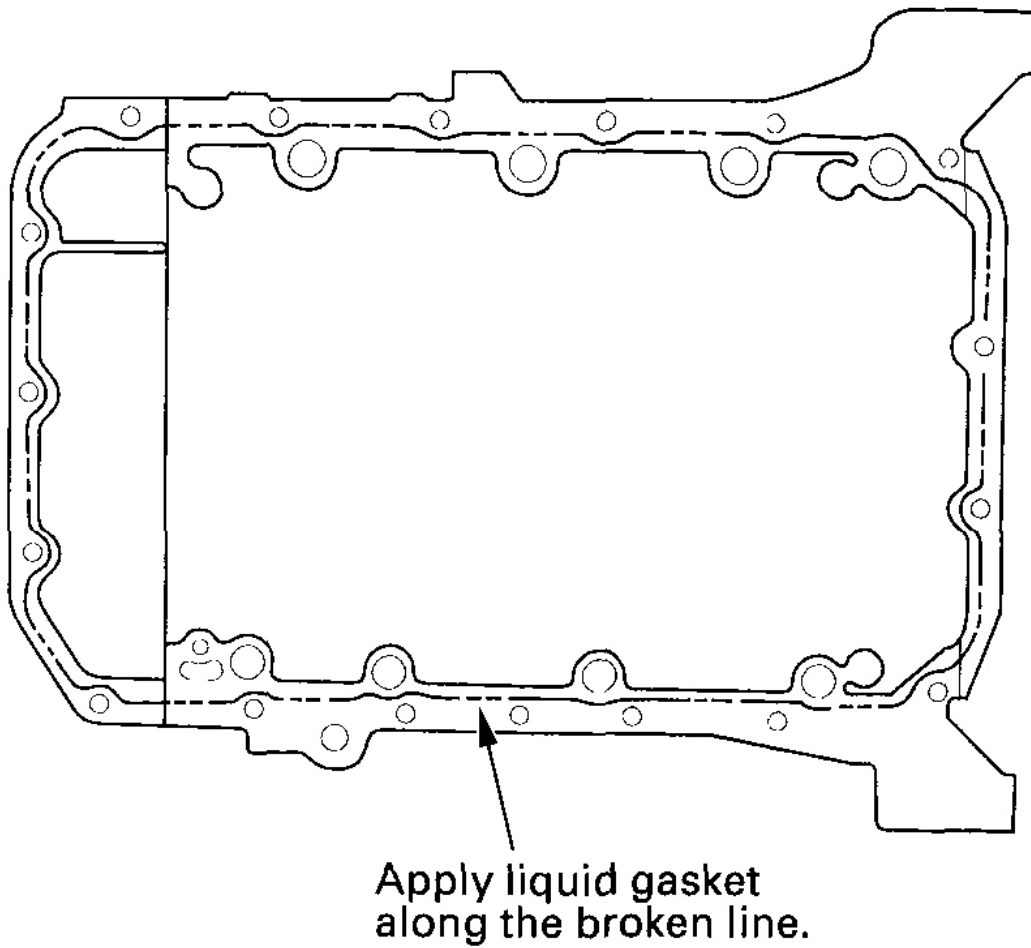


G03659038

Fig. 63: Applying Liquid Gasket

Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. Install the oil pan on the engine block.
5. Tighten the bolts in two or three steps. In the final step, tighten all bolts, in sequence, to 12 N.m (1.2 kgf.m, 8.7 lbf.ft).

NOTE: After assembly, wait at least 30 minutes before filling the engine with oil.

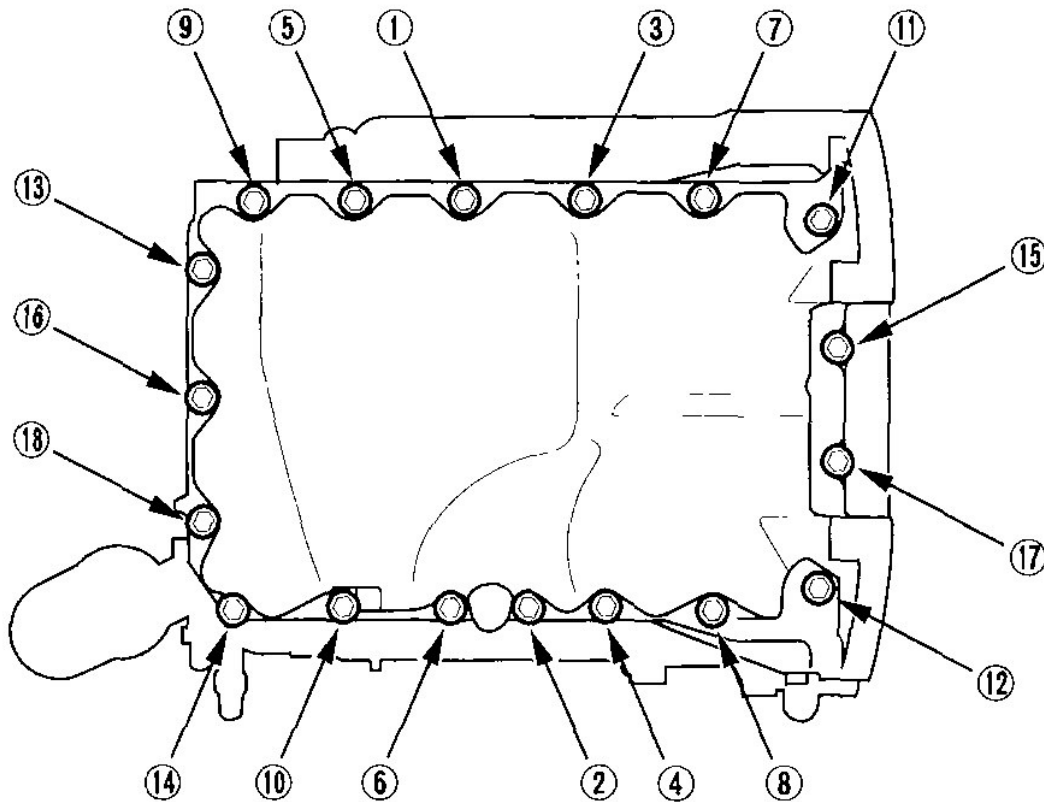


G03659039

Fig. 64: Tightening Bolts

Courtesy of AMERICAN HONDA MOTOR CO., INC.


6. Tighten the two bolts (A) securing the transmission, then install the torque converter cover (B).

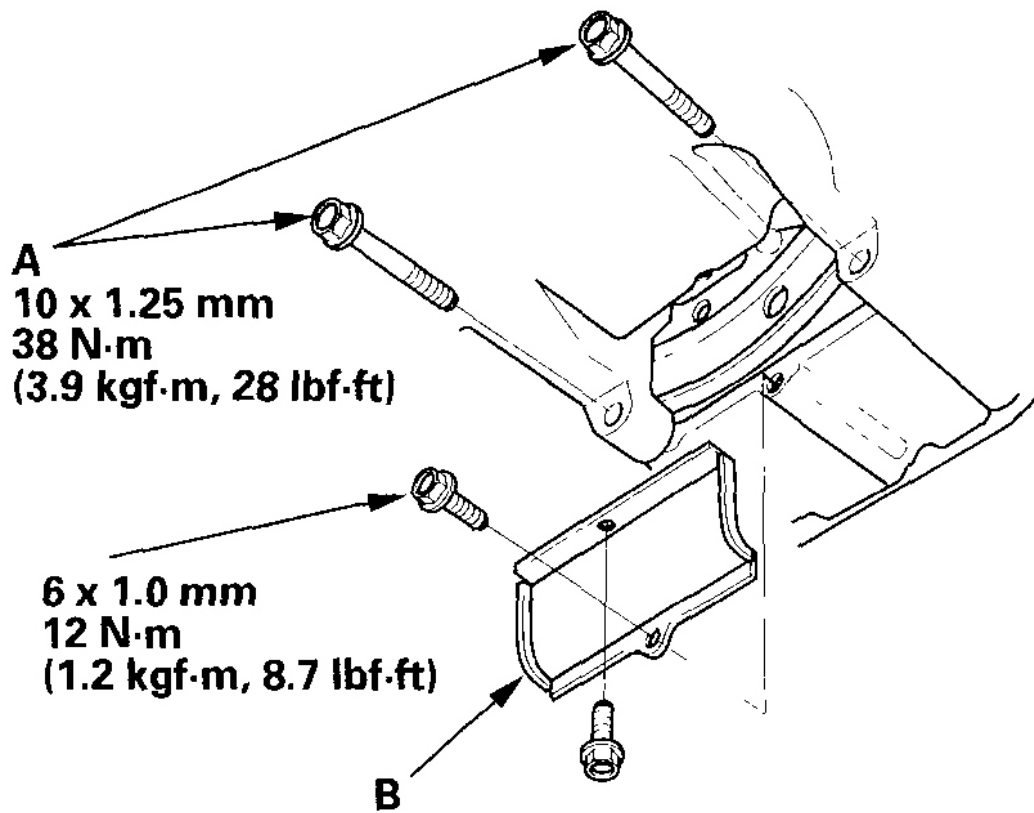

G03659040

Fig. 65: Installing Torque Converter Cover With Torque Specifications
Courtesy of AMERICAN HONDA MOTOR CO., INC.

7. If the engine is still in the vehicle, do the following steps.
8. Install exhaust pipe A using new gaskets and new self locking nuts (see step 28 on **ENGINE INSTALLATION**).
9. Install the engine under cover.

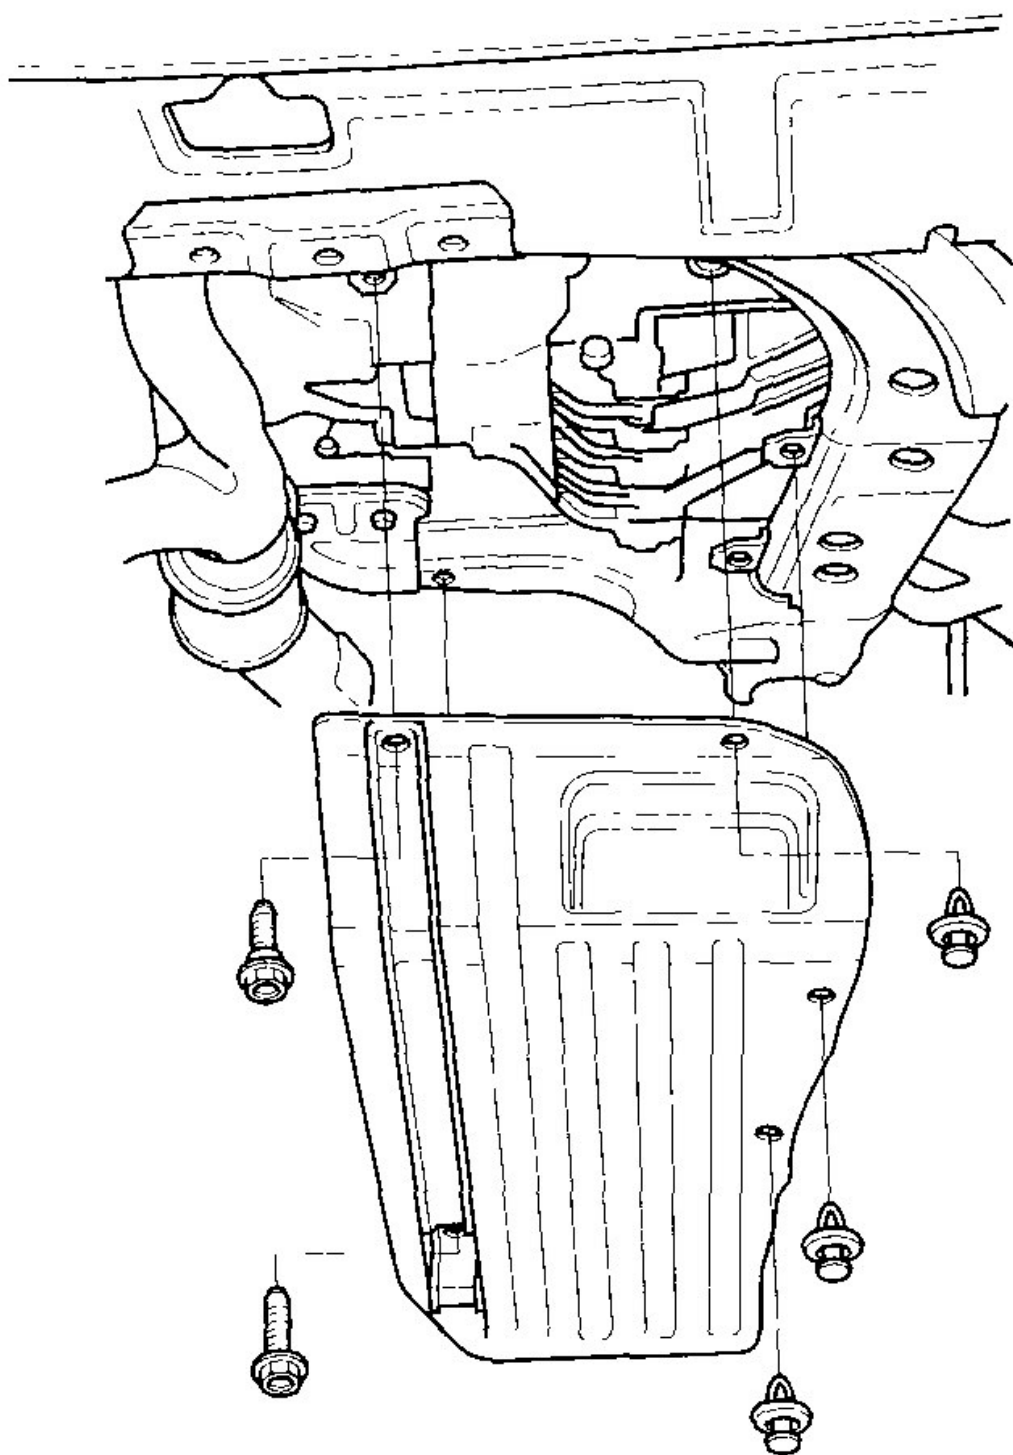

G03659041


Fig. 66: Installing Engine Under Cover**Courtesy of AMERICAN HONDA MOTOR CO., INC.**

10. Install the splash shield (see step 35 on **ENGINE INSTALLATION**).
11. Refill the engine with oil (see step 3 on **OIL PRESSURE TEST**).
12. Lower the vehicle on the hoist.

PULLEY END CRANKSHAFT OIL SEAL INSTALLATION - IN CAR**Special Tools Required**

Oil seal driver, 64 mm 070AD-RCAA100

1. Remove the crankshaft position (CKP) sensor A/B, timing belt, and timing belt drive pulley (see **TIMING BELT ADJUSTER REPLACEMENT**).
2. Remove the pulley end crankshaft oil seal.
3. Clean and dry the crankshaft oil seal housing.
4. Apply a light coat of multipurpose grease to the crankshaft and to the lip of the seal.
5. Using the seal driver, drive in the crankshaft oil seal until the driver bottoms against the oil pump. When the seal is in place, clean any excess grease off the crankshaft, and check that the oil seal lip is not distorted.

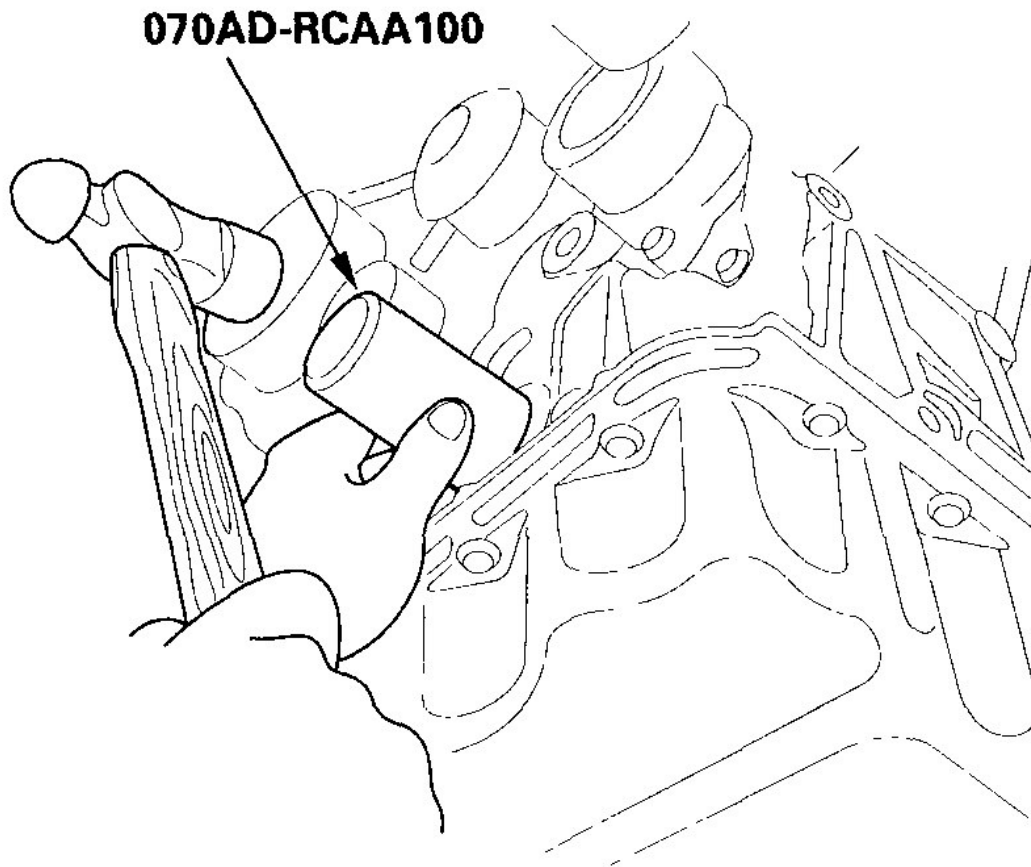

G03659042

Fig. 67: Identifying Drive In Crankshaft Oil Seal
Courtesy of AMERICAN HONDA MOTOR CO., INC.

6. Install the timing belt drive pulley, CKP sensor A/B, and timing belt (see **TIMING BELT ADJUSTER REPLACEMENT**).

TRANSMISSION END CRANKSHAFT OIL SEAL INSTALLATION - IN CAR

Special Tools Required

- Driver 07749-0010000
 - Driver attachment, 106 mm 070AD-RCAA200
1. M/T model: Remove the transmission (see **TRANSMISSION REMOVAL**), the clutch disc and pressure plate (see **CLUTCH REPLACEMENT**), and the flywheel (see **FLYWHEEL AND PILOT BEARING REPLACEMENT**).

2. A/T model: Remove the transmission (see **TRANSMISSION REMOVAL**) and drive plate (see **DRIVE PLATE REMOVAL AND INSTALLATION**).
3. Remove the transmission end crankshaft oil seal.
4. Clean and dry the crankshaft oil seal housing.
5. Apply a light coat of multipurpose grease to the crankshaft and to the lip of the seal.
6. Using the special tools, drive in the crankshaft oil seal until the driver attachment bottoms against the engine block end cover. Align the hole in the driver attachment with the pin on the crankshaft.

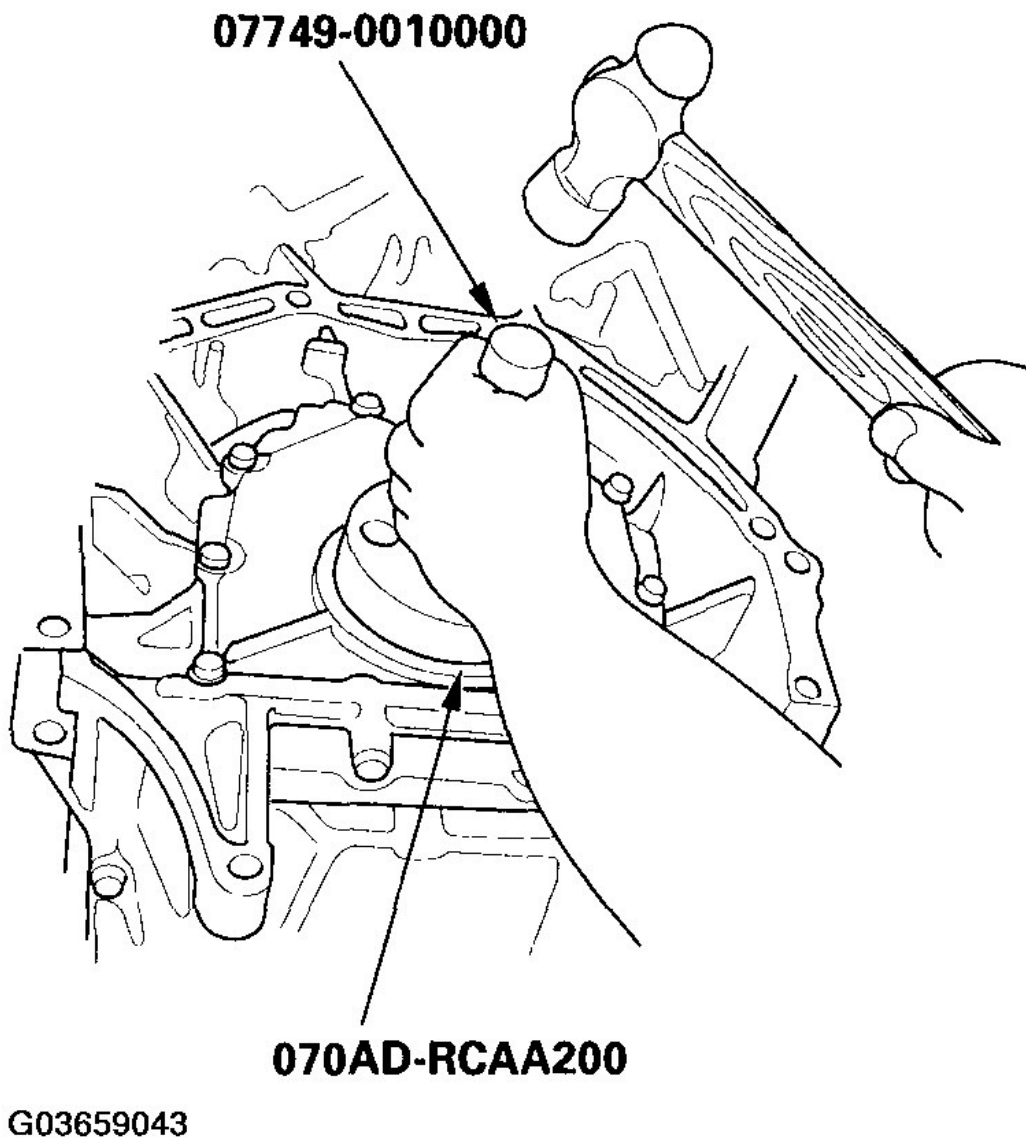



Fig. 68: Identifying Drive In Crankshaft Oil Seal Using Special Tools

Courtesy of AMERICAN HONDA MOTOR CO., INC.

7. Clean any excess grease off the crankshaft, and check that the oil seal lip is not distorted.
8. M/T model: Install the flywheel (see FLYWHEEL AND PILOT BEARING REPLACEMENT), the clutch disc and pressure plate (see CLUTCH DISC AND PRESSURE PLATE INSTALLATION), and the transmission (see TRANSMISSION INSTALLATION).
9. A/T model: Install the drive plate (see DRIVE PLATE REMOVAL AND INSTALLATION), and the transmission (see TRANSMISSION INSTALLATION).

DRAIN BOLT INSTALLATION

NOTE: When installing the drain bolt, always use a new washer.

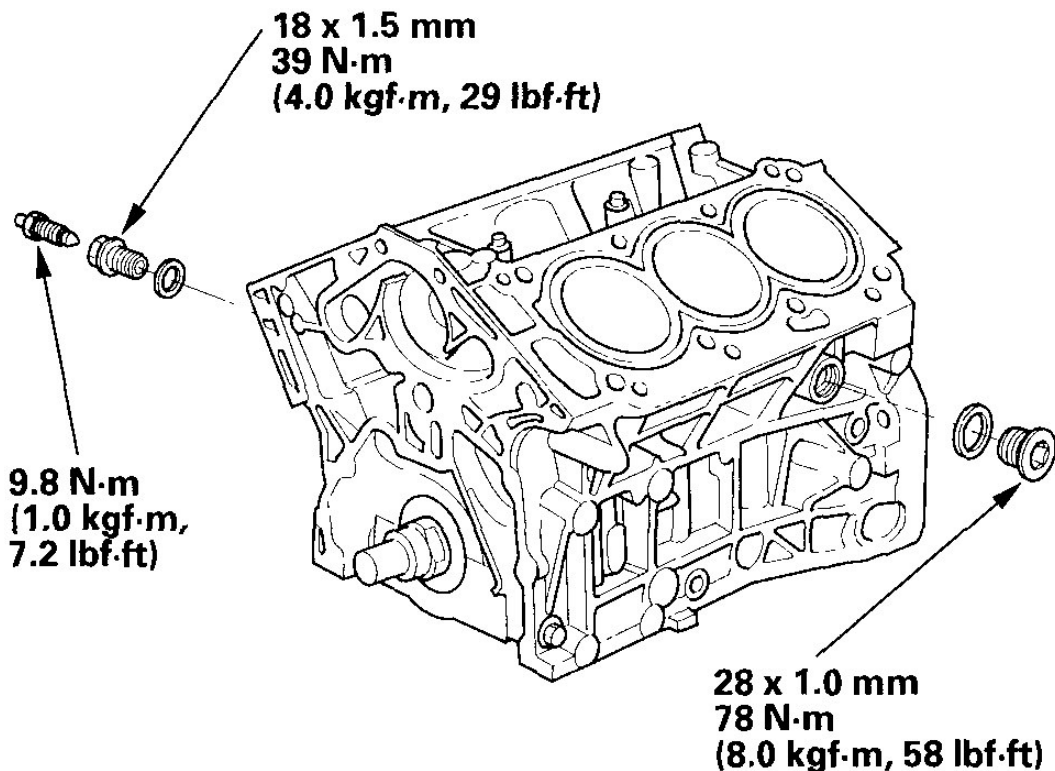

G03659044

Fig. 69: Installing Drain Bolt With Torque Specifications
Courtesy of AMERICAN HONDA MOTOR CO., INC.